

Sign Size

- IN14.1 610 mm x 508 mm (24" x 20")
- IN14.2 762 mm x 508 mm (30" x 20")
- IN14.3 914 mm x 508 mm (36" x 20")
- IN14.4 457 mm x 508 mm (18" x 20")
- IN14.5 305 mm x 508 mm (12" x 20")

Description

Wall Directional Sign

Sign Use & Application

Use this sign for directional information.

Message Configuration

(Refer to layout drawing for lettering sizes and dimensions)

Sign Components

Sliding Rail Back; Copy Panel; Top Accent Bar; End Caps

Graphic Process

Surface applied vinyl.

Colors

For background, type and accent bar colors, refer to VA Standard Color Chart

Typography

Helvetica Medium

Mounting

Double sided foam tape, silastic adhesive or screw.

Installation

On wall.

Recommendations

This sign is for use in corridors to direct patients and public through the building.



IN14.1

↑
Receptionist
Pediatrics
←
Surgery
Pharmacy
Cafeteria

IN14.2

↑
Receptionist
Pediatrics
Podiatry
←
Surgery
Pharmacy
Cafeteria

IN14.3


↑
Receptionist
Pediatrics
Podiatry
←
Surgery
Pharmacy
Cafeteria
Gift Shop
Elevators


IN14.4

↑
Receptionist
←
Surgery


IN14.5

↑
Receptionist
Pediatrics
Cafeteria

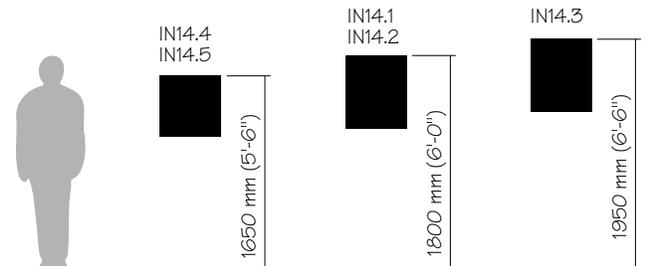


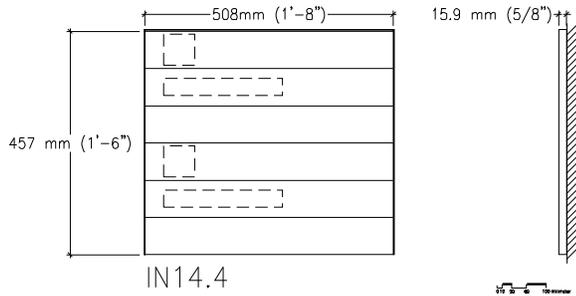

IN14.1-IN14.5
Directional sign.

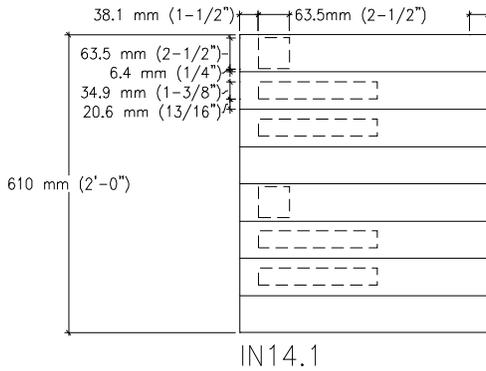

IN14.1

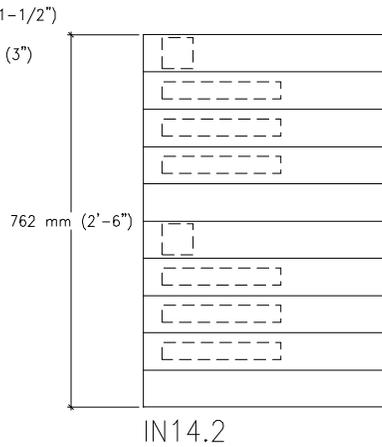

IN14.2


IN14.1
Sign Face Size:
610mm H x 508mm W
(24" H x 20"W)

IN14.2
Sign Face Size:
762mm H x 508mm W
(30" H x 20"W)


IN14.3
Sign Face Size:
914mm H x 508mm W
(36" H x 20"W)

IN14.4
Sign Face Size:
457mm H x 508mm W
(18" H x 20"W)


IN14.5
Sign Face Size:
305mm H x 508mm W
(12" H x 20"W)

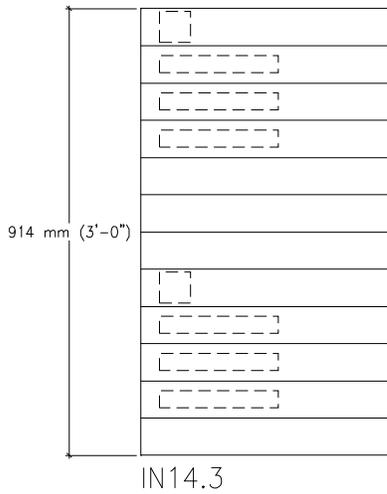

IN14.3

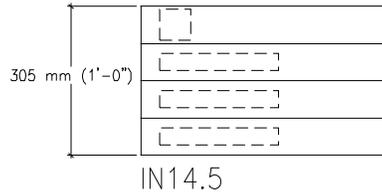

IN14.5

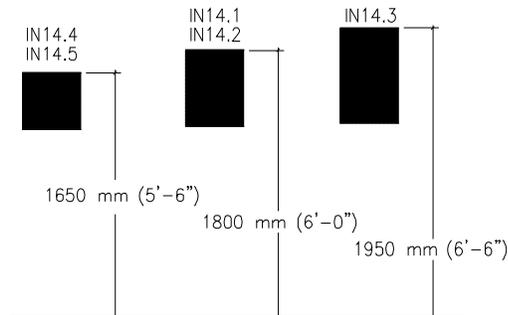

ARROW: Refer to standards for arrow positioning relative to text.

Sign Size

229 mm H x 508 mm W
(9" H x 20" W)

Description

Elevator Lobby Directional Sign

Sign Use & Application

Use this sign for directional information in a elevator lobby or stairwell landing. This sign is always a top sign component to a Type 14 sign.

Message Configuration

(Refer to layout drawing for lettering sizes and dimensions)

Sign Components

Sliding Rail Back; Copy Panel; Top Accent Bar; End Caps

Graphic Process

Surface applied vinyl.

Colors

For background, type and accent bar colors, refer to VA Standard Color Chart

Typography

Helvetica Medium

Mounting

Double sided foam tape, silastic adhesive or screw.

Installation

On wall.

Recommendations



Use in elevator lobbies, across from the elevators, to direct patients and public. Use at stair landings, across from the door to direct patients and public.




LAYOUT A



LAYOUT B

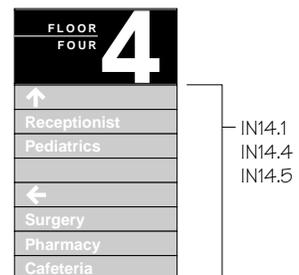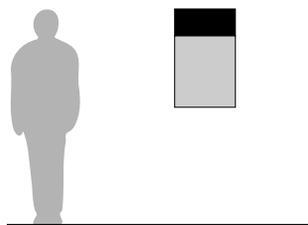


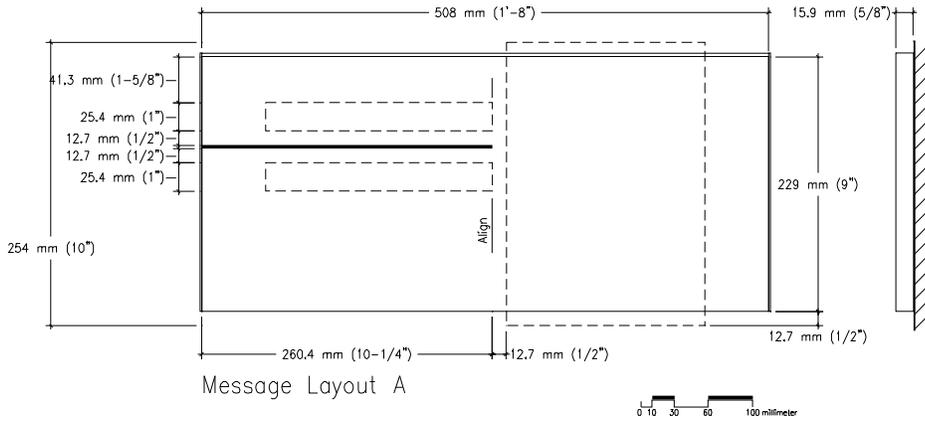


Message Layout A

IN14.6
Floor level designation
sign.

Sign Face Size:
229mm H x 508mm W
(9" H x 20" W)

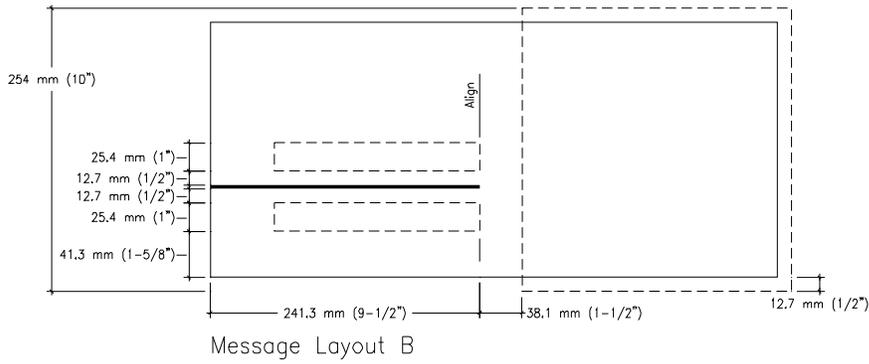

Message Layout B

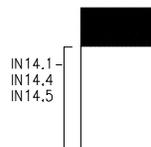

Sign Size

- IN15.1 152 mm x 1016 mm (6" x 40")
- IN15.2 305 mm x 1016 mm (12" x 40")
- IN15.3 457 mm x 1016 mm (18" x 40")
- IN15.4 305 mm x 1016 mm (12" x 40")

Description

Ceiling & Soffit Directional Sign

Sign Use & Application

Use this sign for directional information that needs to be communicated overhead.

Message Configuration

(Refer to layout drawing for lettering sizes and dimensions)

Sign Components

Sliding Rail Back; Copy Panel; Top Accent Bar; End Caps

Graphic Process

Surface applied vinyl.

Colors

For background, type and accent bar colors, refer to VA Standard Color Chart

Typography

Helvetica Medium Condensed
75 mm (3") cap height required for all text.

Mounting


Ceiling: Braided stainless steel wire or rod. Sign must not be attached directly to "T Grid" or lift out ceiling tile.
Soffit: Double sided foam tape, silastic adhesive or screw.

Installation

From the ceiling or on soffits above doors, alcoves and counters.

Recommendations

This sign is for use in corridors to direct patients and public through the building. Because of required letter height there is a limit to the length of messages and limited number of messages.

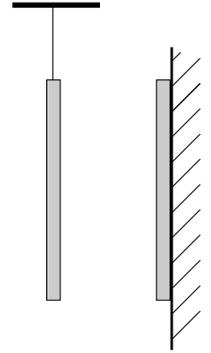


IN15.1




IN15.2




IN15.3

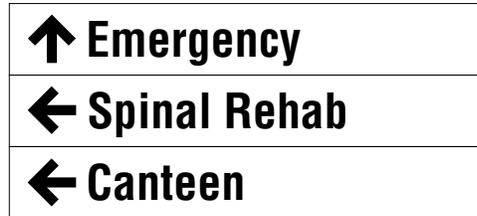


IN15.4

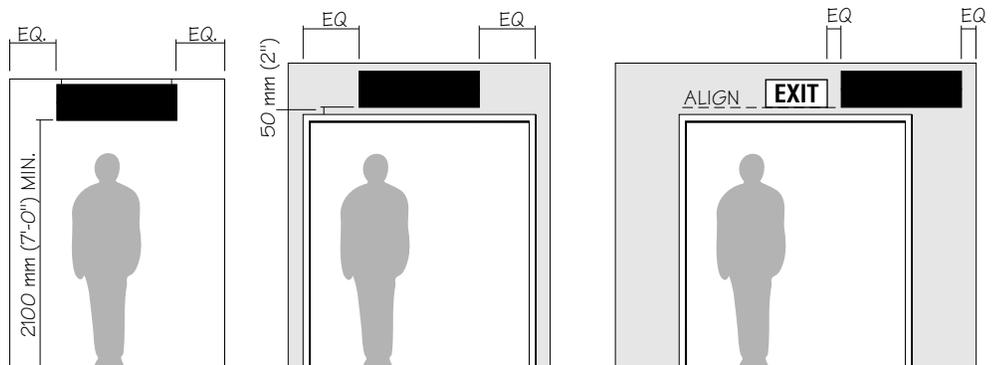

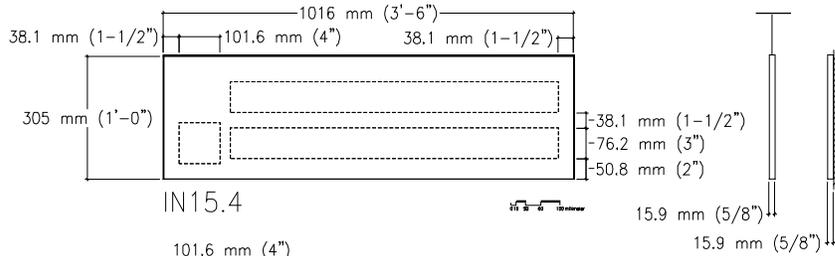


IN15.4

IN15.1-IN15.4
Ceiling mounted
directional sign.

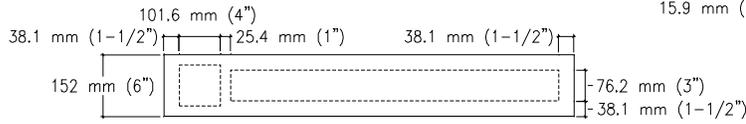


IN15.1

IN15.1
Sign Face Size:
152mm H x 2033mm W
(6" H x 40"W)

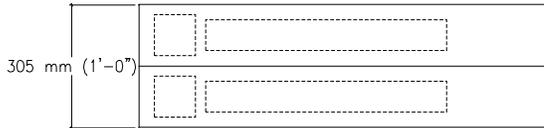

IN15.2


IN15.2
Sign Face Size:
305mm H x 2033mm W
(12" H x 40"W)

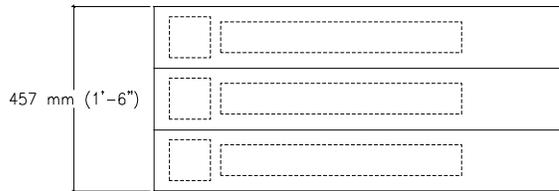

IN15.3

IN15.3
Sign Face Size:
457mm H x 2033mm W
(18" H x 40"W)

IN15.4
Sign Face Size:
305mm H x 2033mm W
(12" H x 40"W)

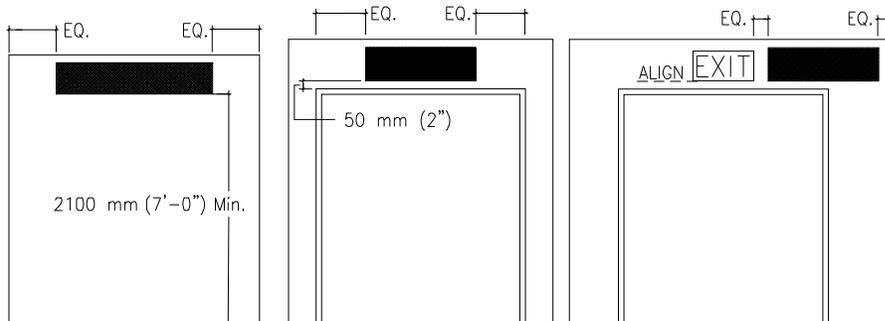

ARROW: Refer to
standards for arrow
positioning relative to
text.

Sign Size

- IN15.5 152 mm x 2033 mm
(6" x 80")
- IN15.6 305 mm x 2033 mm
(12" x 80")
- IN15.7 457 mm x 2033 mm
(18" x 80")
- IN15.8 305 mm x 2033 mm
(12" x 80")

Description

Ceiling Mounted Directional Sign

Sign Use & Application

Use this sign for directional information that needs to be communicated overhead.

Message Configuration

(Refer to layout drawing for lettering sizes and dimensions)

Sign Components

Sliding Rail Back; Copy Panel; Top Accent Bar; End Caps

Graphic Process

Surface applied vinyl.

Colors

For background, type and accent bar colors, refer to VA Standard Color Chart

Typography

Helvetica Medium Condensed
75 mm (3") cap height required for all text.

Mounting

Ceiling: Braided stainless steel wire or rod. Sign must not be attached directly to "T Grid" or lift out ceiling tile.


Soffit: Double sided foam tape, silastic adhesive or screw.

Installation

From the ceiling or on soffits above doors, alcoves and counters.

Recommendations


This sign is for use in corridors to direct patients and public through the building. Because of required letter height there is a limit to the length of messages and limited number of messages.

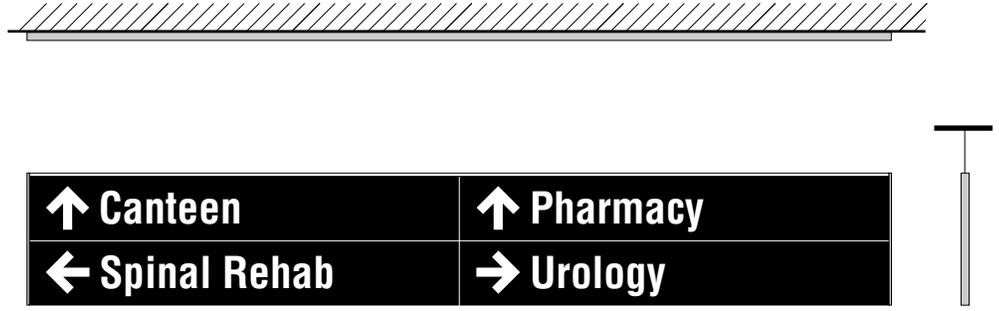


IN15.5






IN15.6




IN15.7

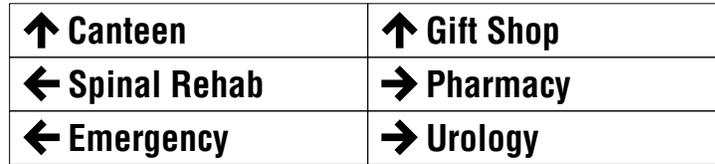


IN15.8

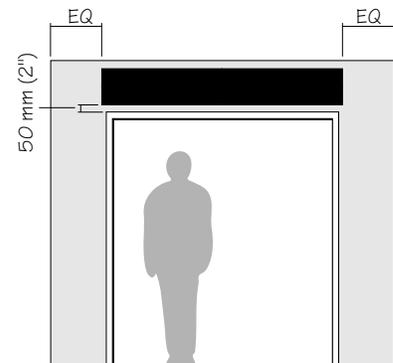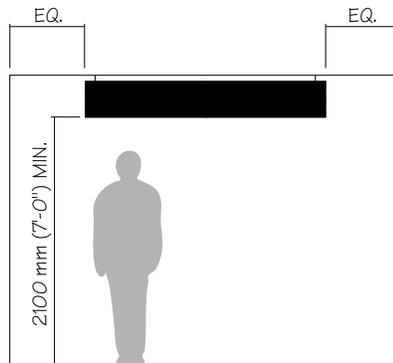


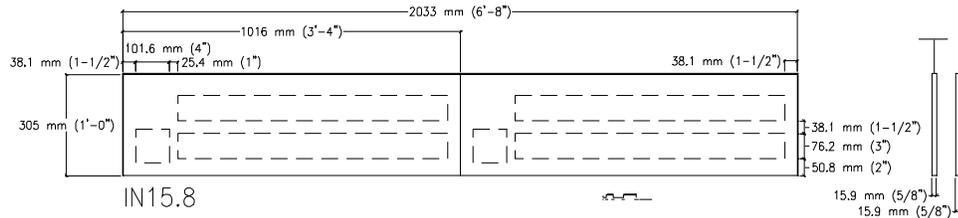


IN15.5-IN15.8
Ceiling mounted
directional sign.

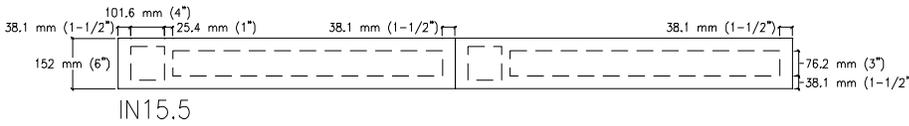

IN15.5
Sign Face Size:
152mm H x 2033mm W
(6" H x 80"W)

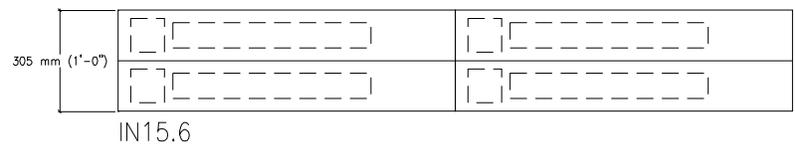


IN15.6
Sign Face Size:
305mm H x 2033mm W
(12" H x 80"W)

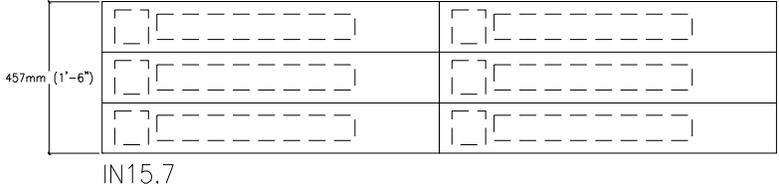

IN15.7
Sign Face Size:
457mm H x 2033mm W
(18" H x 80"W)

IN15.8
Sign Face Size:
305mm H x 2033mm W
(12" H x 80"W)

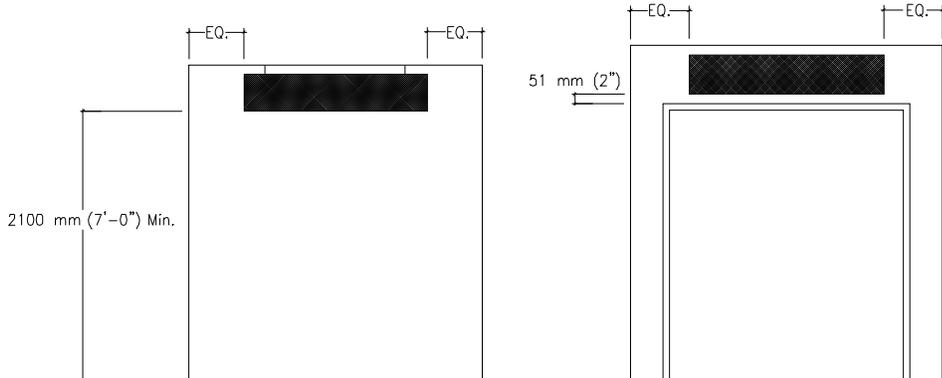

ARROW: Refer to
standards for arrow
positioning relative to
text.

Sign Size

- IN16.1 152 mm x 1016 mm (6" x 40")
- IN16.2 305 mm x 1016 mm (12" x 40")
- IN16.3 457 mm x 1016 mm (18" x 40")
- IN16.4 305 mm x 1016 mm (12" x 40")

Description

Ceiling & Soffit Identification Sign

Sign Use & Application

Use this sign for identifying a department overhead.

Message Configuration

(Refer to layout drawing for lettering sizes and dimensions)

Sign Components

Sliding Rail Back; Copy Panel; Top Accent Bar; End Caps

Graphic Process

Surface applied vinyl.

Colors

For background, type and accent bar colors, refer to VA Standard Color Chart

Typography

Helvetica Medium Condensed
75 mm (3") cap height required for all text.

Mounting


Ceiling: Braided stainless steel wire or rod. Sign must not be attached directly to "T Grid" or lift out ceiling tile.
Soffit: Double sided foam tape, silastic adhesive or screw.

Installation

From the ceiling or on soffits above doors, alcoves and counters.

Recommendations

This sign is for use throughout a building. Because of required letter height there is a limit to the length of messages and limited number of messages.

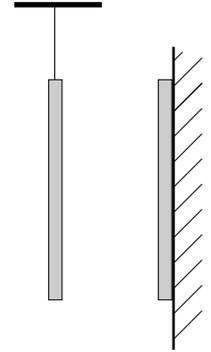

IN16.1




IN16.2




IN16.3




IN16.4

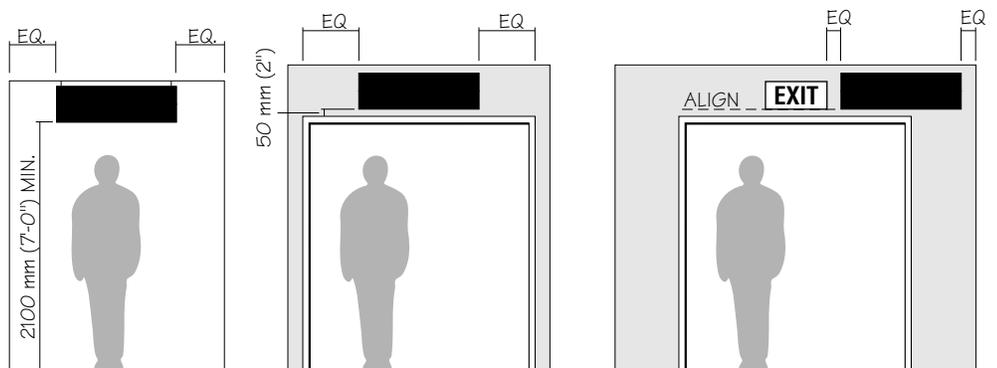

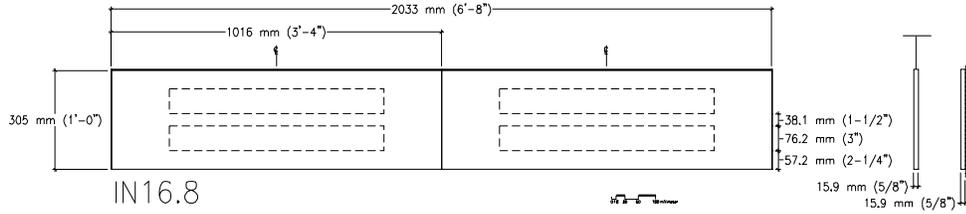


IN16.8

IN16.5-IN16.8
Ceiling mounted
directional sign.




IN16.5

IN16.5
Sign Face Size:
152mm H x 2033mm W
(6" H x 80"W)

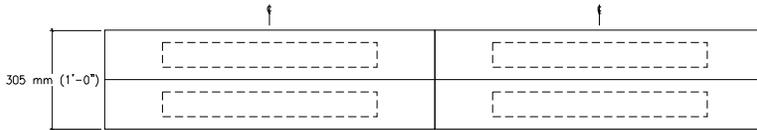

IN16.6


IN16.6
Sign Face Size:
305mm H x 2033mm W
(12" H x 80"W)

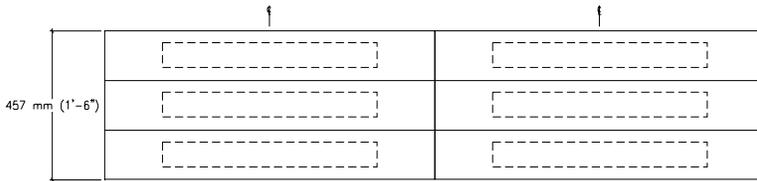

IN16.7

IN16.7
Sign Face Size:
457mm H x 2033mm W
(18" H x 80"W)

IN16.8
Sign Face Size:
305mm H x 2033mm W
(12" H x 80"W)

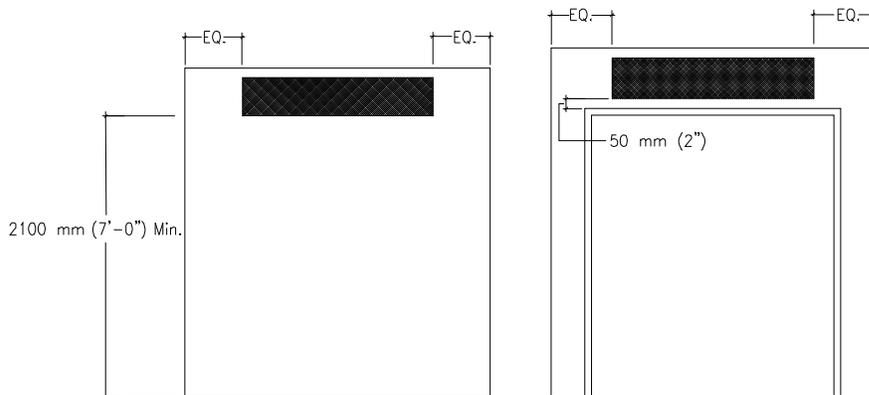

Sign Size

- IN16.5 152 mm x 2033 mm
(6" x 80")
- IN16.6 305 mm x 2033 mm
(12" x 80")
- IN16.7 457 mm x 2033 mm
(18" x 80")
- IN16.8 305 mm x 2033 mm
(12" x 80")

Description

Ceiling & Soffit Identification Sign

Sign Use & Application

Use this sign for identifying a department overhead.

Message Configuration

(Refer to layout drawing for lettering sizes and dimensions)

Sign Components

Sliding Rail Back; Copy Panel; Top Accent Bar; End Caps

Graphic Process

Surface applied vinyl.

Colors

For background, type and accent bar colors, refer to VA Standard Color Chart

Typography

Helvetica Medium Condensed
75 mm (3") cap height required for all text.

Mounting


Ceiling: Braided stainless steel wire or rod. Sign must not be attached directly to "T Grid" or lift out ceiling tile.
Soffit: Double sided foam tape, silastic adhesive or screw.

Installation

From the ceiling or on soffits above doors, alcoves and counters.

Recommendations

This sign is for use throughout a building. Because of required letter height there is a limit to the length of messages and limited number of messages.

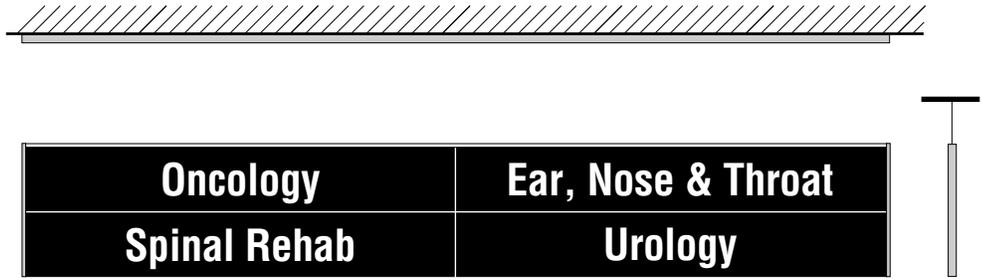

Oncology	Ear, Nose & Throat
Spinal Rehab	Urology

IN16.5

Oncology	Ear, Nose & Throat
----------	--------------------

IN16.6



Oncology	Ear, Nose & Throat
Spinal Rehab	Urology


IN16.7

Oncology	Ear, Nose & Throat
Spinal Rehab	Pediatrics
Canteen	Urology

IN16.8


Head & Neck Surgery	Outpatient Ophthalmology
---------------------	--------------------------

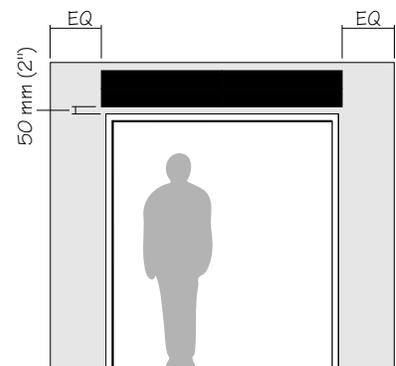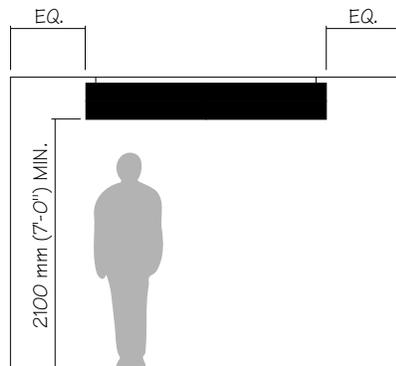

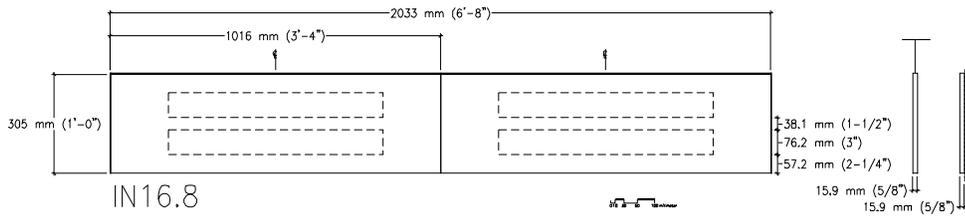


IN16.8

IN16.5-IN16.8
Ceiling mounted
directional sign.




IN16.5

IN16.5
Sign Face Size:
152mm H x 2033mm W
(6" H x 80"W)

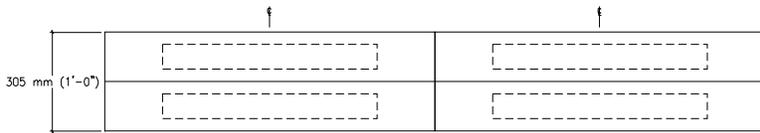

IN16.6


IN16.6
Sign Face Size:
305mm H x 2033mm W
(12" H x 80"W)

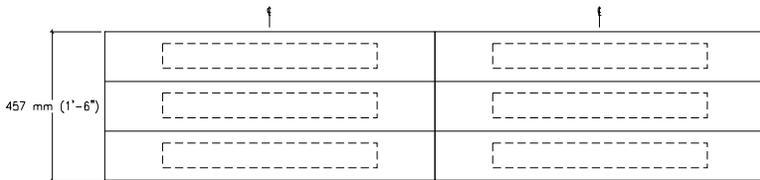

IN16.7

IN16.7
Sign Face Size:
457mm H x 2033mm W
(18" H x 80"W)

IN16.8
Sign Face Size:
305mm H x 2033mm W
(12" H x 80"W)

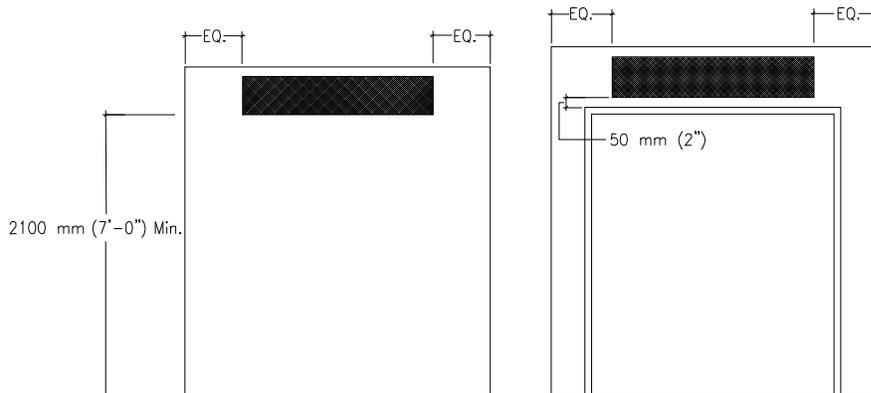

Sign Size

762 mm H x 610 mm W
(2'-6" H x 2'-0" W)

Description

Directory

Sign Use & Application

Small size main lobby directory. 48 directory strips.

Message Configuration

(Refer to layout drawing for lettering sizes and dimensions)

Header Layout A is for a basic directory header. Header Layout B is for a directory header to contain the name of the facility. Copy Strip A is for use with the main listings. Copy Strip B is for a secondary listing under a main listing or when the name is too long to fit on Strip A.

Sign Components

Sliding Rail Back; Copy Panel; Top Accent Bar; End Caps

Graphic Process

Surface applied vinyl.

Colors

For background, type and accent bar colors, refer to VA Standard Color Chart

Typography

Helvetica Medium

Mounting

Screw.

Installation

On wall.

Recommendations

This directory is for use in the main lobby of small buildings which would typically have no more than 30 to 40 listings. All listings in a directory should be done in alphabetical order. List in the directory only services or departments which have contact with patients and public. Distribute any blank directory strips throughout the directory to provide spacing between groups of listings.

Directory			
Title		Title	
Subtitle	1A74	Subtitle	2A42
Subtitle	1A76	Sub-Subtitle	
Subtitle	1A77	Sub-Subtitle	
Subtitle	1A78	Sub-Subtitle	
Sub-Subtitle		Subtitle	2A44
Sub-Subtitle		Subtitle	2A45
		Subtitle	2A46
Title		Subtitle	2A48
Subtitle	1B48	Subtitle	2A52
Subtitle	1B49		
Subtitle	1B52	Title	
		Subtitle	2B32
Title		Subtitle	2B34
Subtitle	1C32		
Subtitle	1C33	Title	
Subtitle	1C36	Subtitle	3A54
Subtitle	1C38	Sub-Subtitle	
		Sub-Subtitle	
		Subtitle	3A55
		Subtitle	3A56



Header (Layout A)



Header (Layout B)



Copy Strip A


Title	1A74
-------	------


Copy Strip B

Subtitle	1B48
----------	------

Copy Strip C


Sub-Subtitle	1C49
--------------	------

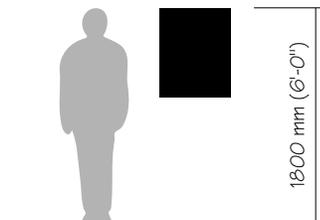

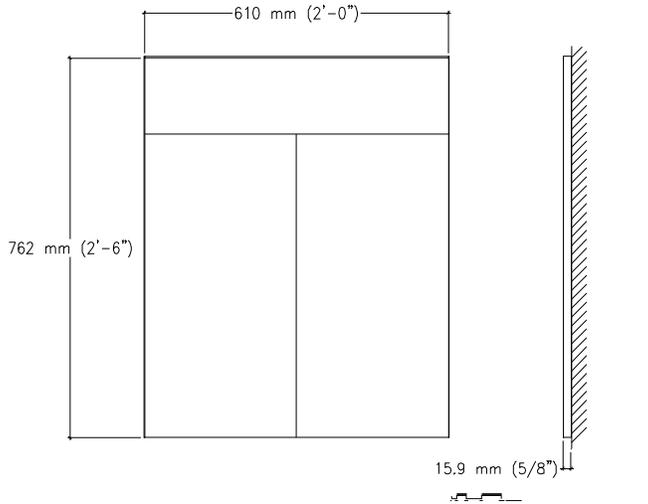


IN17.1
Directory


Sign Face Size:
762mmH x 610mmW
(2'6"H x 2'0"W)

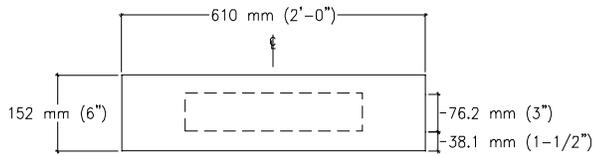

Header A

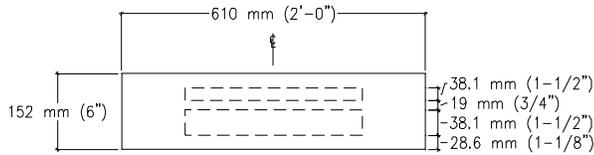

Header B




Copy Strip A



Copy Strip B



Copy Strip C

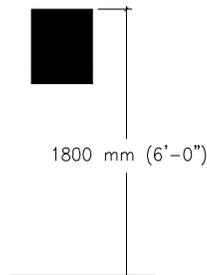

Sign Size

915 mm H x 915 mm W
(3'-0" H x 3'-0" W)

Description

Directory

Sign Use & Application

Main lobby directory. 90 directory strips.

Message Configuration

(Refer to layout drawing for lettering sizes and dimensions)

Header Layout A is for a basic directory header. Header Layout B is for a directory header to contain the name of the facility. Copy Strip A is for use with the main listings. Copy Strip B is for a secondary listing under a main listing or when the name is too long to fit on Strip A.

Sign Components

Sliding Rail Back; Copy Panel; Top Accent Bar; End Caps

Graphic Process

Surface applied vinyl.

Colors

For background, type and accent bar colors, refer to VA Standard Color Chart

Typography

Helvetica Medium

Mounting

Screw.


Installation

On wall.

Recommendations

This directory is for use in the main lobby of small buildings which would typically have no more than 60 to 80 listings. All listings in a directory should be done in alphabetical order. List in the directory only services or departments which have contact with patients and public. Distribute any blank directory strips throughout the directory to provide spacing between groups of listings.

Directory		
Title	Title	Title
Subtitle 1A74	Subtitle 2B37	Subtitle 2B37
Subtitle 1A75	Sub-Subtitle	Sub-Subtitle
Subtitle 1A77	Sub-Subtitle	Sub-Subtitle
Subtitle 1A78	Sub-Subtitle	Sub-Subtitle
Sub-Subtitle	Subtitle 2B40	Subtitle 2B40
Sub-Subtitle	Subtitle 2B41	Subtitle 2B41
	Subtitle 2B42	
	Subtitle 2B44	Title
Title 1B48	Subtitle 2B45	Subtitle 2C50
Subtitle 1B49		Subtitle 2C55
Subtitle 1B51	Title	
	Subtitle 2C50	Title
	Subtitle 2C55	Subtitle 2C60
Subtitle 1C34		Sub-Subtitle
Subtitle 1C37	Title	Sub-Subtitle
Subtitle 1C38	Subtitle 2C60	Sub-Subtitle
Subtitle 1C42	Sub-Subtitle	Subtitle 2C61
	Sub-Subtitle	Subtitle 2C62
	Sub-Subtitle	
	Subtitle 2C61	
	Subtitle 2C62	



Header (Layout A)



Header (Layout B)




Copy Strip A




Copy Strip B




Copy Strip C

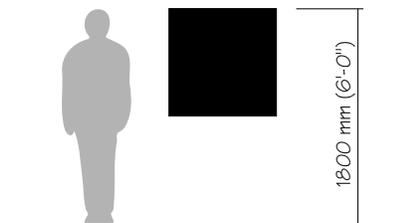

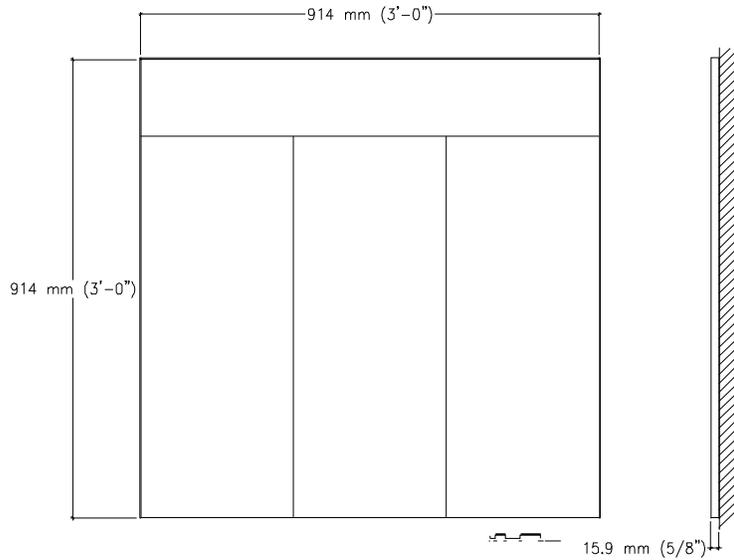


IN17.2
Directory


Sign Face Size:
762mmH x 914mmW
(2'-6"H x 3'-0"W)

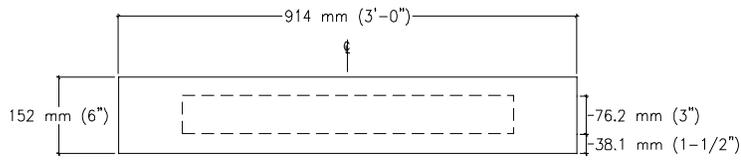

Header A

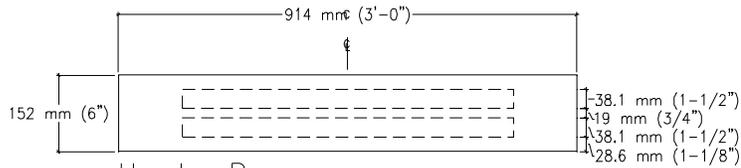

Header B




Copy Strip A



Copy Strip B



Copy Strip C

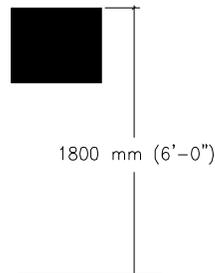

Sign Size

762 mm H x 1220 mm W
(2'-6" H x 4'-0" W)

Description

Directory

Sign Use & Application

Small size main lobby directory with a map of the building. 48 directory strips.

Message Configuration

(Refer to layout drawing for lettering sizes and dimensions)

Header Layout A is for a basic directory header. Header Layout B is for a directory header to contain the name of the facility. Copy Strip A is for use with the main listings. Copy Strip B is for a secondary listing under a main listing or when the name is too long to fit on Strip A.

Sign Components

Sliding Rail Back; Copy Panel; Top Accent Bar; End Caps

Graphic Process

Surface applied vinyl.

Colors

For background, type and accent bar colors, refer to VA Standard Color Chart

Typography

Helvetica Medium

Mounting

Screw.


Installation

On wall.

Recommendations

This directory is for use in the main lobby of small buildings which would typically have no more than 30 to 40 listings. All listings in a directory should be done in alphabetical order. List in the directory only services or departments which have contact with patients and public. Distribute any blank directory strips throughout the directory to provide spacing between groups of listings.

Maps should be simple and show the corridor system, major departments and locations of elevators. If a building has multiple floors, then all floors should be shown. Orientate floor plans to represent the building in the same direction as the map is being viewed.

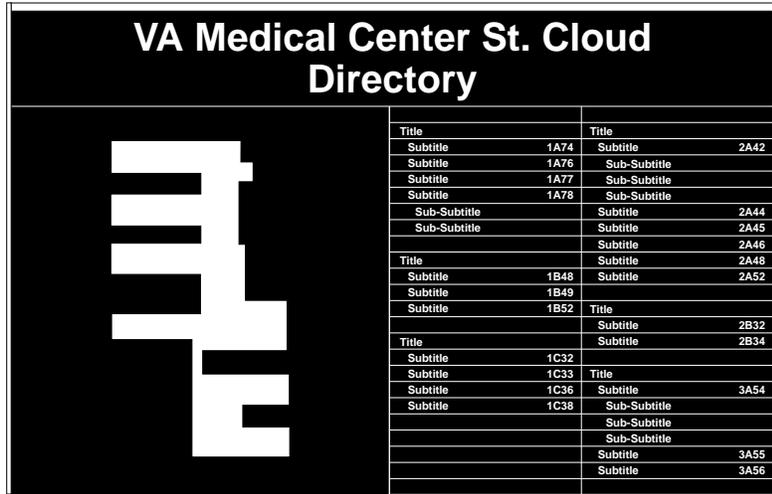


Header (Layout A)



Header (Layout B)



Map




Copy Strip A




Copy Strip B




Copy Strip C

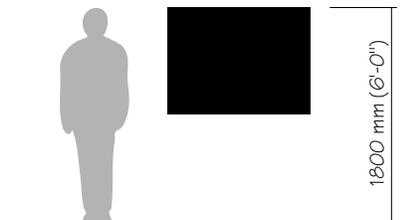

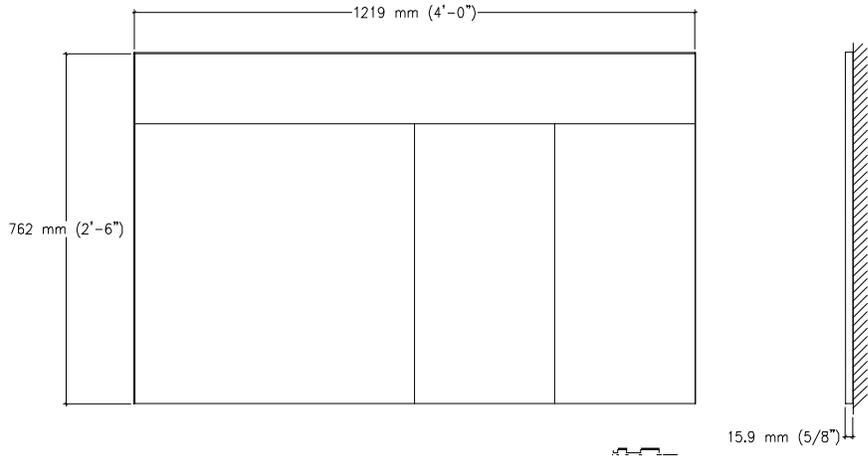


IN17.3
Directory



Sign Face Size:
762mmH x 1219mmW
(2'-6"H x 4'-0"W)

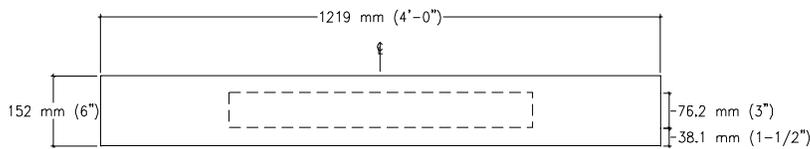

Header A

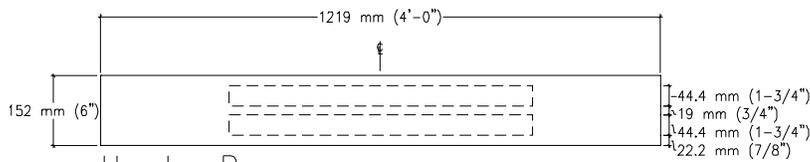

Header B

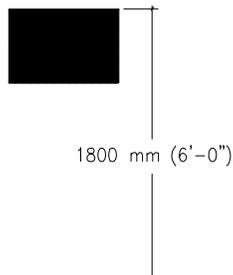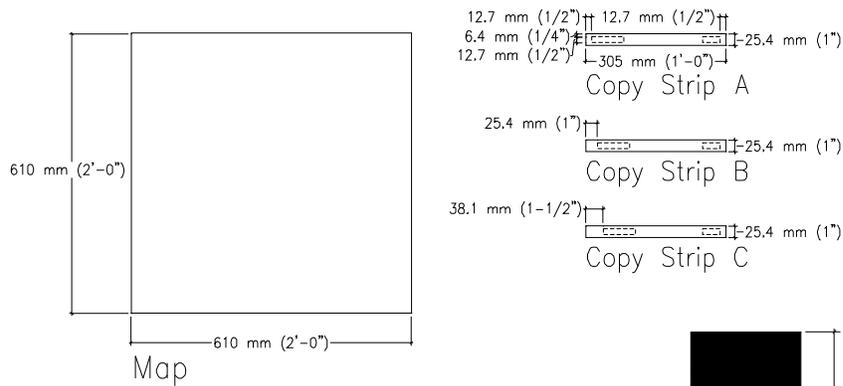

Sign Size

915 mm H x 1525 mm W
(3'-0" H x 5'-0" W)

Description

Directory

Sign Use & Application

Main lobby directory with a map of the building. 90 directory strips.

Message Configuration

(Refer to layout drawing for lettering sizes and dimensions)

Header Layout A is for a basic directory header. Header Layout B is for a directory header to contain the name of the facility. Copy Strip A is for use with the main listings. Copy Strip B is for a secondary listing under a main listing or when the name is too long to fit on Strip A.

Sign Components

Sliding Rail Back; Copy Panel; Top Accent Bar; End Caps

Graphic Process

Surface applied vinyl.

Colors

For background, type and accent bar colors, refer to VA Standard Color Chart

Typography

Helvetica Medium

Mounting

Screw.


Installation

On wall.

Recommendations

This directory is for use in the main lobby of small buildings which would typically have no more than 60 to 80 listings. All listings in a directory should be done in alphabetical order. List in the directory only services or departments which have contact with patients and public. Distribute any blank directory strips throughout the directory to provide spacing between groups of listings.

Maps should be simple and show the corridor system, major departments and locations of elevators. If a building has multiple floors, then all floors should be shown. Orientate floor plans to represent the building in the same direction as the map is being viewed.

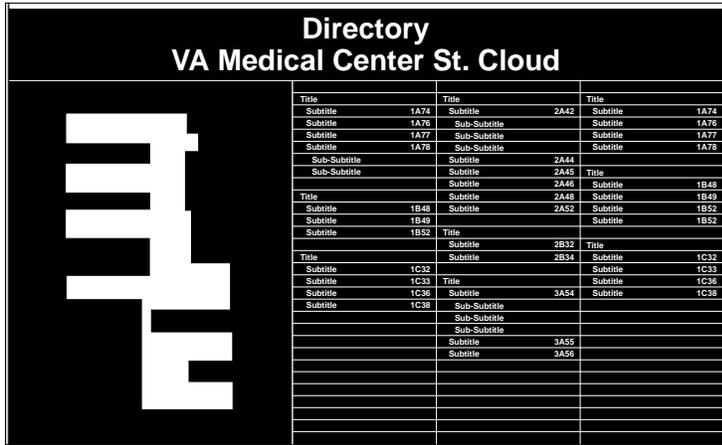


Header (Layout A)



Header (Layout B)



Map




Copy Strip A








Copy Strip B



Copy Strip C

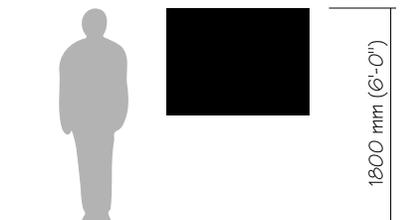

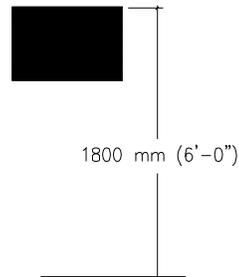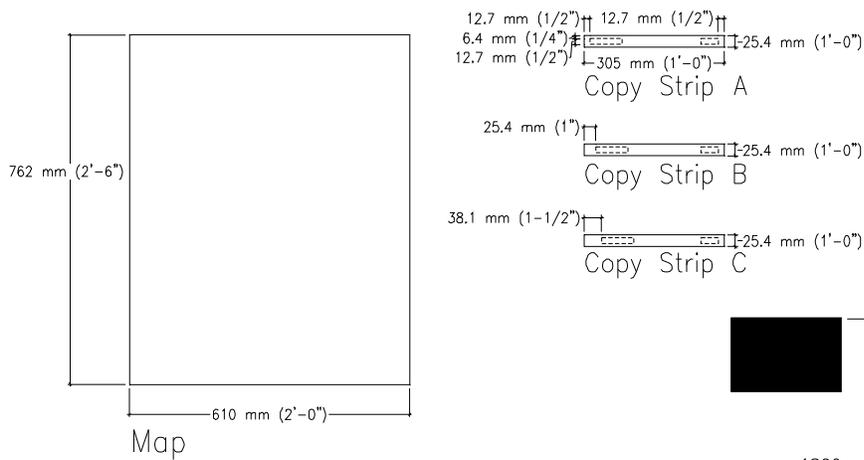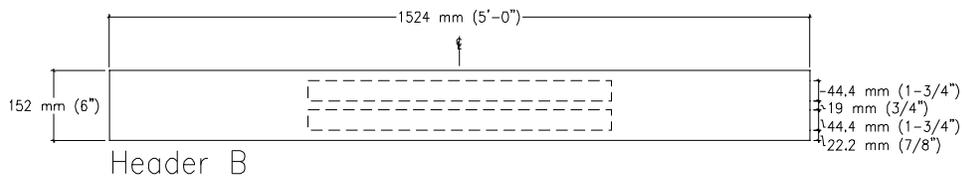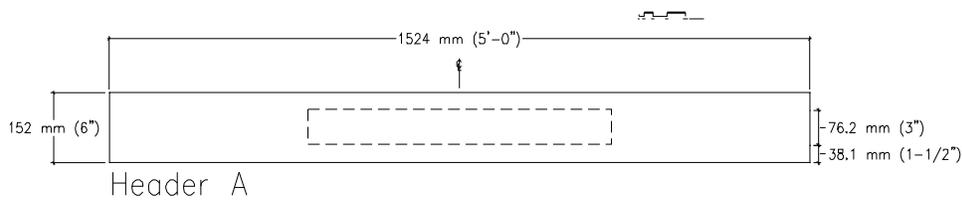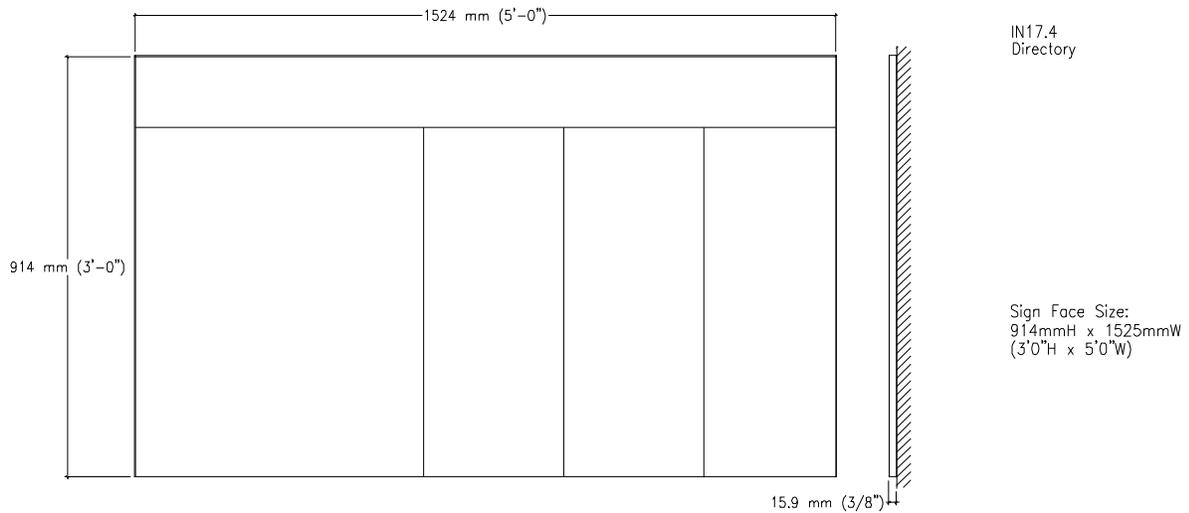

Sign Size

762 mm H x 305 mm W
(2'-6" H x 12" W)

Description

Floor Directory

Sign Use & Application

Small size elevator lobby directory.
24 directory strips.

Message Configuration

(Refer to layout drawing for lettering sizes and dimensions)

Header Layout A is for a single digit floor. Header Layout B is for a double digit floor. Copy Strip A is for use with the main listings. Copy Strip B is for a secondary listing under a main listing or when the name is too long to fit on Strip A.

Sign Components

Sliding Rail Back; Copy Panel; Top Accent Bar; End Caps

Graphic Process

Surface applied vinyl.

Colors

For background, type and accent bar colors, refer to VA Standard Color Chart

Typography

Helvetica Medium

Mounting



Screw.

Installation

On wall adjacent to elevator.

Recommendations

This directory is for use in the elevator lobbies of small buildings which would typically have no more than 20 listings. All listings in a directory should be done in alphabetical order. List in the directory only services or departments which have contact with patients and public. Distribute any blank directory strips throughout the directory to provide spacing between groups of listings.

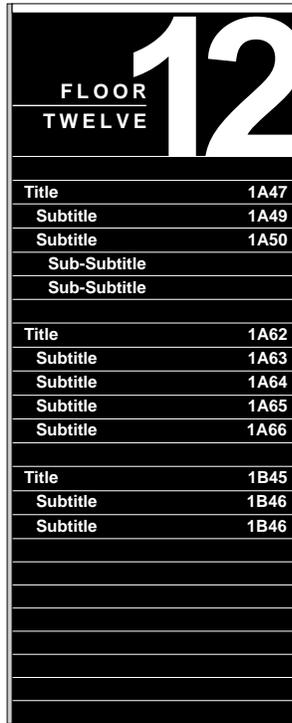

Header (Layout A)



Header (Layout B)



Directory Strip A


Title	1A74
-------	------


Directory Strip C

Sub-Subtitle	1C49
--------------	------

Directory Strip B







Subtitle	1B48
----------	------

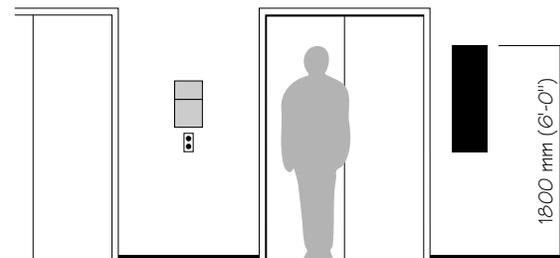

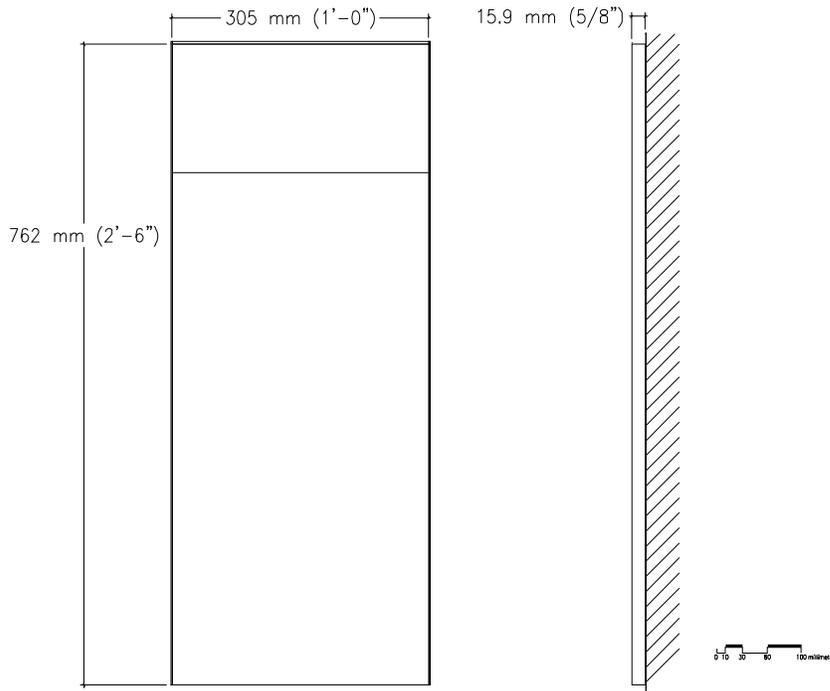

IN17.5
Small floor directory.

Sign Face Size:
762mm H x 305mm W
(30" H x 12" W)

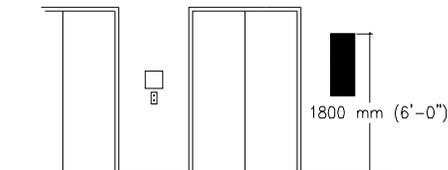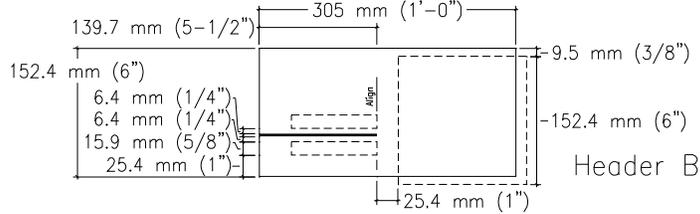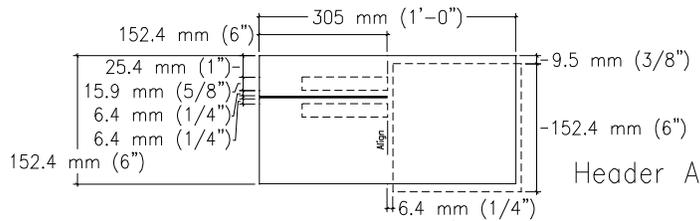

Sign Size

762 mm H x 610 mm W
(2'-6" H x 2'-0" W)

Description

Floor Directory

Sign Use & Application

Elevator lobby directory. 48 directory strips.

Message Configuration

(Refer to layout drawing for lettering sizes and dimensions)

Header Layout A is for a single digit floor. Header Layout B is for a double digit floor. Copy Strip A is for use with the main listings. Copy Strip B is for a secondary listing under a main listing or when the name is too long to fit on Strip A.

Sign Components

Sliding Rail Back; Copy Panel; Top Accent Bar; End Caps

Graphic Process

Surface applied vinyl.

Colors

For background, type and accent bar colors, refer to VA Standard Color Chart

Typography

Helvetica Medium

Mounting

Screw.


Installation

On wall adjacent to elevator.


Recommendations

This directory is for use in the elevator lobbies of small buildings which would typically have no more than 40 listings. All listings in a directory should be done in alphabetical order. List in the directory only services or departments which have contact with patients and public. Distribute any blank directory strips throughout the directory to provide spacing between groups of listings.


		FLOOR TWELVE		12
Title	1A47	Title	1A47	
Subtitle	1A49	Subtitle	1A49	
Subtitle	1A50	Subtitle	1A50	
Sub-Subtitle		Sub-Subtitle		
Sub-Subtitle		Sub-Subtitle		
Title	1A62	Title	1A62	
Subtitle	1A63	Subtitle	2A62	
Subtitle	1A64	Subtitle	2A63	
Subtitle	1A65	Subtitle	2A64	
Subtitle	1A66	Subtitle	2A65	
Subtitle	1A63	Subtitle	2A66	
Subtitle	1A64	Subtitle	2A66	
Subtitle	1A65	Title	2B45	
		Subtitle	2B46	
Title	1A62	Subtitle	2B46	
Subtitle	1A63			
Subtitle	1A64			
Subtitle	1A65			
Subtitle	1A66			



Header (Layout A)

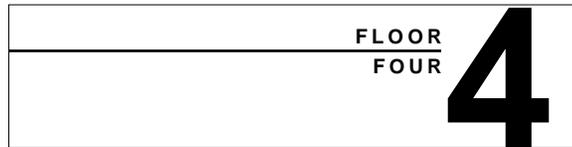

Header (Layout B)

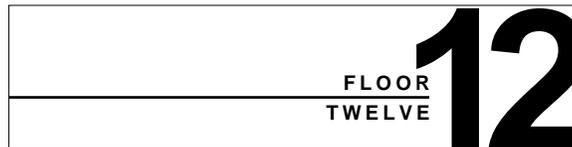

Directory Strip A


Title	1A74
-------	------


Directory Strip C

Sub-Subtitle	1C49
--------------	------

Directory Strip B





Subtitle	1B48
----------	------

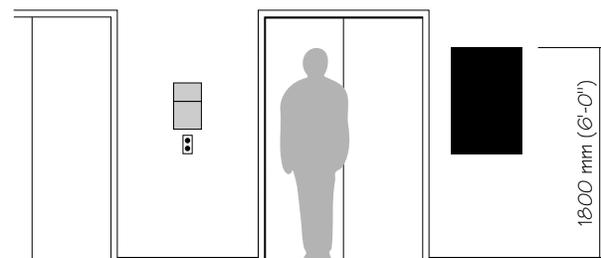

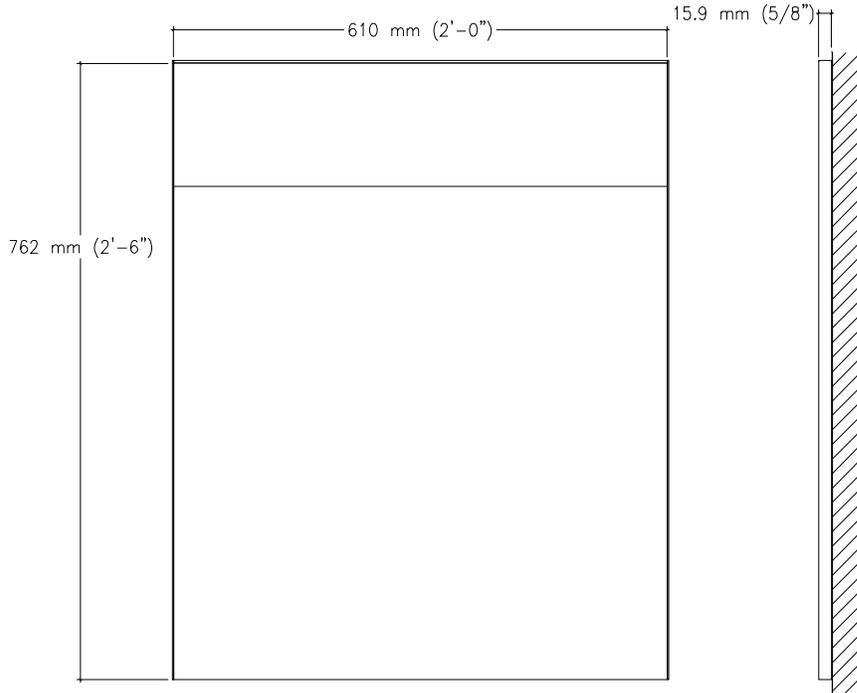

IN17.6
Floor directory.

Sign Face Size:
762mm H x 610mm W
(30" H x 24" W)

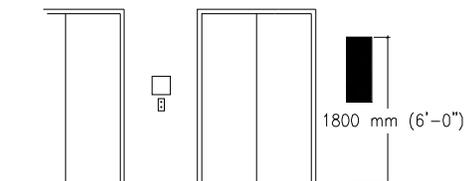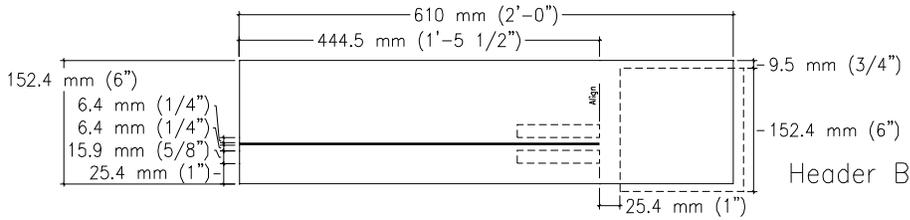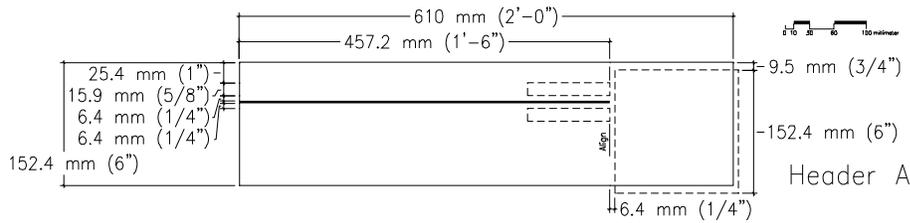

Sign Size

As Noted

Description

Building entry door graphics

Sign Use & Application

This sign is for use at the entry doors to buildings that are used by patients and public

Message Configuration

(Refer to layout drawing for lettering sizes and dimensions)

Graphic Process

Surface applied vinyl.

Colors

White, T1 for all lettering and graphics.
Handicapped symbol in blue, T8.

Typography

Helvetica Medium

Mounting

On door or side light.

Installation

Front reading surface of glass.



Department of Veterans Affairs





Medical Center
Menlo Park


Building 16 Main Entrance

These doors are locked from 6 p.m. to 6 a.m.
When doors are locked, use Ambulance Entrance




Smoking is only permitted outside in designated areas.

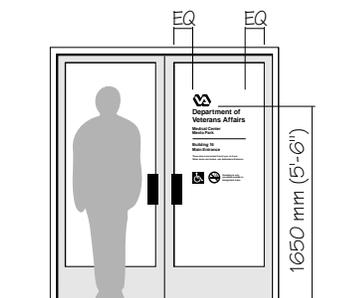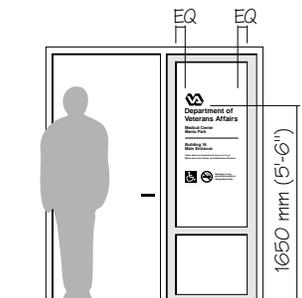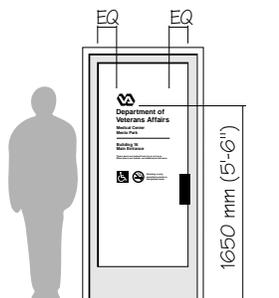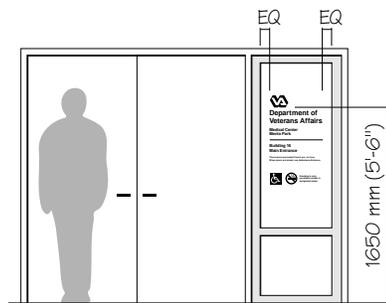

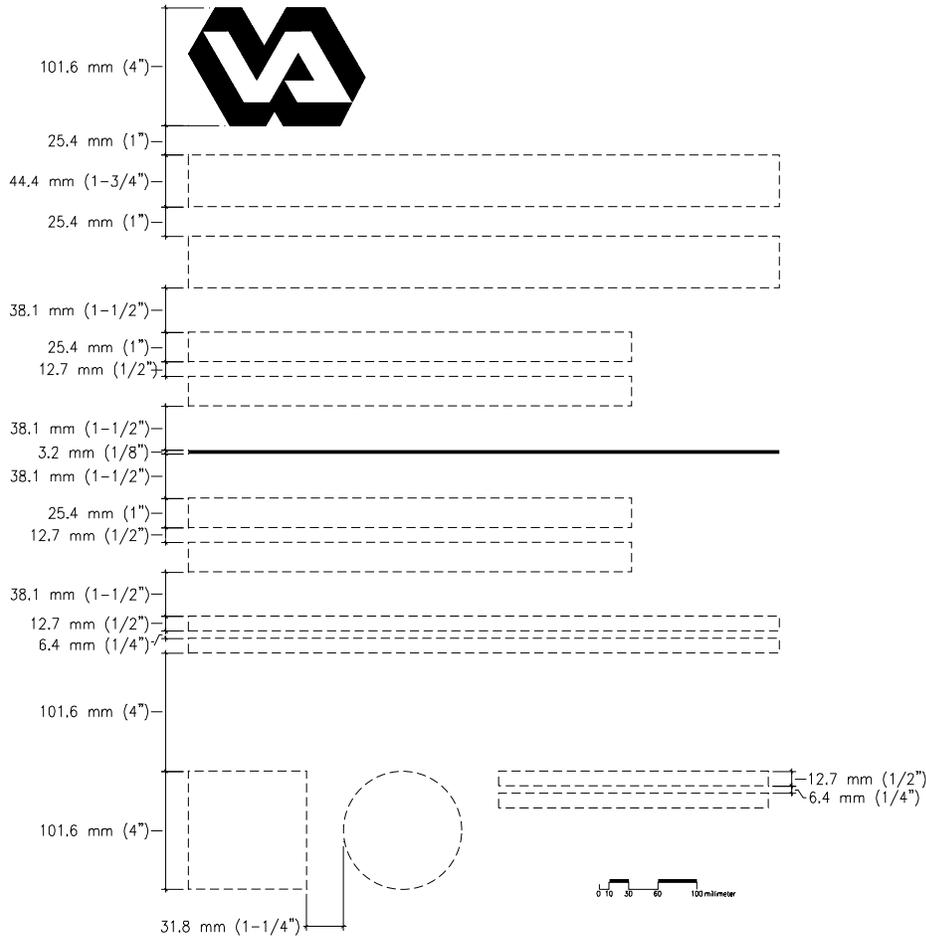

IN18
Building entry door
graphics.

Sign Face Size:
As noted.

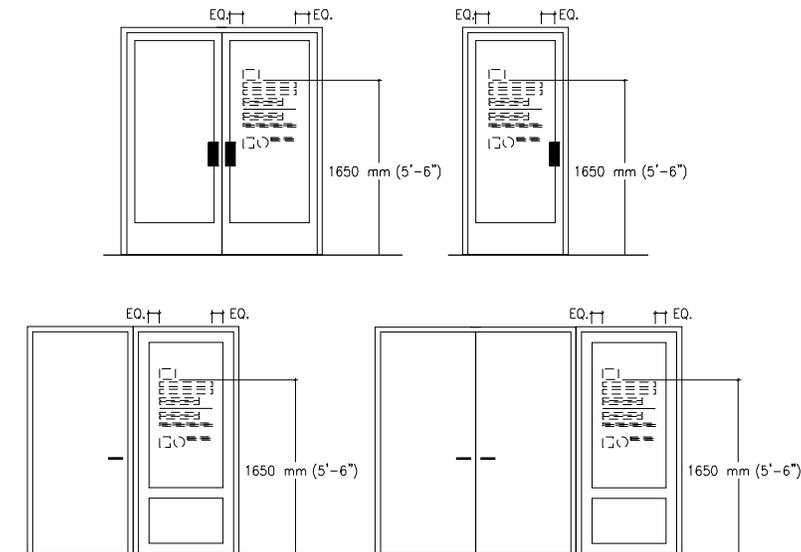

Sign Size

- IN19.1 76 mm H x 10 mm D
(3" H x 3/8" D)
- IN19.2 102 mm H x 10 mm D
(4" H x 3/8" D)
- IN19.3 152 mm H x 10 mm D
(6" H x 3/8" D)

Description

Dimension Letters

Sign Use & Application

Identification of information counters, major departments or services.

Message Configuration

(Refer to layout drawing for lettering sizes and dimensions)



Sign Components

Painted acrylic.

Graphic Process

Cut out dimensional letters.

Colors

Refer to VA Standard Color Chart. Color should have a high contrast with the wall surface.

Typography

Helvetica Medium

Mounting


Silastic adhesive or studs and silastic adhesive.


Installation

On walls or soffits.


Recommendations

Dimensional letters provide high impact, high visibility and formal identification. Do not use for departments or services that have frequent relocation's or name changes. Suggested typical uses would be for Information, Check In, Canteen, Pharmacy, etc.

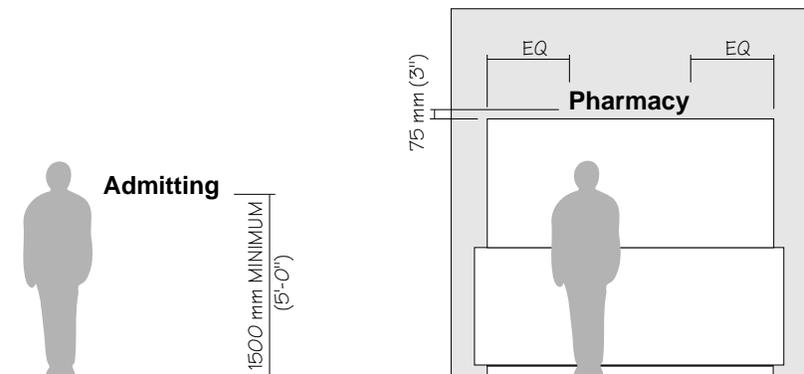

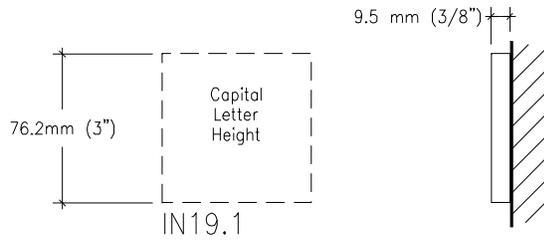


IN19.1–IN19.3
Dimensional letters.


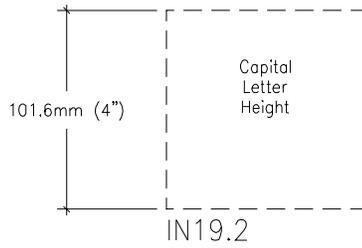


IN19.1
Sign Face Size:
76mm H
(3" H)

IN19.2
Sign Face Size:
102mm H
(4" H)

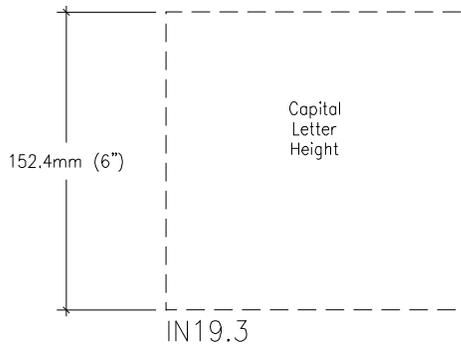

IN19.3
Sign Face Size:
152mm H
(6" H)

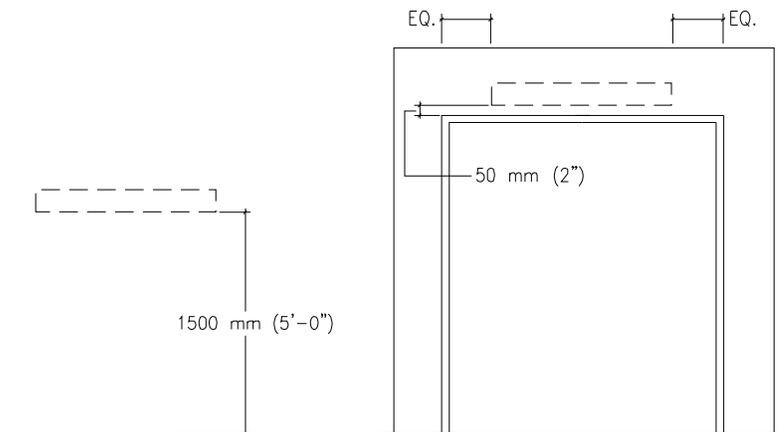

Sign Size

As Noted

Description

VA Seal

Sign Use & Application



Interior reception lobby or office.


Mounting

Double sided foam tape, silastic adhesive or screw.

Installation


Mount on wall where visible upon entry to room or lobby.

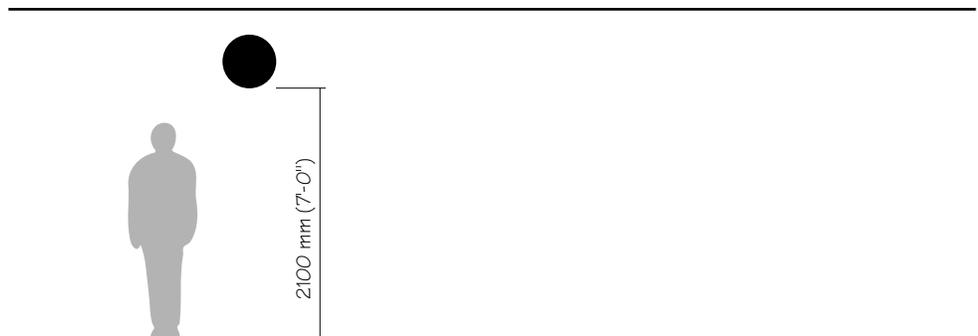

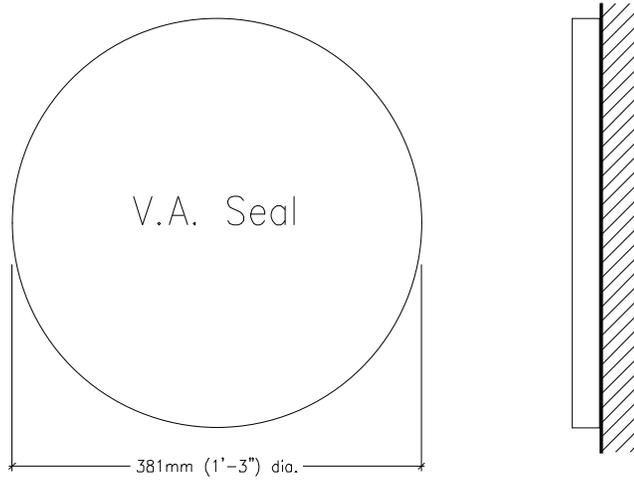

IN20.1
V.A. Seal

Sign Face Size:
381mm dia.
(1'3" dia.)

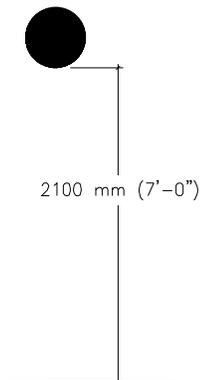

Sign Size

914 mm H x 610 mm W
(36" H x 24" W)

Description

Dedication Plaque

Sign Use & Application

For use in dedicating a new building or significant structure.

Message Configuration

(Refer to layout drawing for lettering sizes and dimensions)

Sign Components

Cast bronze.

Typography



Helvetica Medium


Mounting

On wall at building entrance or in main lobby.

Installation



Screw and stud.

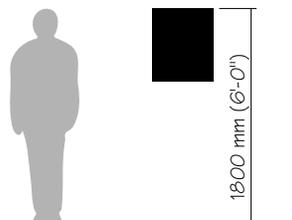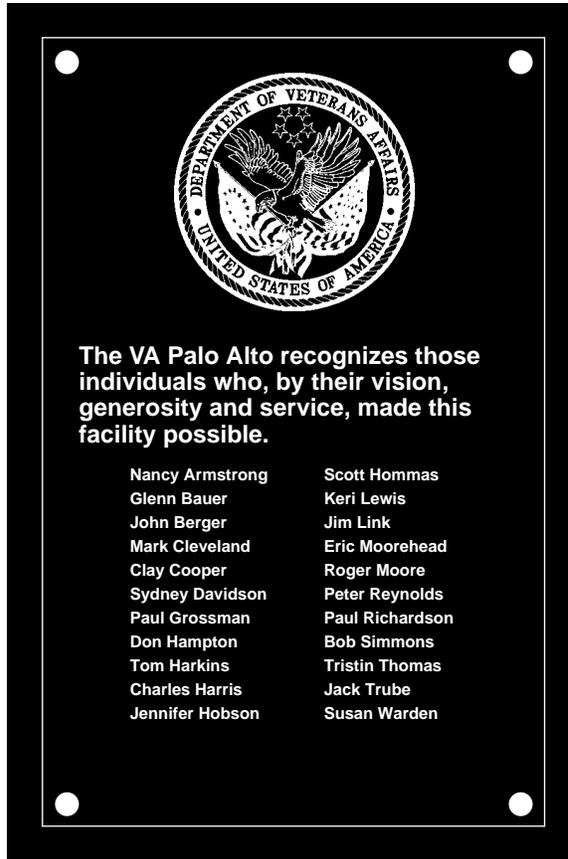

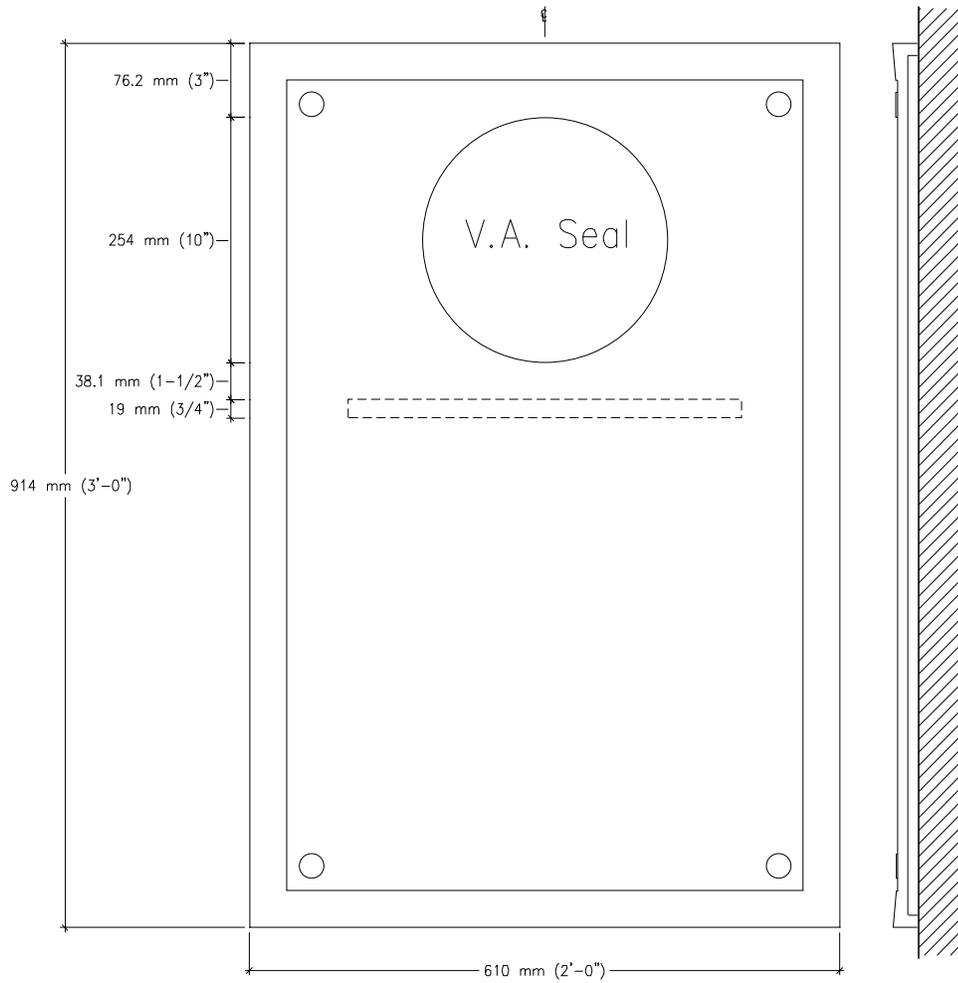

IN20.2
Dedication Plaque.

Sign Face Size:
1220mm H x 762mm W
(36" H x 24" W)

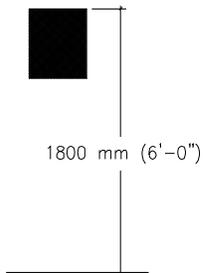

Sign Size

457 mm H x 457 mm W
(18" H x 18" W)

Description

Small Freestanding Identification, Information & Directional Sign

Sign Use & Application

To provide temporary information or queuing for lines.

Message Configuration

(Refer to layout drawing for lettering sizes and dimensions)

Layout A is for bold, short words.
Layout B is for longer words or directional information.

Sign Components

Acrylic sign plaque. Polished aluminum tube stanchion post and weighted base.

Graphic Process

Surface applied vinyl.

Colors

For background, type colors, refer to VA Standard Color Chart
Post & Base: P1, Dark Bronze Anodize

Typography


Helvetica Medium

Mounting

Movable, weighted base.

Recommendations


Use for aiding in temporary directions, designating waiting areas or directing people needing to line up for a service.

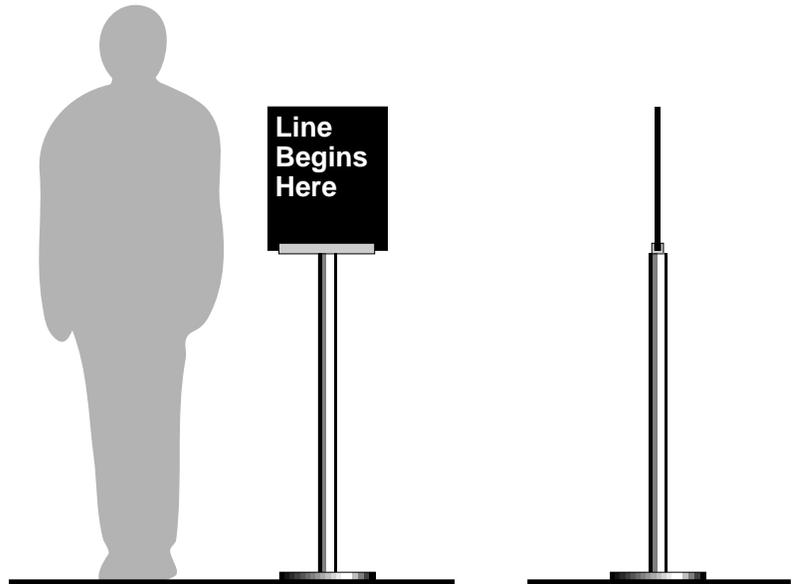


Layout A




Layout B

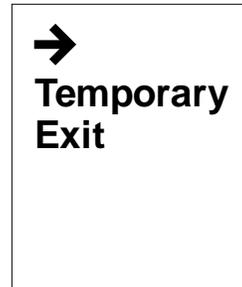

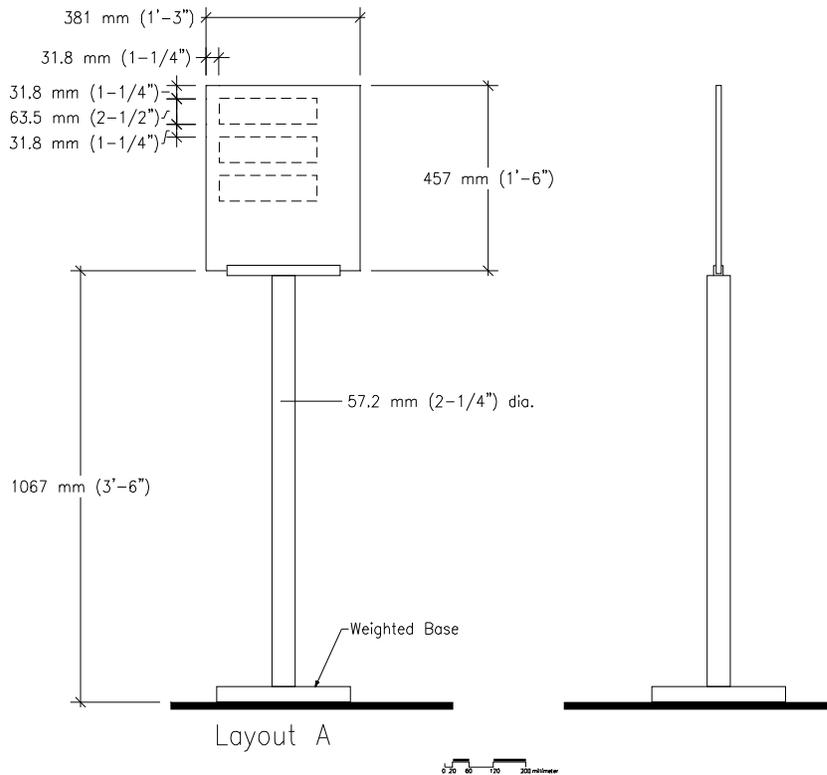

IN21.1
Small freestanding
identification, information
& directional sign.

Sign Face Size:
457mm H x 381mm W
(18" H x 15" W)

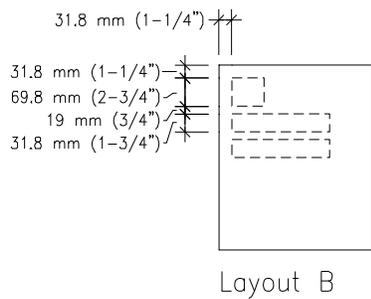

ARROW: Refer to
standards for arrow
positioning relative to
text.

Sign Size

610 mm H x 610 mm W
(24" H x 24" W)

Description

Freestanding Identification, Information & Directional Sign

Sign Use & Application

To provide temporary information.

Message Configuration

(Refer to layout drawing for lettering sizes and dimensions)

Layout A is for bold, short information. Layout B is for titles and text information.

Sign Components

Acrylic sign plaque on metal frame: Polished aluminum tube frame and weighted base.

Graphic Process

Surface applied vinyl.

Colors

For background and type colors refer to VA Standard Color Chart
Post & Base: P1, Dark Bronze
Anodize

Typography


Helvetica Medium

Mounting


Movable, weighted base.

Recommendations

Use for aiding in temporary information and directions, designating waiting or directing people needing to line up for a service

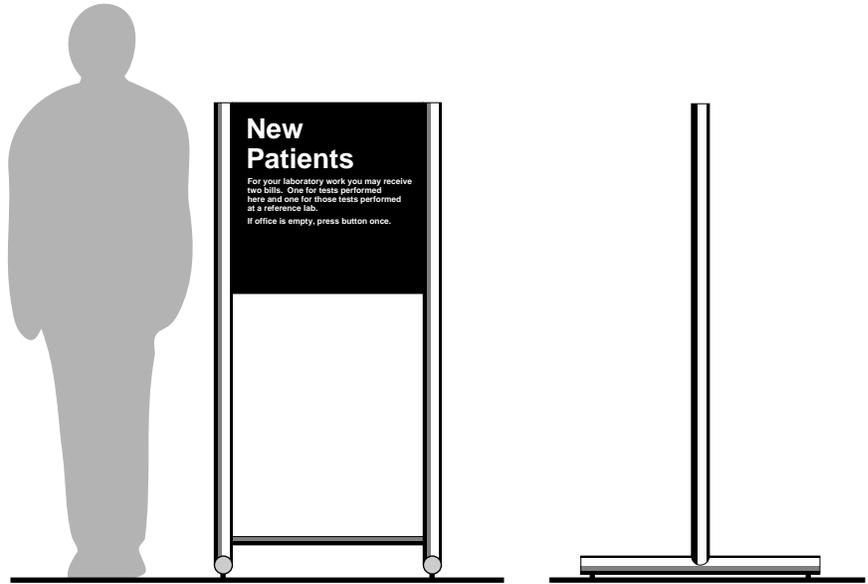


Layout A

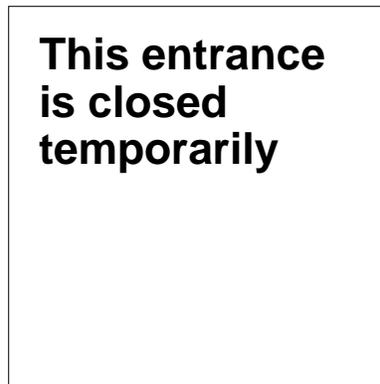

Layout B





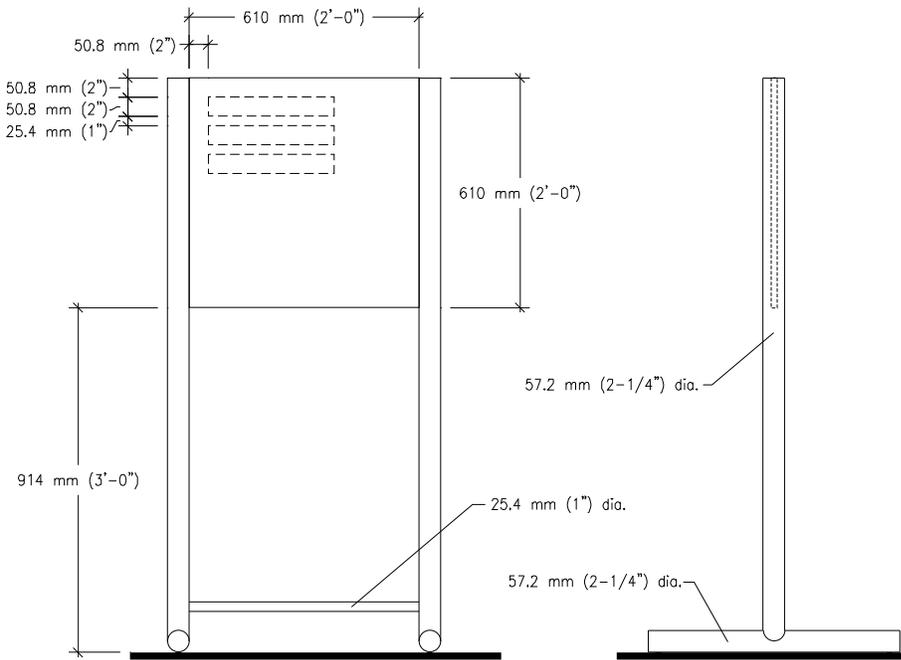

IN21.2
Freestanding
identification, information
& directional sign.

Sign Face Size:
610mm H x 610mm W
(24" H x 24" W)

Layout A

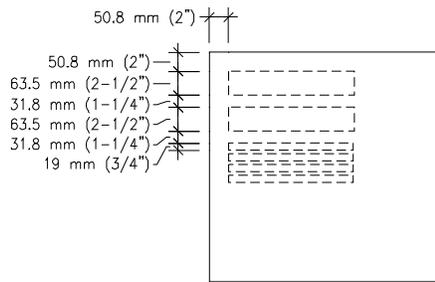

Layout B

Sign Size

610 mm H x 610 mm W
(24" H x 24" W)

Description

Small Freestanding Information Sign

Sign Use & Application

To provide temporary information.

Message Configuration

(Refer to layout drawing for lettering sizes and dimensions)

Layout A is changeable letters.

Layout B is a tackboard with a title header.

Sign Components

Polished aluminum case with glass locking door. Interior surface is a grooved felt covered changeable letterboard or a vinyl impregnated tackboard. Polished aluminum tube frame with weighted base.

Graphic Process


Surface applied vinyl to header above tack board.

Colors

For header background and type colors, refer to VA Standard Color Chart

Post, Base and Case: P1, Dark Bronze Anodize

Changeable Letterboard Felt: Select from manufacturer's list

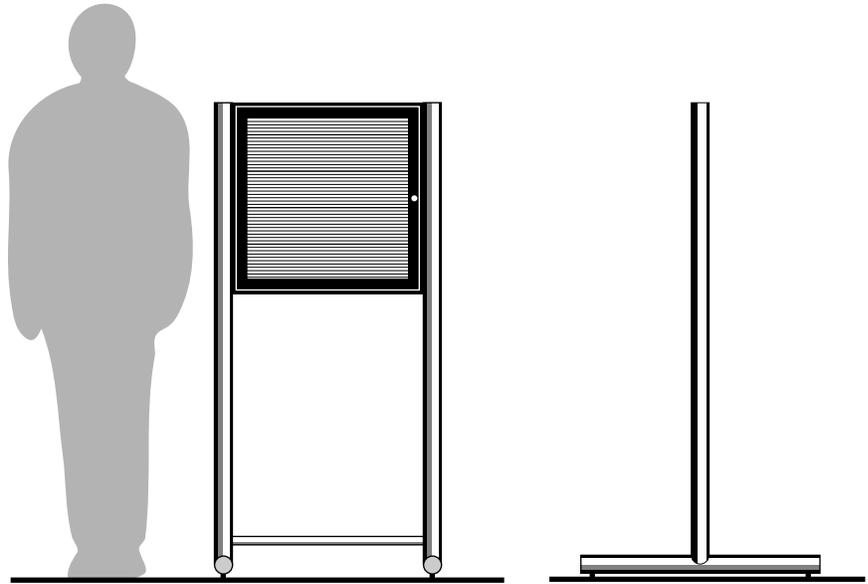

Typography

Helvetica Medium


Mounting

Movable, weighted base.


Recommendations



Use for aiding in temporary information and announcing events and meetings.

**Layout A
(Changeable Letter Board)**

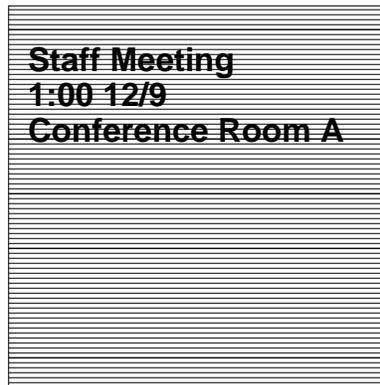


**Layout B
(Tack Surface)**

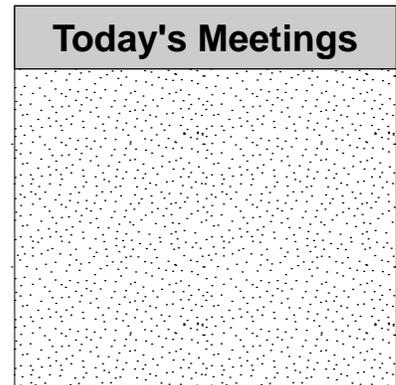

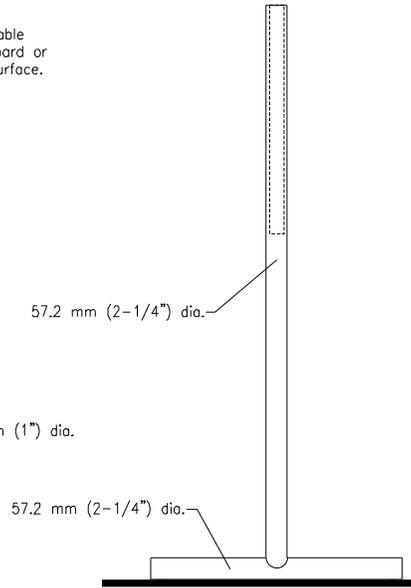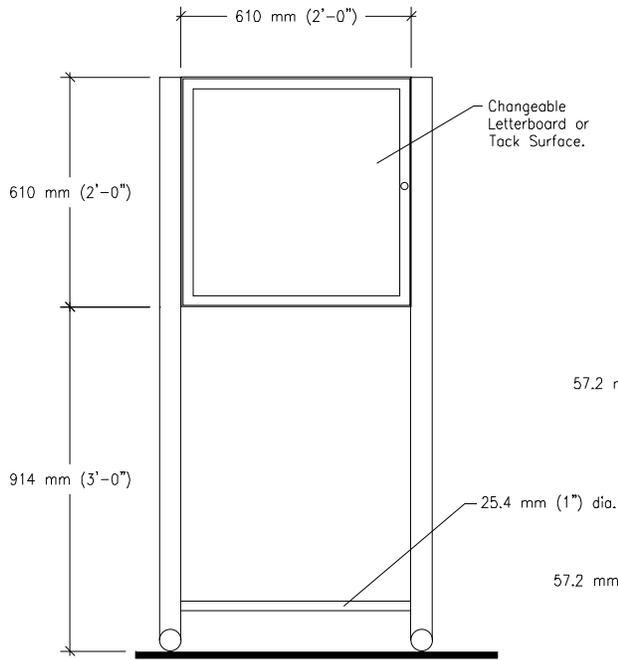

IN21.3
Small freestanding
information sign.

Sign Face Size:
610mm H x 610mm W
(24" H x 24" W)



Sign Size

915 mm H x 762 mm W
(36" H x 30" W)

Description

Freestanding Information Sign

Sign Use & Application

To provide temporary information.

Message Configuration

(Refer to layout drawing for lettering sizes and dimensions)

Layout A is changeable letters.

Layout B is a tackboard with a title header.

Sign Components

Polished aluminum case with glass locking door. Interior surface is a grooved felt covered changeable letterboard or a vinyl impregnated tackboard. Polished aluminum tube frame with weighted base.

Graphic Process

Surface applied vinyl to header above tack board.

Colors

For header background and type colors, refer to VA Standard Color Chart

Post, Base & Case: P1, Dark Bronze Anodize
Changeable Letter Board Felt: Select from manufacturer's list

Typography

Helvetica Medium

Mounting

Movable, weighted base.

Recommendations


Use for aiding in temporary information and announcing events and meetings.




**Layout A
(Changeable Letter Board)**

TODAY'S MENU	
Ham Sandwich	\$2.50
Turkey Sandwich	\$2.75
Cheese Pizza	\$2.00
Macaroni & Cheese	\$1.70
Garden Salad	\$1.10
Tomato Soup	\$1.00
Vanilla Pudding	\$0.50
Ice Cream Sandwich	\$0.75
Chocolate Cookie	\$0.75


**Layout B
(Tack Surface)**

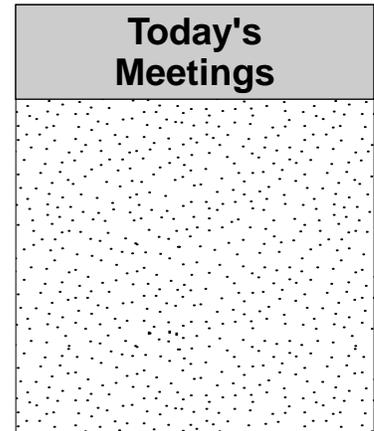

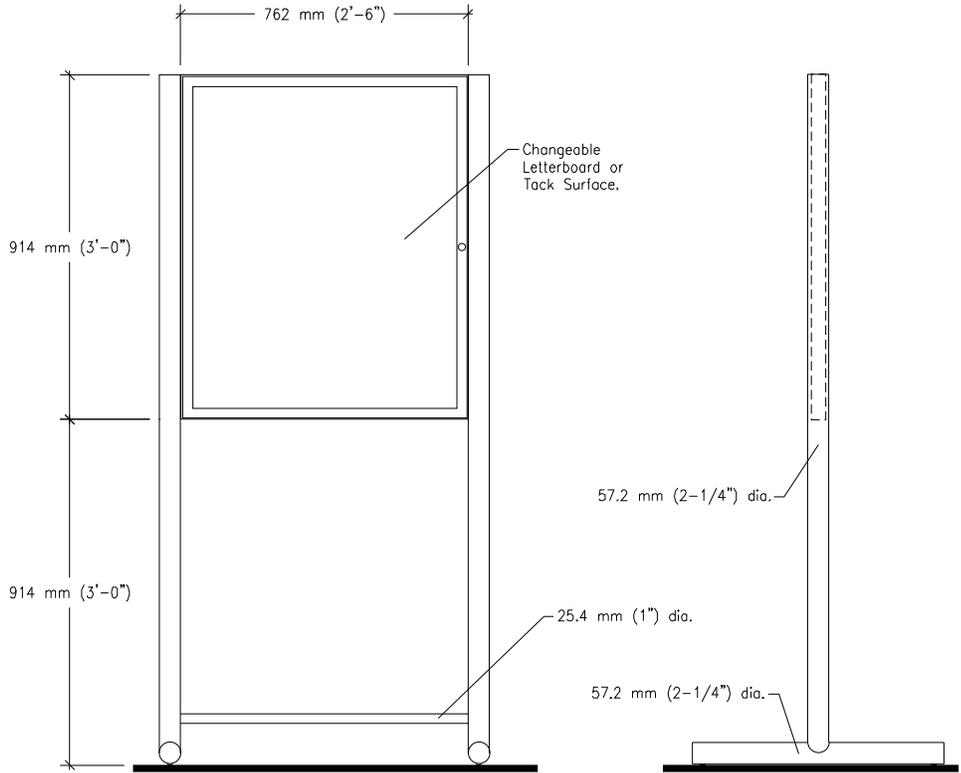

IN21.4
Freestanding
information sign.

Sign Face Size:
915mm H x 762mm W
(36" H x 30" W)



Sign Size

229 mm W
(9" W)

Description

Card or Paper Holder

Sign Use & Application

To temporarily hold paper or notices.

Sign Components

Aluminum extrusion with ball or cylinder pinch roller.

Colors

Natural Aluminum or Bronze
Anodized Aluminum

Mounting



Double sided foam tape or silastic adhesive.

Installation


On wall directly under sign.

Recommendations


Can be installed under a patient room sign or a patient bed sign to hold miscellaneous pieces of paper.
Can also be used at conference rooms to hold room schedules, etc.

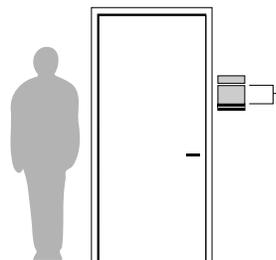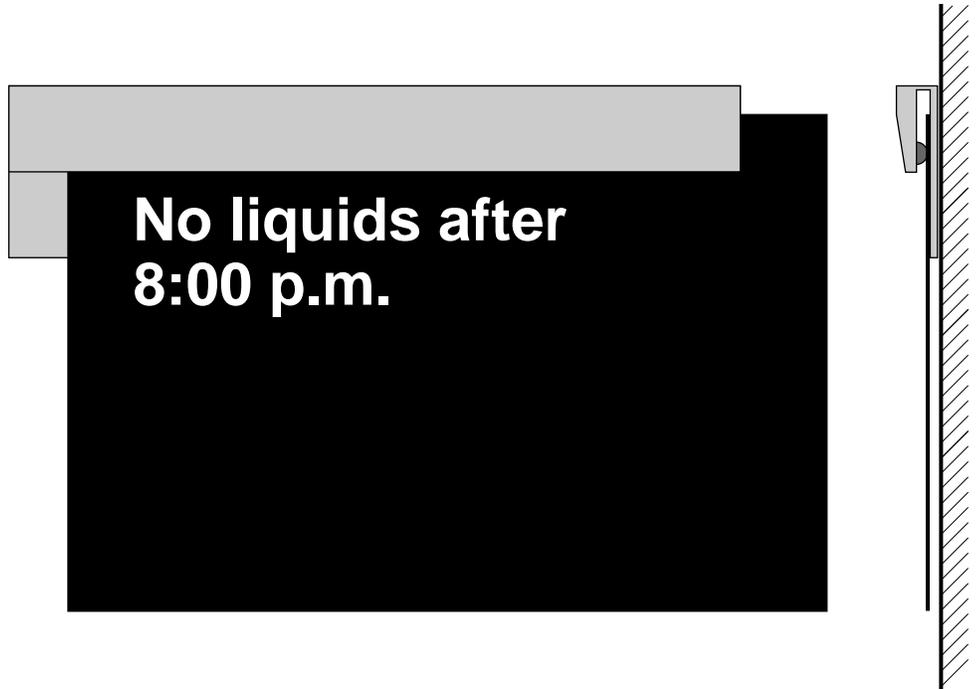

SIGN TYPE
IN05, IA05

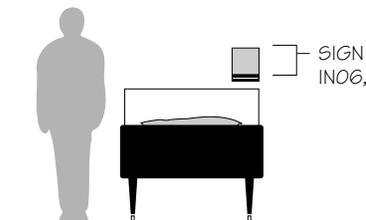


SIGN TYPE
IN06, IA06

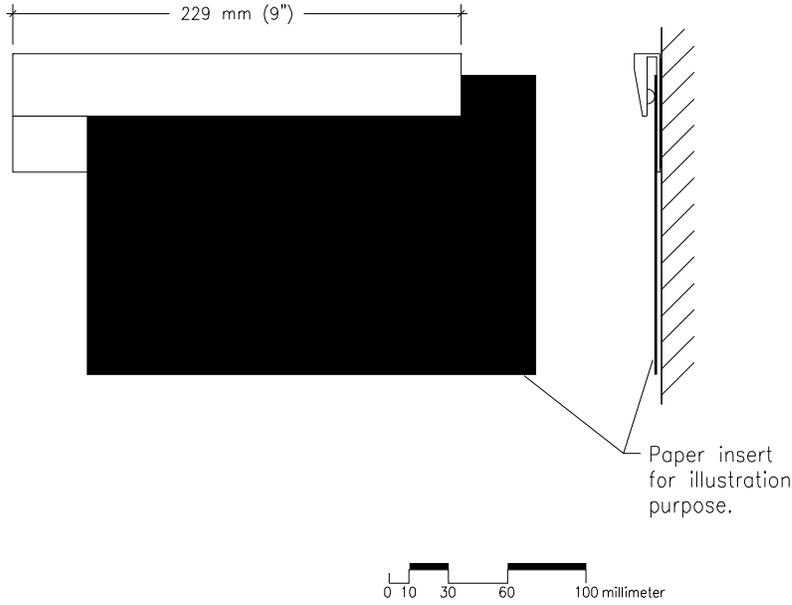

IN22.1
Card or paper holder.

Sign Face Size:
229mm W
(9" W)

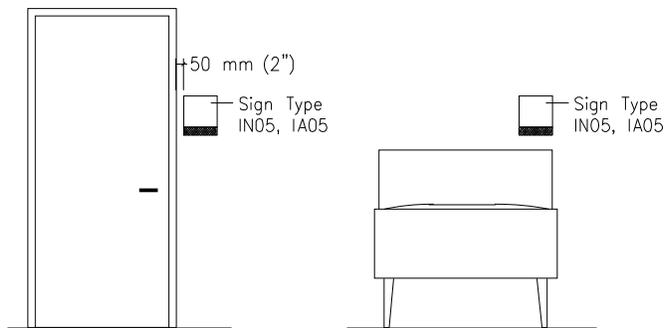

Sign Size

IN22.2 298 mm x 381 mm x 64 mm
(11 3/4" x 15" x 2 1/2")

IN22.3 298 mm x 381 mm x
102 mm (11 3/4" x 15" x 4")

Description

Chart, File or Binder Holder

Sign Use & Application

To hold charts, files or binders.

Sign Components

Painted, formed metal

Colors

Refer to VA Standard Color Chart

Mounting



Screw.

Installation


On wall adjacent to or below room sign.

Recommendations



Install at exam or treatment rooms.

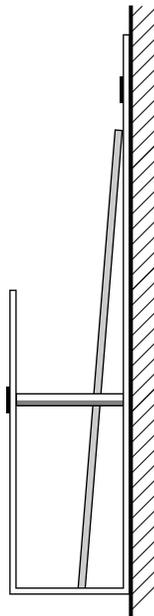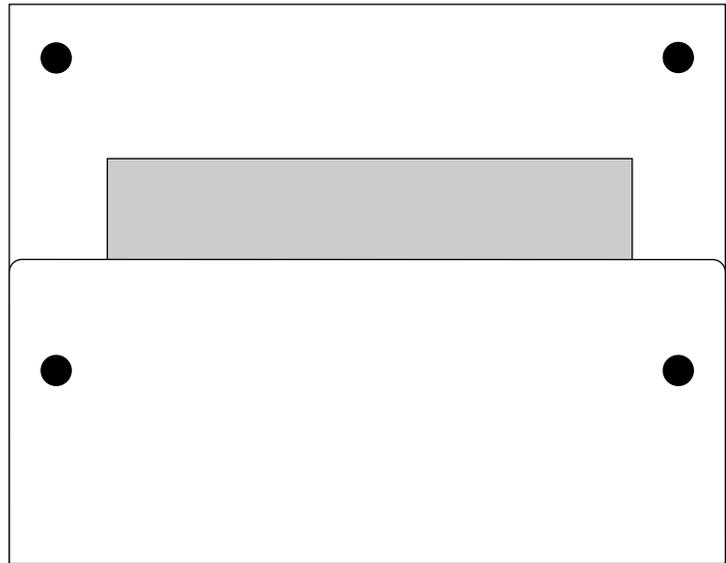


IN22.2

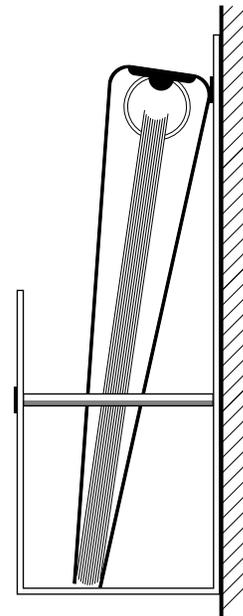

IN22.3

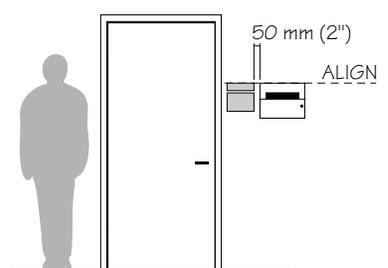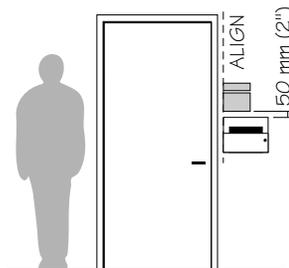

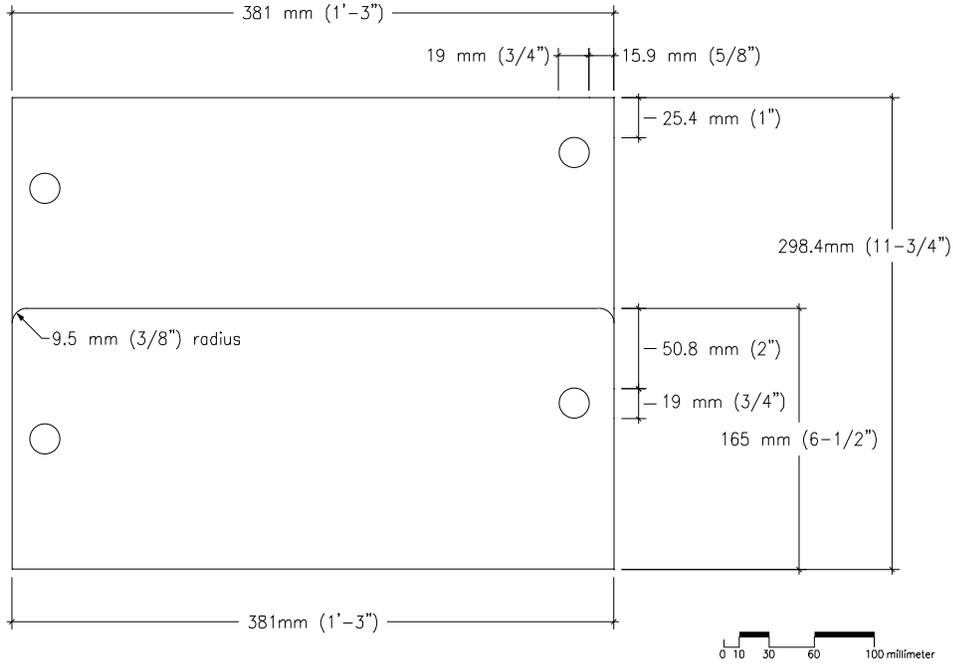

IN22.2-IN22.3
Chart, File or Binder
holder.

IN22.2
Sign Face Size:
298mm H x 381mm W
(11 3/4" H x 15" W)

IN22.3
Sign Face Size:
298mm H x 381mm W
(11 3/4" H x 15" W)

