

Sign Size

76 mm H x 229 mm W
(3" H x 9" W)

Description

Room Number Sign

Sign Use & Application

Sign is to be placed on all rooms that require identification.

Message Configuration

(Refer to layout drawing for lettering sizes and dimensions)

Sign Components

Etched sign face laminated to acrylic backing plaque.

Graphic Process

Tactile room number with accompanying Braille.

Colors

For background & type colors, refer to VA Standard Color Chart.

Type Style

Helvetica Medium
Grade 2 Braille

Mounting

Double sided foam tape

Installation


Knob side of door, 1575 mm (63") to top of sign and 50 mm (2") over from door frame.


Recommendations

This sign is to be used for all rooms, but can also be used to identify corridors and alcoves as necessary. Do not use on exterior and stairwell doors.




Layout A

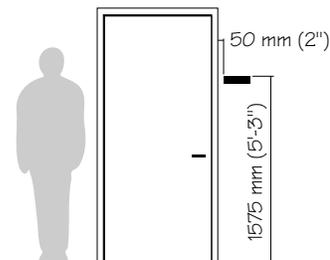

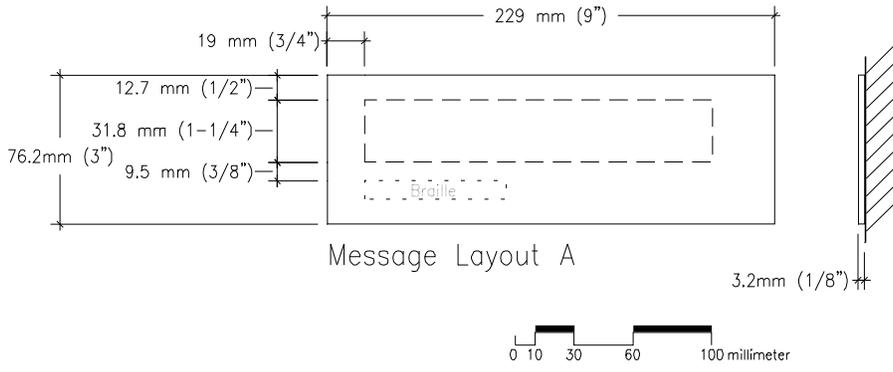

IA03
Room number sign.

Sign Face Size:
76mm H x 229mm W
(3" H x 9" W)

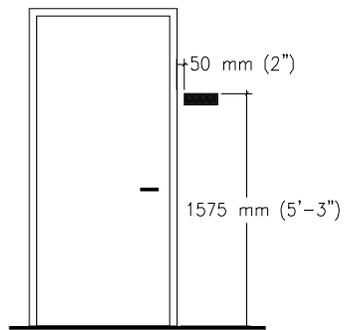

Sign Size

152 mm H x 229 mm W
(6" H x 9" W)

Description

Room Identification Sign

Sign Use & Application

This sign always has a Type 03 as its top sign component. Use this sign to identify the occupant or activity within a room.

Message Configuration

(Refer to layout drawing for lettering sizes and dimensions) Layout A is suggested for department identification. Layout B for rooms and departments with long words or names. Layout C for rooms with a common name but need specific identification.

Sign Components

Face: Clear 1.5 mm (1/16") non-glare acrylic with subsurface background color creating a clear window.

Spacer: to receive a 1.5 mm (1/16") insert with vinyl letters OR 1.5 mm (1/16") engraving stock OR to receive a clear .4 mm (1/64") insert with vinyl letters.

Backing Plaque: Surface painted 6 mm (1/8") acrylic.

Graphic Process

Surface applied vinyl text to removable insert or engraved text on engraving stock.

Colors

For background & type colors, refer to VA Standard Color Chart.

Type Style & Size

Helvetica Medium
Lettering size is adaptable to allow message to fit on to the sign insert. Refer to various layouts for reference.

Mounting

Double sided foam tape.

Installation

Knob side of door, 1500 mm (60") to top of sign and 50 mm (2") over from door frame.

Recommendations

It is recommended that this particular sign type become the "building standard" for identification of all rooms.




Insert Layout A




Insert Layout B




Insert Layout C

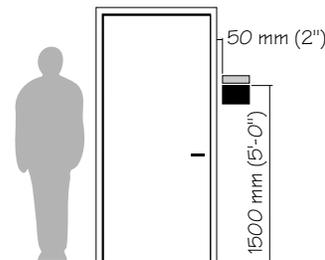


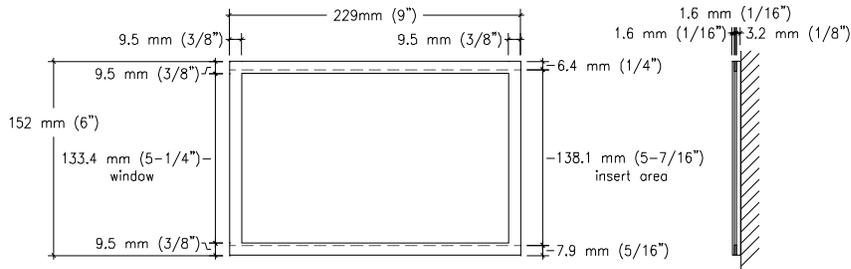


IA04.1
Room identification sign.




Sign Face Size:
152mm H x 229mm W
(6" H x 9" W)

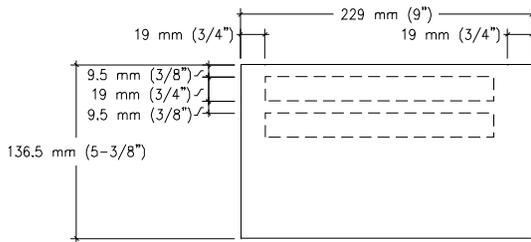


Insert Layout A

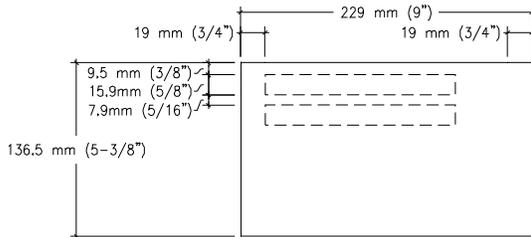

Insert Layout B

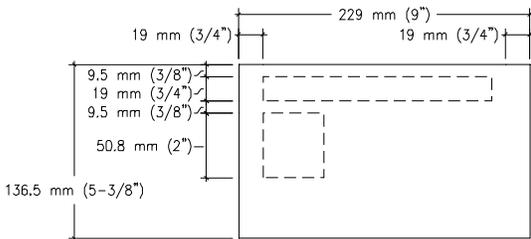

Insert Layout C

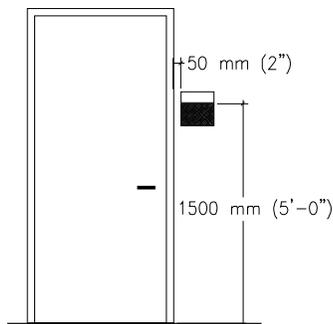

Sign Size

76 mm H x 229 mm W
(3" H x 9" W)

Description

Secondary Room Identification Sign

Sign Use & Application

This sign always has a Type 03 as its top sign component. Use this sign to secondary rooms or rooms that have short names.

Message Configuration

(Refer to layout drawing for lettering sizes and dimensions)

Layout A is suggested for short titles. Layout B is for longer names or titles. Layout C is specific identification by number or letter.

Sign Components

Face: Clear 1.5 mm (1/16") non-glare acrylic with subsurface background color creating a clear window.

Spacer: to receive a 1.5 mm (1/16") insert with vinyl letters OR 1.5 mm (1/16") engraving stock OR to receive a clear .4 mm (1/64") insert with vinyl letters.

Backing Plaque: Surface painted 6 mm (1/8") acrylic.

Graphic Process

Surface applied vinyl. or engraved.

Colors

For background & type colors, refer to VA Standard Color Chart.

Typography

Helvetica Medium

Mounting


Double sided foam tape or silastic adhesive.

Installation

Knob side of door, 1500 mm (60") to top of sign and 50 mm (2") over from door frame.

Recommendations

This sign is for use if the sign does not require long or large text.

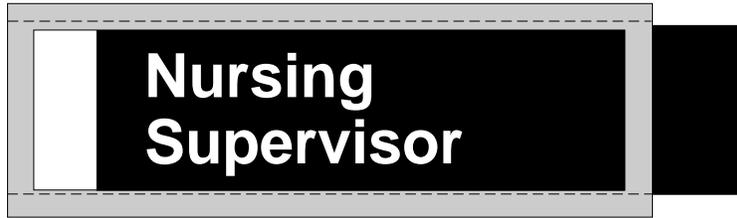




Layout A




Layout B







Layout C

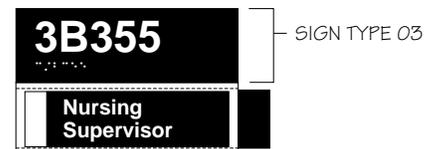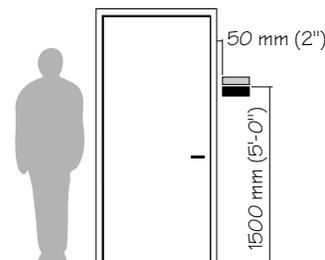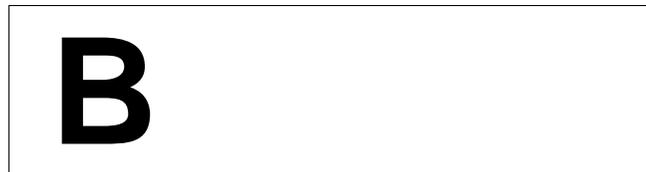

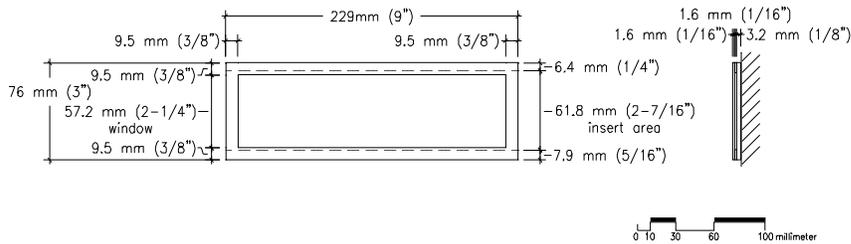

IA04.2
 Secondary room
 identification sign.

Sign Face Size:
 76mm H x 229mm W
 (3" H x 9" W)

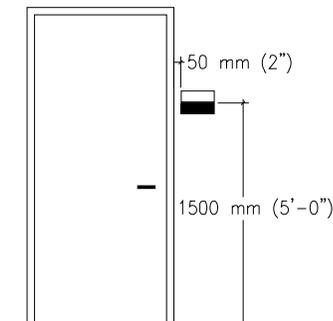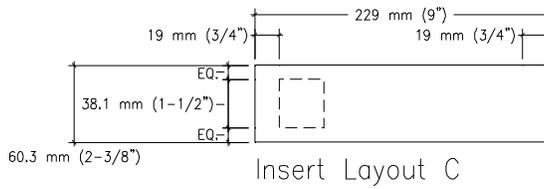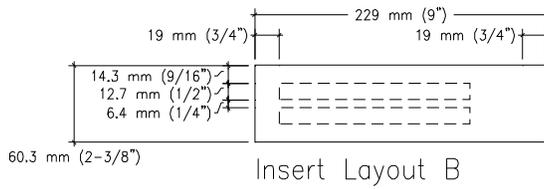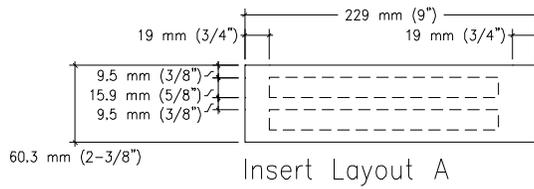

Sign Size

- IA05.1 152 mm x 229 mm
(6" x 9")
- IA05.2 76 mm x 229 mm
(3" x 9")

Description

Patient Room Identification Sign

Sign Use & Application

This sign always has a Type 03 as its top sign component. Use this sign to identify the occupant's of a patient room.

Message Configuration

(Refer to layout drawings for lettering sizes and dimensions)

Paper inserts with patient's names are prepared and removed by each Medical Center based upon occupancy of the room.

Sign Components

Face: Clear 1.5 mm (1/16") acrylic with subsurface background color creating a window. Windows are routed out of acrylic faces.

Spacer: .8 mm (1/32") pocket to receive a paper insert

Backing Plaque: Surface painted 6 mm (1/8") acrylic.

Graphic Process

Inserts to be provided by hospital

Colors

For background colors, refer to VA Standard Color Chart.

Mounting

Double sided foam tape or screw.

Installation


Knob side of door, 1500 mm (60") to top of sign and 50 mm (2") over from door frame.

Recommendations




It is recommended that this sign type be used for all patient rooms.




IA05.1

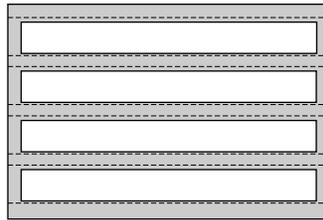


IA05.2

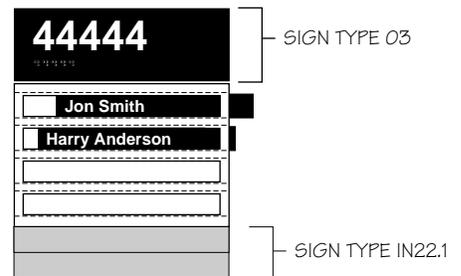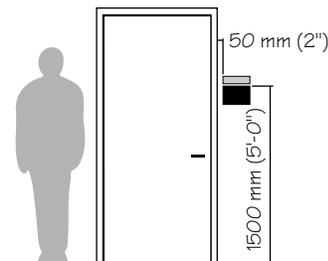

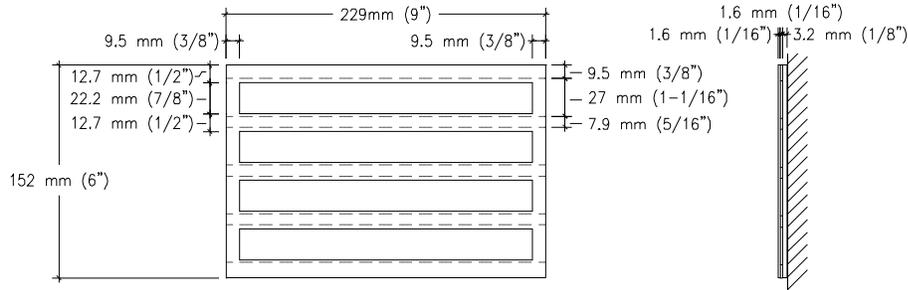


IA05.1




IA05.1-IA05.2
Patient room
identification sign.

IA05.1
Sign Face Size:
152mm H x 229mm W
(6" H x 9" W)

IA05.2
Sign Face Size:
76mm H x 229mm W
(3" H x 9" W)

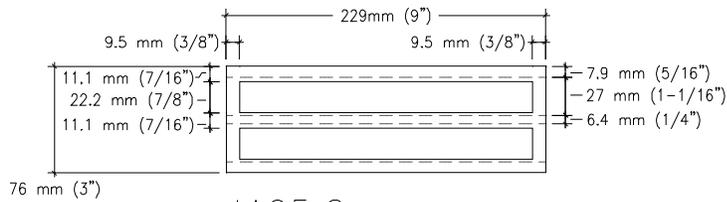

IA05.2

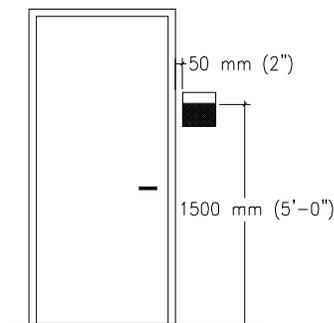

Sign Size

- IA05.3 203 mm x 229 mm
(8" x 9")
- IA05.4 254 mm x 229 mm
(10" x 9")

Description

Patient Room Identification Sign with Picture

Sign Use & Application

This sign always has a Type 03 as its top sign component. Use this sign on patient rooms in a Nursing Home.

Message Configuration

(Refer to layout drawing for lettering sizes and dimensions)

Insert messages and pictures are patient's name and photograph. They are prepared and removed by the Medical Center based upon occupancy of the room.

Sign Components

Face: Clear 1.5 mm (1/16") non-glare acrylic with subsurface background color creating clear routed out windows.

Spacer: to receive a paper insert and picture.

Backing Plaque: Surface painted 6 mm (1/8") acrylic.

Graphic Process

Paper inserts and pictures provided by medical center.

Colors

For background colors, refer to VA Standard Color Chart.

Mounting


Double sided foam tape or silastic adhesive.

Installation


Knob side of door, 1500 mm (60") to top of sign and 50 mm (2") over from door frame.

Recommendations



This sign is for use in a Nursing Home where photos of the patient will help the patient identify their particular room.

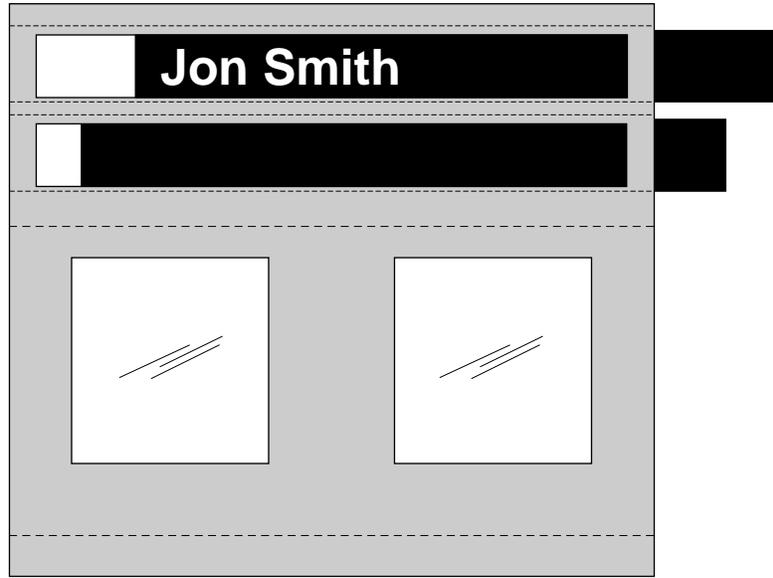


IA05.3

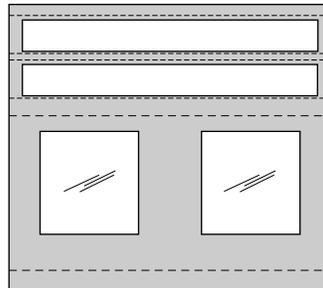

IA05.4

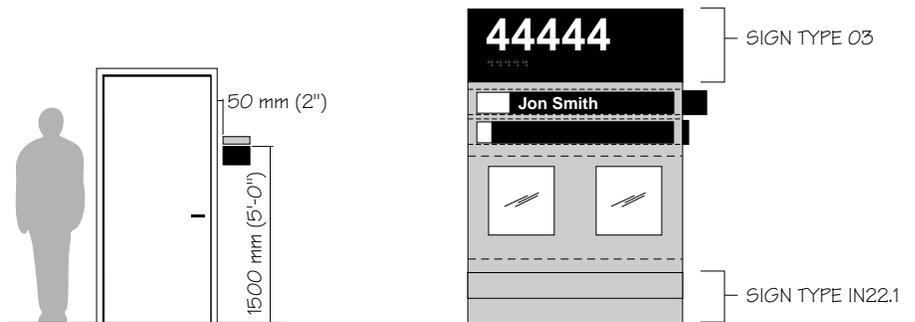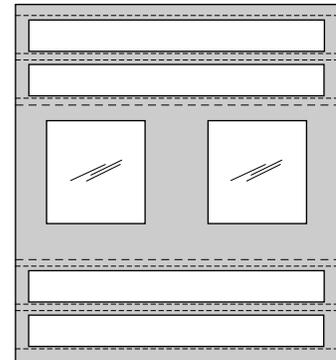

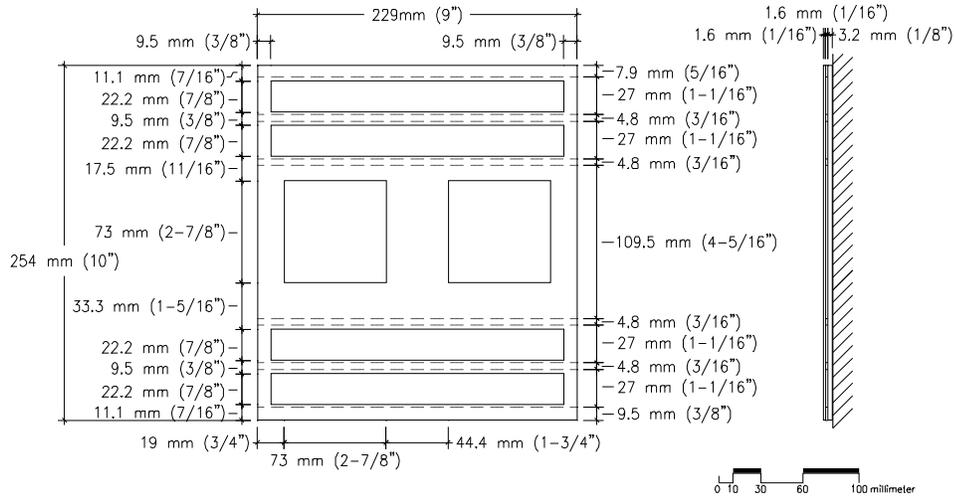


IA05.3-IA05.4
 Patient room
 identification sign
 with picture.


IA05.3
 Sign Face Size:
 203mm H x 229mm W
 (8" H x 9" W)

IA05.4
 Sign Face Size:
 254mm H x 229mm W
 (10" H x 9" W)

IA05.3

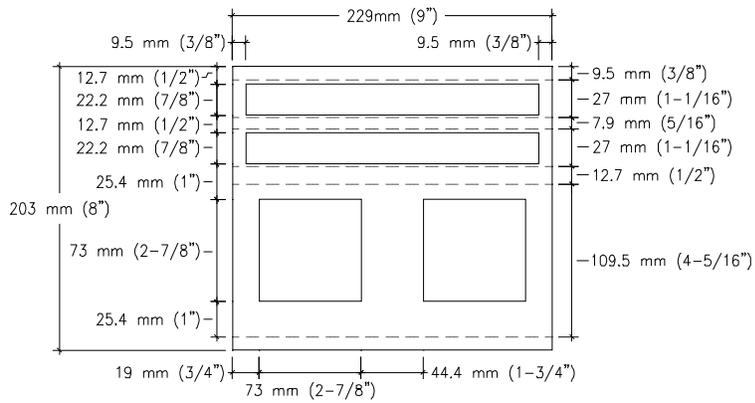

IA05.4

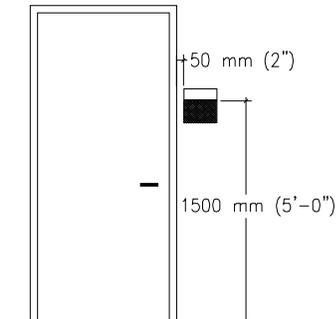

Sign Size

- IA06.1 152 mm x 229 mm (6" x 9")
- IA06.2 292 mm x 229 mm (11 1/2" x 9")
- IA06.3 362 mm x 229 mm (14 1/4" x 9")

Description

Patient Bed Sign

Sign Use & Application

Use this sign above patient beds to identify the bed and the patient.

Message Configuration

(Refer to layout drawing for lettering sizes and dimensions)

Insert names are prepared and removed based upon occupancy of the room. Selection of the text to appear behind the slider is to be selected by nursing at a medical center, based on their particular needs.

Sign Components

Face: Clear 1.5 mm (1/16") non-glare acrylic with subsurface background color creating clear routed out windows.

Spacer: to receive a paper insert. Sliding tiles cover fixed messages.

Backing Plaque: Surface painted 6 mm (1/8") acrylic.

Graphic Process

Name inserts provided by hospital. Text behind slider is second surface applied.

Colors

For background and type colors, refer to VA Standard Color Chart.

Typography

Helvetica Medium

Mounting


Double sided foam tape or silastic adhesive.

Installation


On headwall above bed.

Recommendations


This sign is for use in patient rooms and is to be coordinated with the needs and function with nursing services.

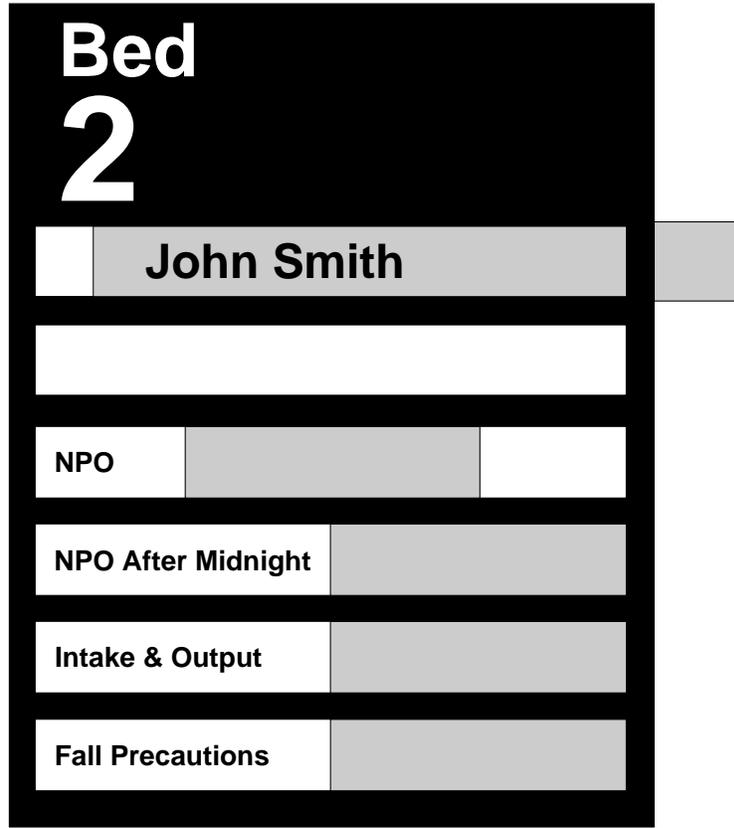




IA06.1

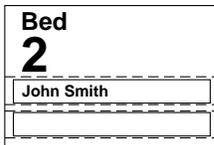


IA06.2

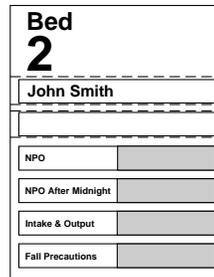

IA06.3

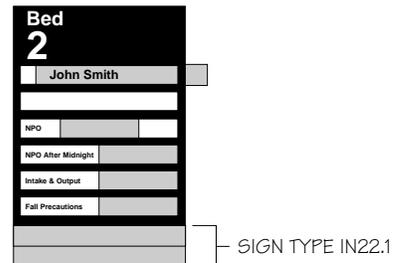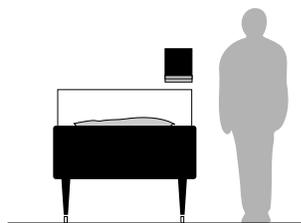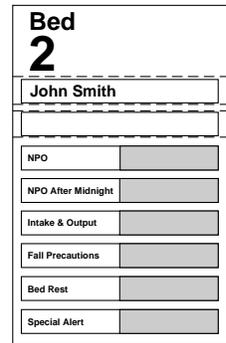

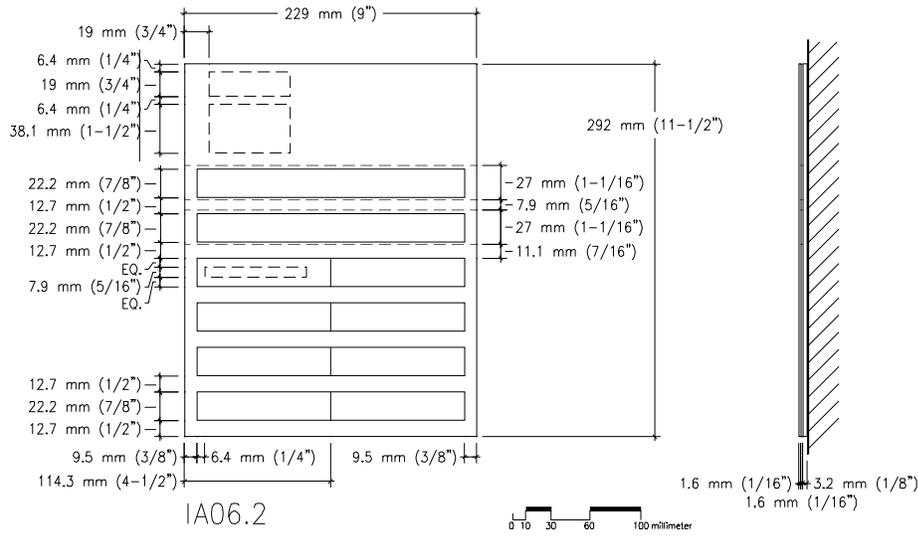


IA06.1-IA06.3
Patient bed sign.


IA06.1
Sign Face Size:
152mm H x 229mm W
(6" H x 9" W)

IA06.2
Sign Face Size:
292mm H x 229mm W
(11 1/2" H x 9" W)


IA06.3
Sign Face Size:
362mm H x 229mm W
(14 1/4" H x 9" W)

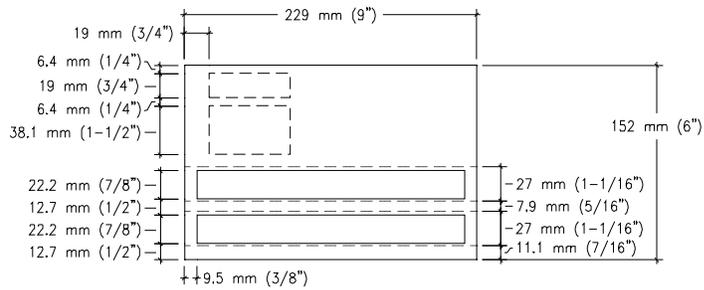

IA06.1

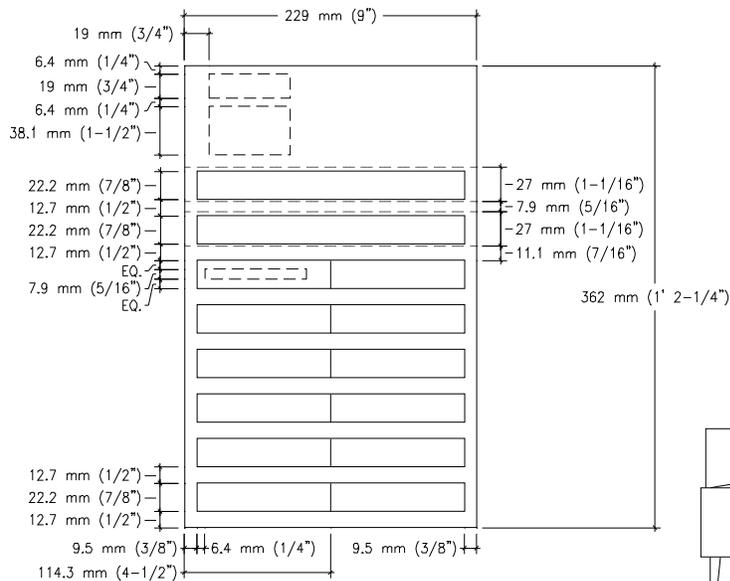

IA06.3

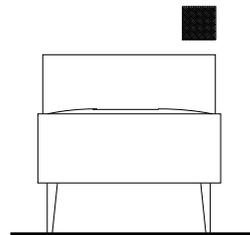

Sign Size

- IA07.1 152 mm x 229 mm
(6" x 9")
- IA07.2 76 mm x 229 mm
(3" x 9")

Description

Patient Room Identification Sign with Picture

Sign Use & Application

This sign always has a Type 03 as its top sign component. Use this sign for conference rooms, meeting rooms, exam rooms, treatment rooms, and offices where the occupants may be conducting patient interviews.

Message Configuration

(Refer to layout drawing for lettering sizes and dimensions)
IA07.1, Layout A is for conference rooms, Layout B is for exam or treatment rooms. N07.3 Insert messages are prepared and removed based upon occupancy of the room. Selection of the text to appear behind the slider is to be selected by the medical center.

Sign Components

Face: Clear 1.5 mm (1/16") non-glare acrylic with subsurface background color creating a clear routed out window.
Spacer: to receive a 1.5 mm (1/16") insert with vinyl letters OR 1.5 mm (1/16") engraving stock OR to receive a clear .4 mm (1/64") insert with vinyl letters. Sliding tile covers fixed message in lower window.
Backing Plaque: Surface painted 6 mm (1/8") acrylic.

Graphic Process

Surface applied vinyl. IA07.3 name inserts provided by hospital. Text behind slider is second surface applied.

Colors

For background and type colors, refer to VA Standard Color Chart.

Typography

Helvetica Medium

Mounting


Double sided foam tape or silastic adhesive.

Installation

Knob side of door, 1500 mm (60") to top of sign and 50 mm (2") over from door frame.

Recommendations

This sign is for use on rooms where and indication is needed in the hallway that the room is occupied and an activity is taking place in the room which should not be disturbed.

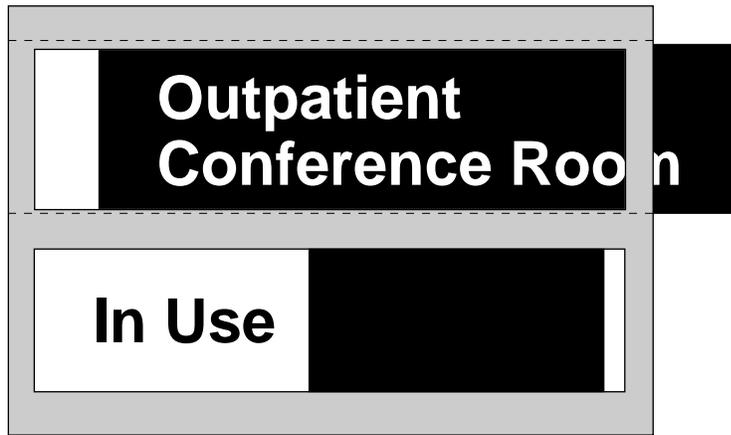


Insert (IA07.1)






Insert (IA07.2)




IA07.1

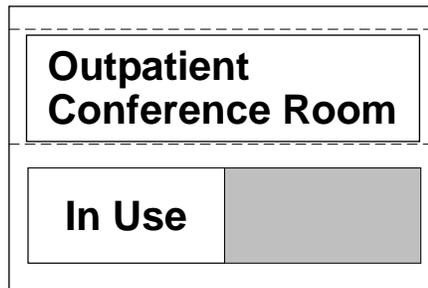

IA07.2



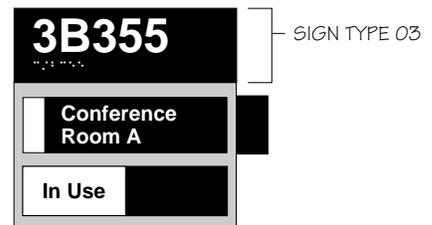
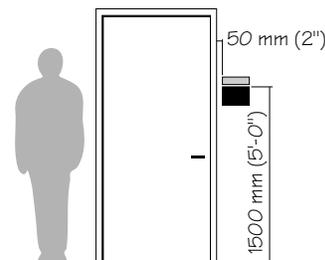
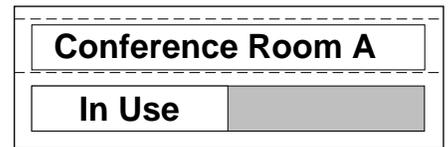


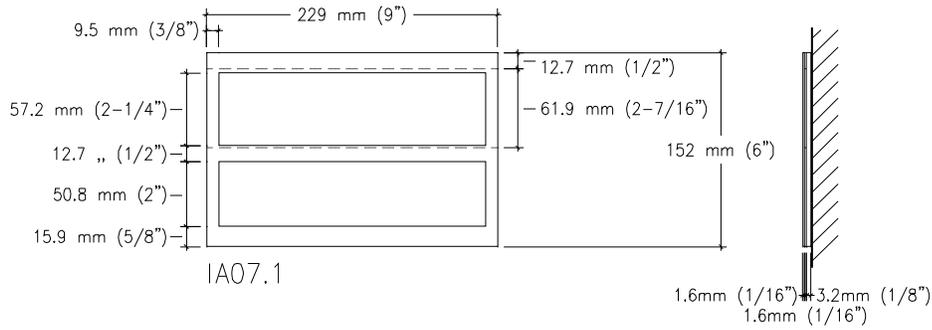

IA07.1-IA07.2
Conference / Meeting
room sign.

IA07.1
Sign Face Size:
152mm H x 229mm W
(6" H x 9" W)

IA07.2
Sign Face Size:
76mm H x 229mm W
(3" H x 9" W)

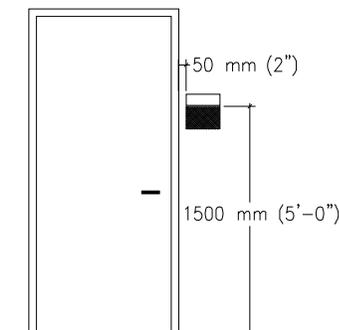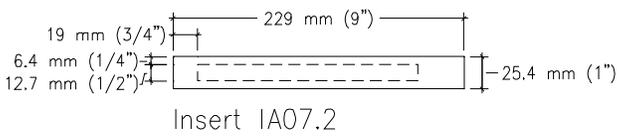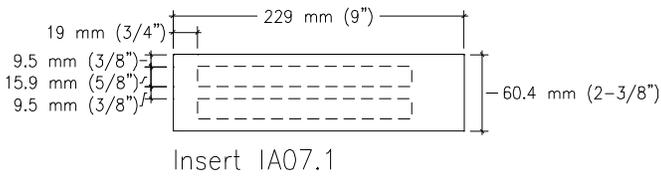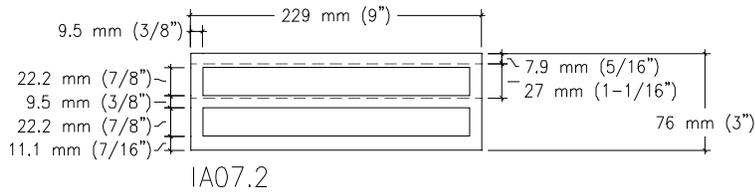

Sign Size

- IA11.1 229 mm x 229 mm (9" x 9")
- IA11.2 381 mm x 381 mm (15"x15")
- IA11.3 508 mm x 508 mm (20" x 20")

Description

Informational / Instructional Sign

Sign Use & Application

Use this sign to communicate miscellaneous information.

Message Configuration

(Refer to layout drawing for lettering sizes and dimensions)

Layouts relate to the size and importance of message.

Sign Components

Acrylic Plaque

Graphic Process

Surface applied vinyl.

Colors

For background and type colors, refer to VA Standard Color Chart.

Typography

Helvetica Medium

Mounting


Double sided foam tape or silastic adhesive.

Installation

On wall

Recommendations


These sign are for use to present brief general messages. Text should be limited to as few a words as possible. Long messages are generally not read.





IA11.1




IA11.2

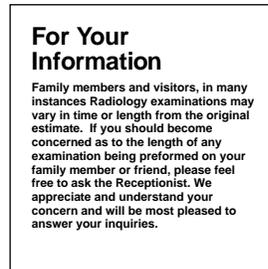


IA11.3

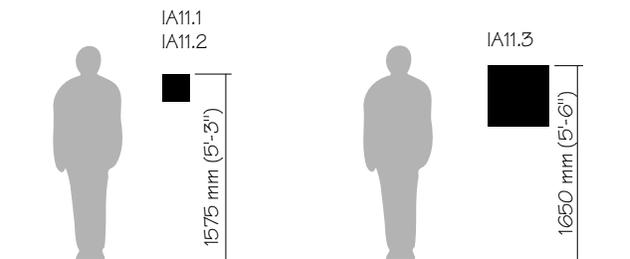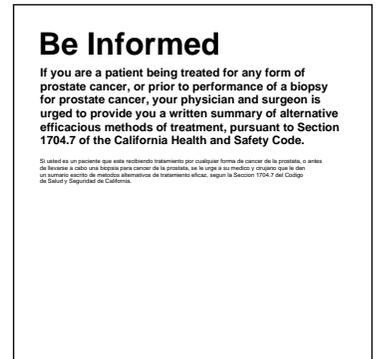

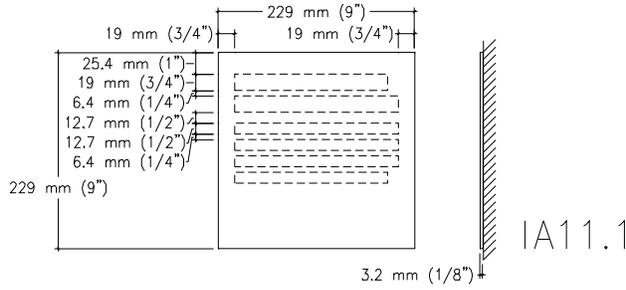



IA11.1-IA11.3
Informational/
Instructional sign.

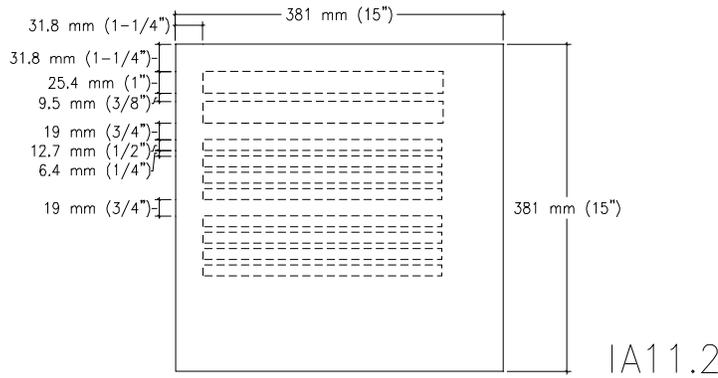

IA11.1
Sign Face Size:
229mm H x 229mm W
(9" H x 9" W)

IA11.2
Sign Face Size:
381mm H x 381mm W
(15" H x 15" W)

IA11.3
Sign Face Size:
508mm H x 508mm W
(20" H x 20" W)

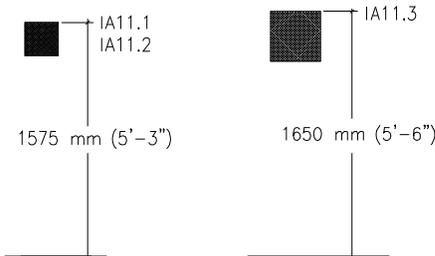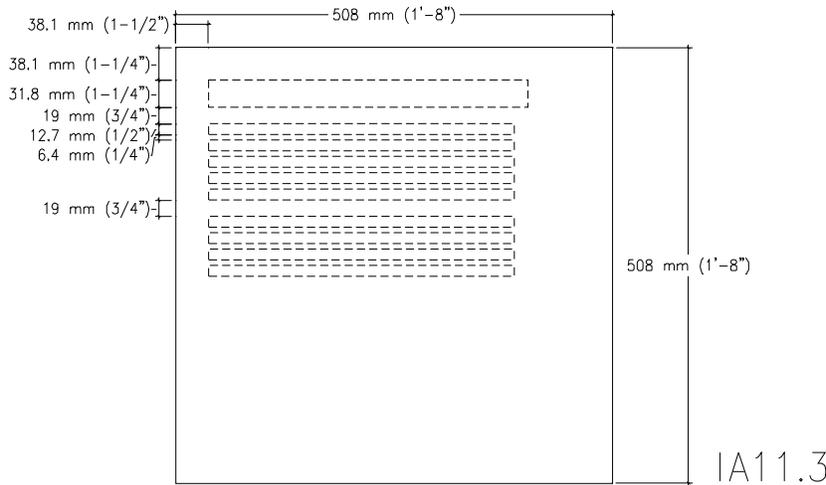

Sign Size

- IA12.1 152 mm x 229 mm
(6" x 9")
- IA12.2 229 mm x 229 mm
(9" x 9")
- IA12.3 76 mm x 229 mm
(3" x 9")

Description

Desk, Counter Sign

Sign Use & Application

Use this sign for messages to be communicated at counters and desks.

Message Configuration

(Refer to layout drawing for lettering sizes and dimensions)

IA12.1 is for titles or titles with a short informational text. IA12.2 is for long titles or titles with a long informational text. IA12.3 is suggested for use as a desk plaque with and individuals name.

Sign Components

Acrylic Plaque, Acrylic Core, Freestanding Holder

Graphic Process

Surface applied vinyl.

Colors

For background and type colors, refer to VA Standard Color Chart.

Typography

Helvetica Medium

Mounting




Freestanding.


Installation

On counter or desk.

Recommendations

This sign is for use if information does not require long or large text and needs to be removed or relocated based on the function of the counter.

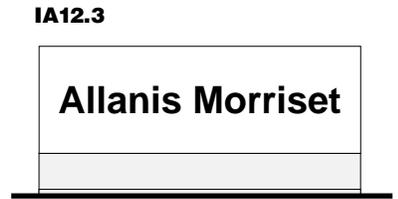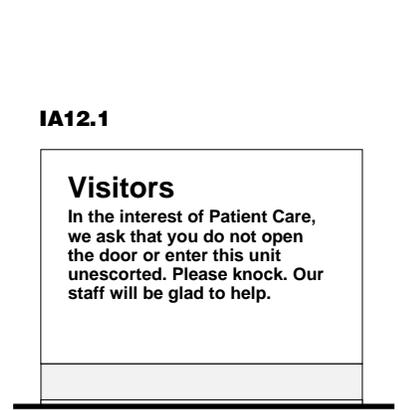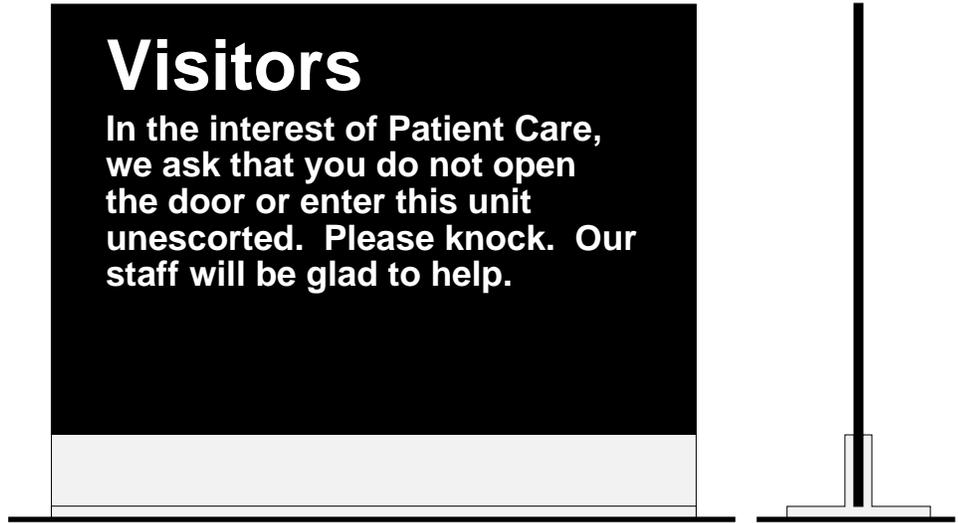

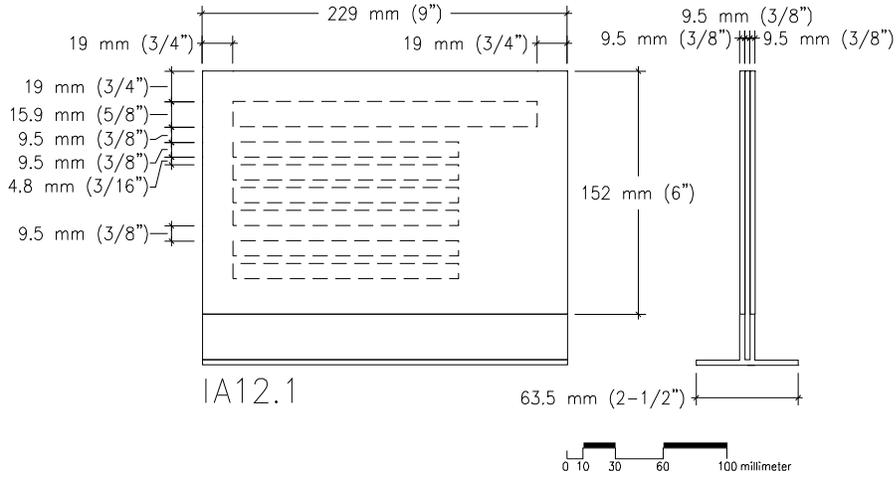


IA12.1

IA12.1-IA12.3
Desk / counter top
informational sign.


IA12.1
Sign Face Size:
152mm H x 229mm W
(6" H x 9" W)

IA12.2
Sign Face Size:
229mm H x 229mm W
(9" H x 9" W)

IA12.3
Sign Face Size:
76mm H x 229mm W
(3" H x 9" W)

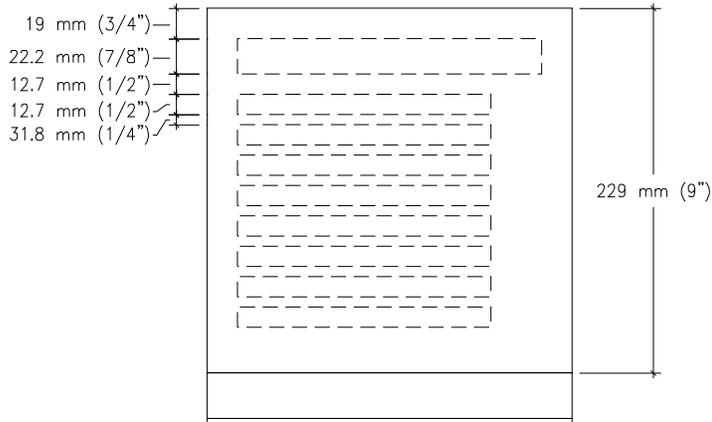

IA12.2

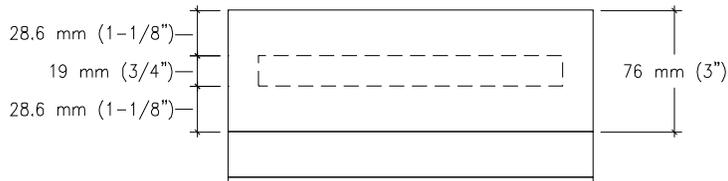

IA12.3

Sign Size

229 mm H x 305 mm W
(9" H x 12" W)

Description

Perpendicular (flag) Mount Sign

Sign Use & Application

Use this sign for messages to be communicated in corridors on the wall, above doors.

Message Configuration

(Refer to layout drawing for lettering sizes and dimensions)

Layout A is for symbols and title / informational text. Layout B is for directional information. Layout C is for a department name.

Sign Components

Acrylic Plaque, Acrylic Core, Wall Mount Holder

Graphic Process

Surface applied vinyl.

Colors

For background and type colors, refer to VA Standard Color Chart.

Typography

Helvetica Medium Condensed

Mounting



Wall mount with screws.


Installation

Install on wall above the height of doors, 2100 mm (84") minimum to bottom of sign.

Recommendations

This sign is for use when the service or department is a high traffic area or the service or department is hard to find.

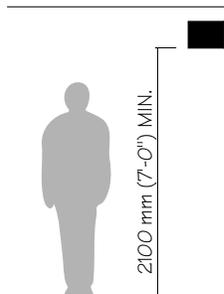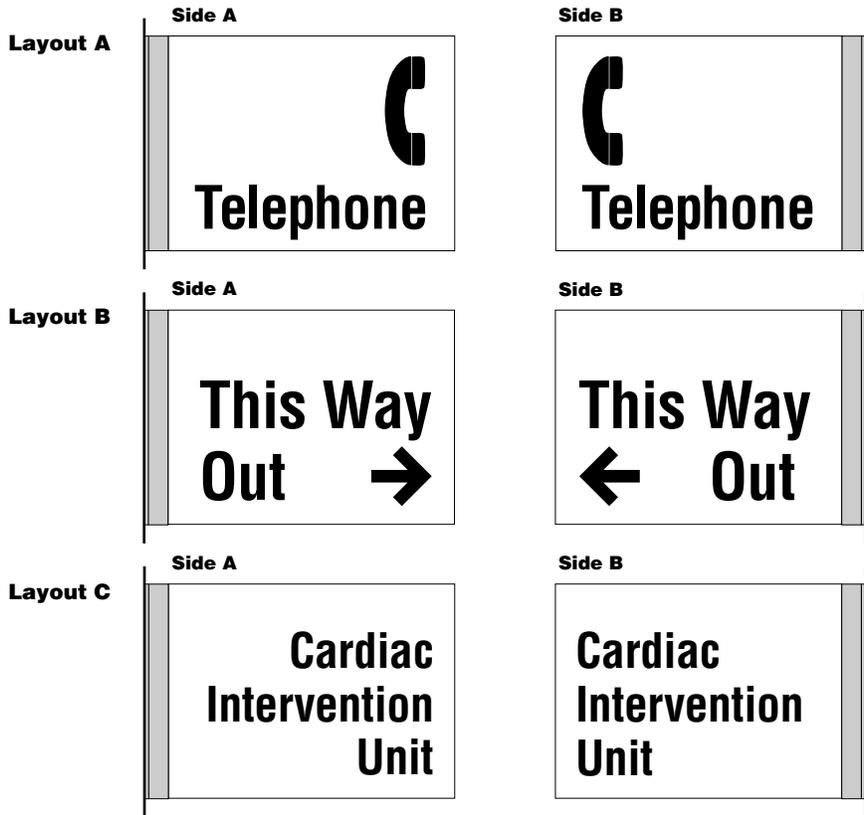

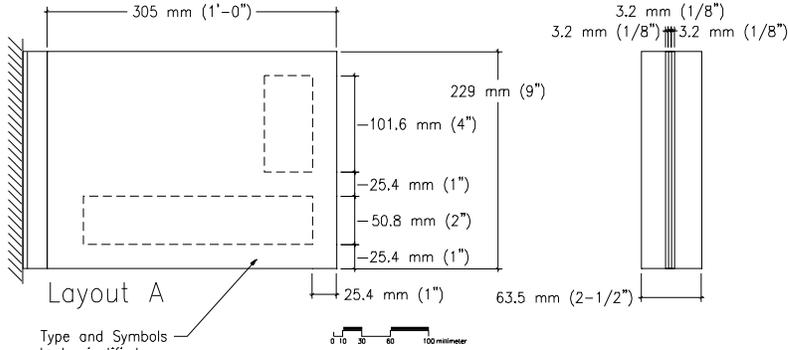


Layout A


Type and Symbols to be justified opposite of bracket and mirror matched.

IA13
Flag mounted sign.


Sign Face Size:
229mm H x 305mm W
(9" H x 1'-0"W)

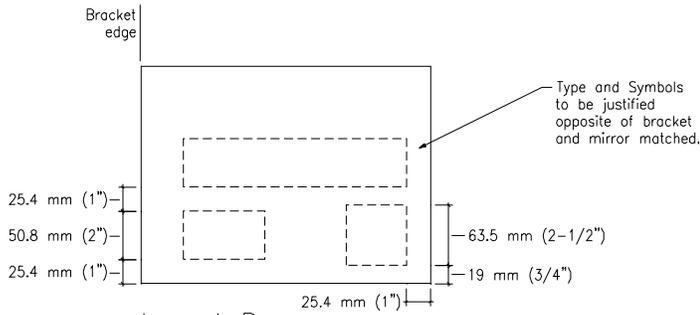

Layout B

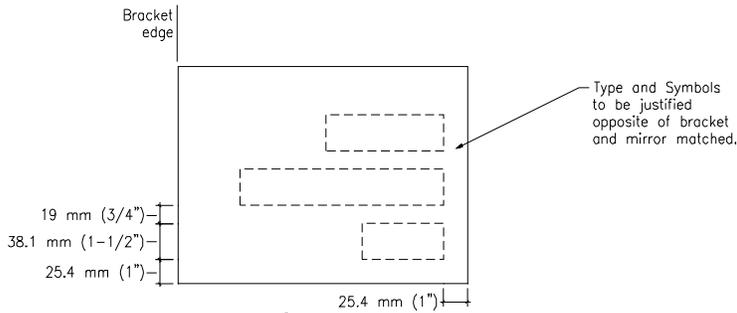

Layout C

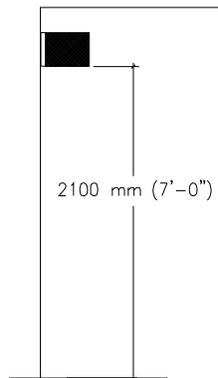

ARROW: Refer to standards for arrow positioning relative to text.

Sign Size

- IA14.1 610 mm x 508 mm (24" x 20")
- IA14.2 762 mm x 508 mm (30" x 20")
- IA14.3 914 mm x 508 mm (36" x 20")
- IA14.4 457 mm x 508 mm (18" x 20")
- IA14.5 305 mm x 508 mm (12" x 20")

Description

Wall Directional Sign

Sign Use & Application

Use this sign for directional information.

Message Configuration

(Refer to layout drawing for lettering sizes and dimensions)

Sign Components

Acrylic Plaque, Acrylic Back

Graphic Process

Surface applied vinyl.

Colors

For background and type colors, refer to VA Standard Color Chart.

Typography

Helvetica Medium

Mounting

Double sided foam tape, silastic adhesive or screw.

Installation

On wall.

Recommendations

This sign is for use in corridors to direct patients and public through the building.



IA14.1

↑
Receptionist
Pediatrics
←
Surgery
Pharmacy
Cafeteria

IA14.2

↑
Receptionist
Pediatrics
Podiatry
←
Surgery
Pharmacy
Cafeteria

IA14.3


↑
Receptionist
Pediatrics
Podiatry
←
Surgery
Pharmacy
Cafeteria
Gift Shop
Elevators


IA14.4

↑
Receptionist
←
Surgery


IA14.5

↑
Receptionist
Pediatrics
Cafeteria

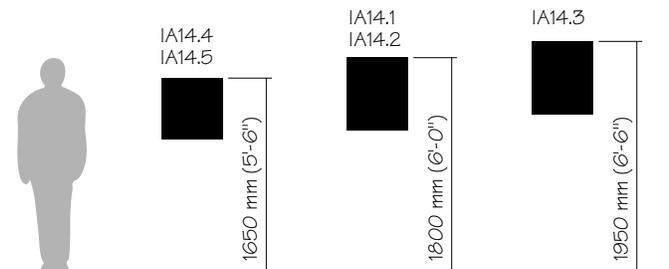


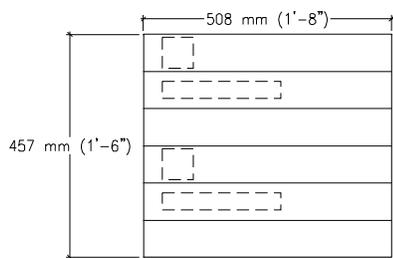


IA14.4

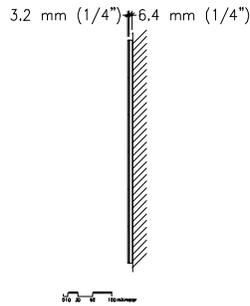


IN14.1-IN14.5
Directional sign.

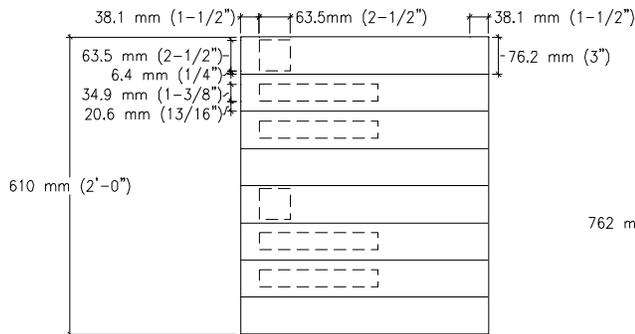


IA14.1

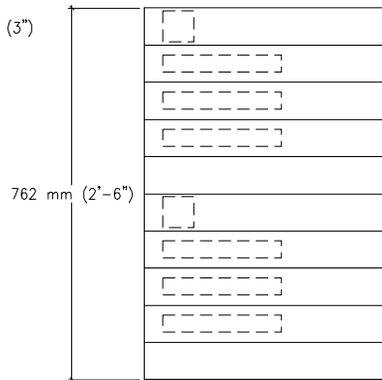

IA14.2

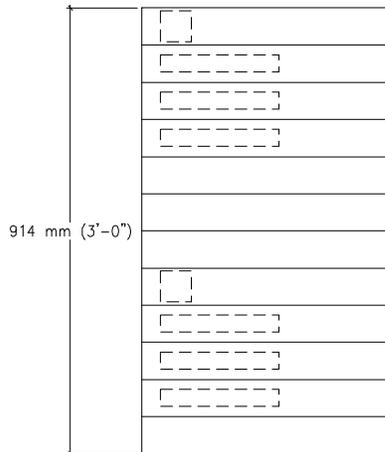

IA14.3

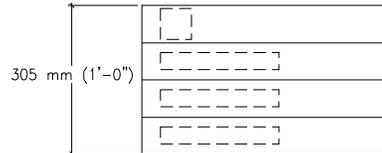

IA14.5


IA14.1
Sign Face Size:
610mm H x 508mm W
(24" H x 20"W)

IA14.2
Sign Face Size:
762mm H x 508mm W
(30" H x 20"W)

IA14.3
Sign Face Size:
914mm H x 508mm W
(36" H x 20"W)

IA14.4
Sign Face Size:
457mm H x 508mm W
(18" H x 20"W)

IA14.5
Sign Face Size:
305mm H x 508mm W
(12" H x 20"W)

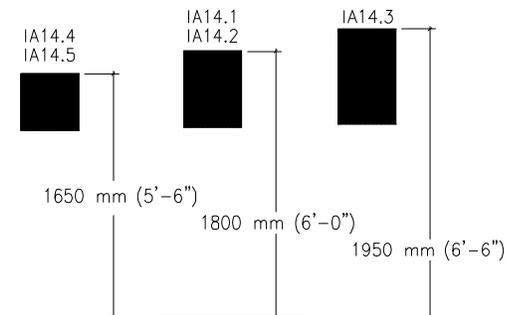

ARROW: Refer to standards for arrow positioning relative to text.

Sign Size

229 mm H x 508 mm W
(9" H x 20" W)

Description

Elevator Lobby Directional Sign

Sign Use & Application

Use this sign for directional information in a elevator lobby or stairwell landing. This sign is always a top sign component to a Type 14 sign.

Message Configuration

(Refer to layout drawing for lettering sizes and dimensions)

Sign Components

Acrylic Plaque, Acrylic Back

Graphic Process

Surface applied vinyl.

Colors

For background and type colors, refer to VA Standard Color Chart.

Typography

Helvetica Medium

Mounting

Double sided foam tape, silastic adhesive or screw.

Installation

On wall.

Recommendations



Use in elevator lobbies, across from the elevators, to direct patients and public. Use at stair landings, across from the door to direct patients and public.




Layout A





Layout B

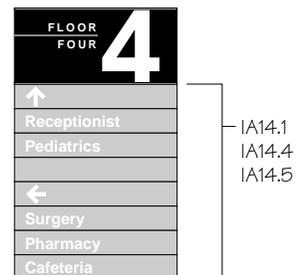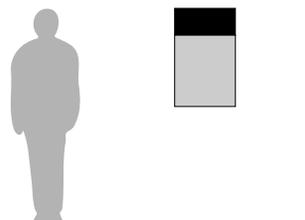

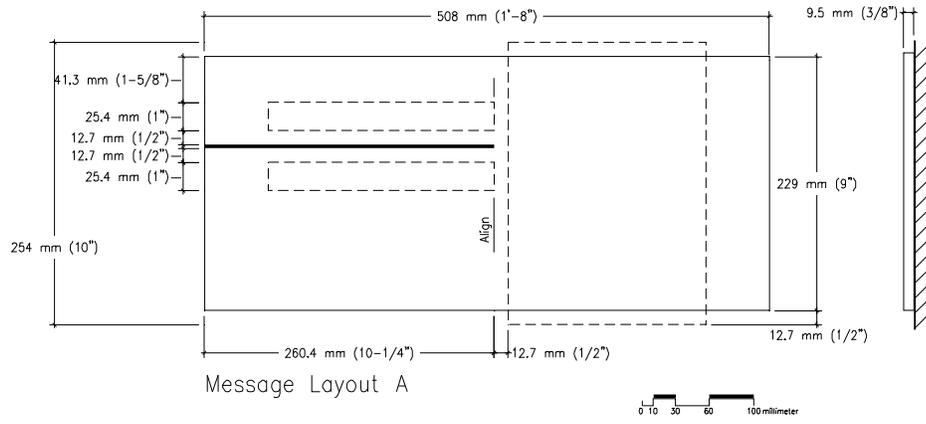

IA14.6
Floor level designation
sign.

Sign Face Size:
229mm H x 508mm W
(9" H x 20" W)

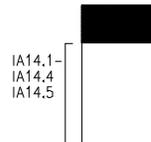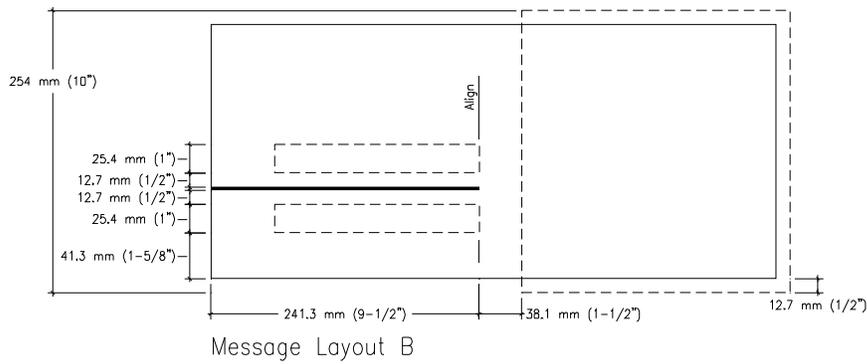

Sign Size

- IA15.1 152 mm x 1016 mm
(6" x 40")
- IA15.2 305 mm x 1016 mm
(12" x 40")
- IA15.3 457 mm x 1016 mm
(18" x 40")
- IA15.4 305 mm x 1016 mm
(12" x 40")

Description

Ceiling & Soffit Directional Sign

Sign Use & Application

Use this sign for directional information that needs to be communicated overhead.

Message Configuration

(Refer to layout drawing for lettering sizes and dimensions)

Sign Components

Acrylic Plaque, Acrylic Back

Graphic Process

Surface applied vinyl.

Colors

For background and type colors, refer to VA Standard Color Chart.

Typography

Helvetica Medium Condensed
75 mm (3") cap height required for all text.

Mounting


Ceiling: Braided stainless steel wire or rod and sign must not be attached directly to "T Grid" or lift out ceiling tile.
Soffit: Double sided foam tape, silastic adhesive or screw.

Installation

From the ceiling or on soffits above doors, alcoves and counters.

Recommendations

This sign is for use in corridors to direct patients and public through the building. Because of required letter height there is a limit to the length of messages and limited number of messages.

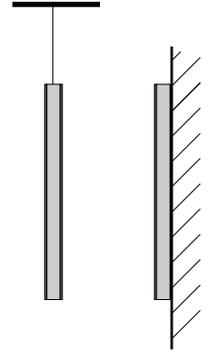


IA15.1




IA15.2




IA15.3

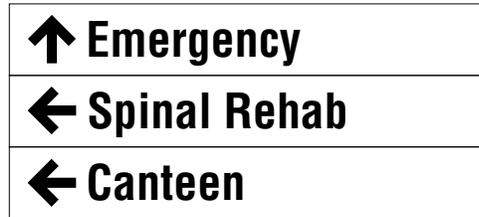


IA15.4

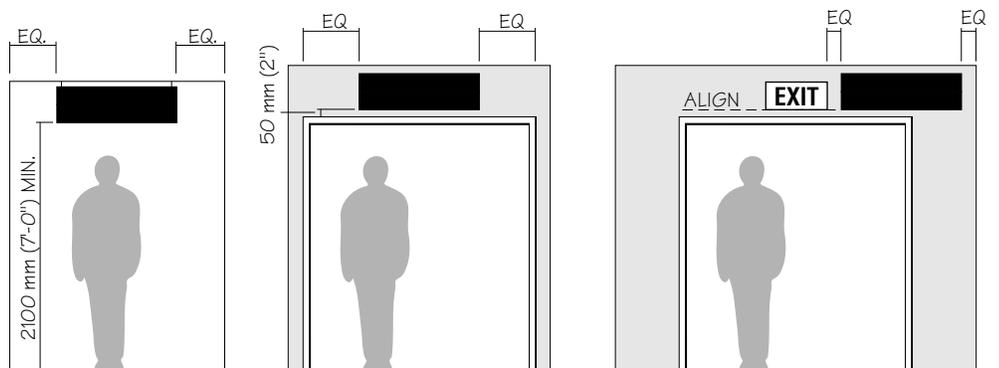


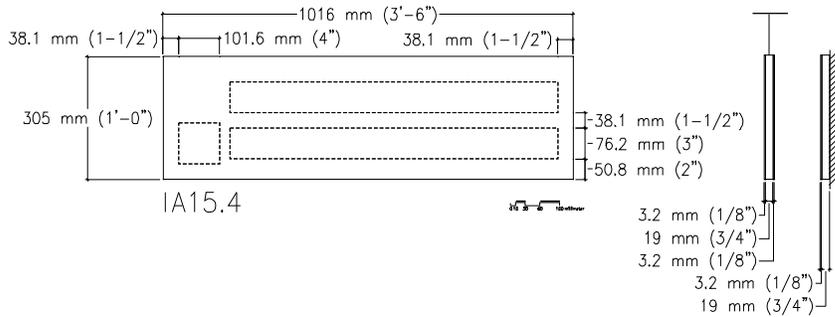


IA15.1-IA15.4
Ceiling mounted
directional sign.

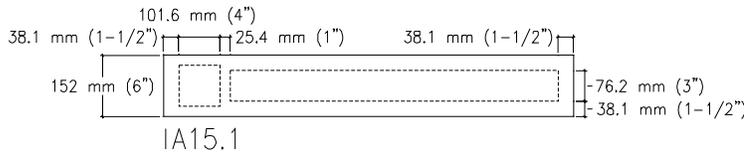

IA15.1
Sign Face Size:
152mm H x 2033mm W
(6" H x 40"W)

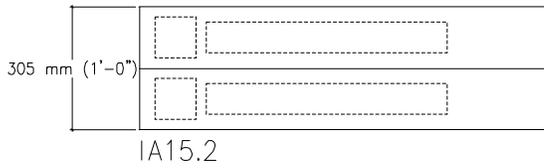


IA15.2
Sign Face Size:
305mm H x 2033mm W
(12" H x 40"W)

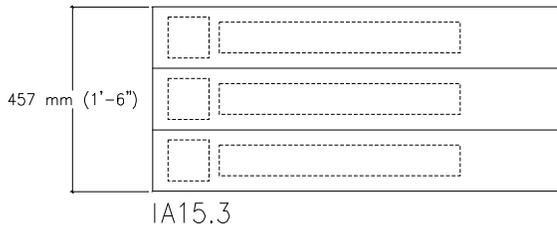

IA15.3
Sign Face Size:
457mm H x 2033mm W
(18" H x 40"W)

IA15.4
Sign Face Size:
305mm H x 2033mm W
(12" H x 40"W)

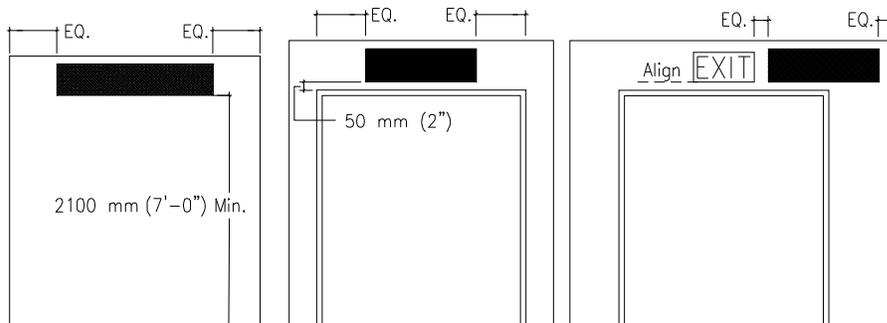

ARROW: Refer to
standards for arrow
positioning relative to
text.

Sign Size

- IA15.5 152 mm x 2033 mm
(6" x 80")
- IA15.6 305 mm x 2033 mm
(12" x 80")
- IA15.7 457 mm x 2033 mm
(18" x 80")
- IA15.8 305 mm x 2033 mm
(12" x 80")

Description

Ceiling & Soffit Directional Sign

Sign Use & Application

Use this sign for directional information that needs to be communicated overhead.

Message Configuration

(Refer to layout drawing for lettering sizes and dimensions)

Sign Components

Acrylic Plaque, Acrylic Back

Graphic Process

Surface applied vinyl.

Colors

For background and type colors, refer to VA Standard Color Chart.

Typography

Helvetica Medium Condensed
75 mm (3") cap height required for all text.

Mounting

Ceiling: Braided stainless steel wire or rod and sign must not be attached directly to "T Grid" or lift out ceiling tile.


Soffit: Double sided foam tape, silastic adhesive or screw.

Installation

From the ceiling or on soffits above doors, alcoves and counters.

Recommendations

This sign is for use in corridors to direct patients and public through the building. Because of required letter height there is a limit to the length of messages and limited number of messages.

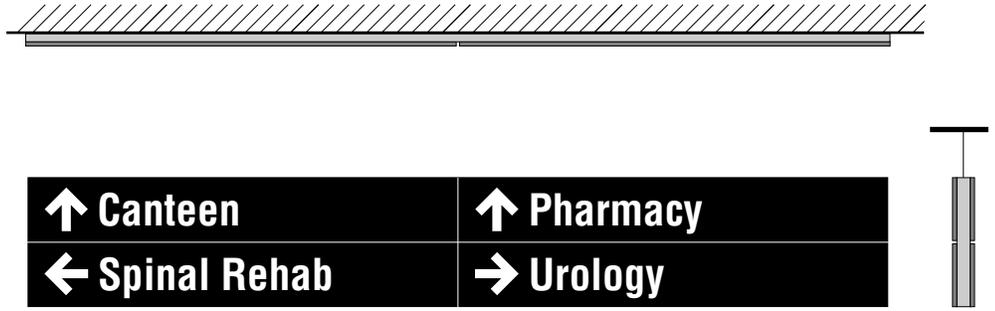


IA15.5






IA15.6




IA15.7

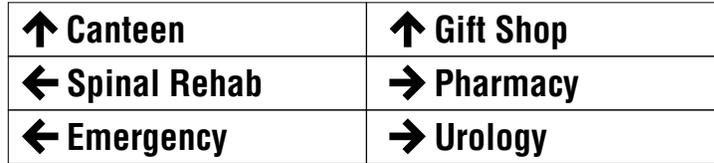


IA15.8

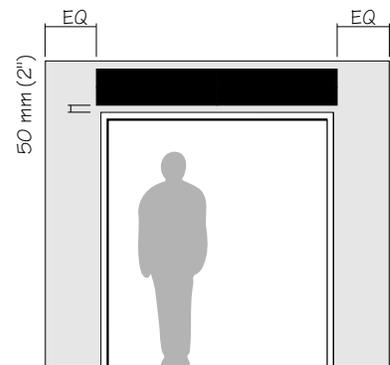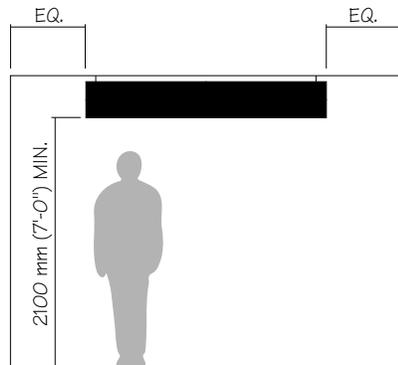


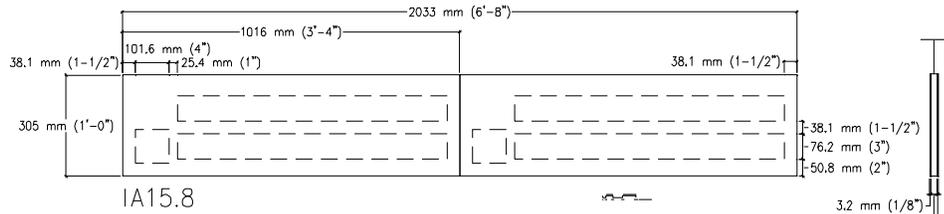

IA15.8

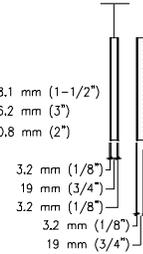


IA15.5-IA15.8
Ceiling mounted
directional sign.

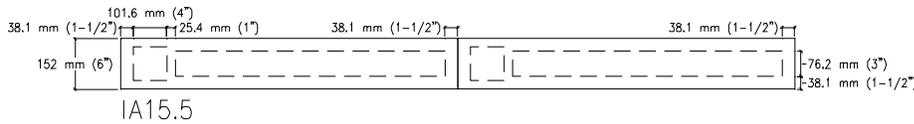


IA15.5

IA15.5
Sign Face Size:
152mm H x 2033mm W
(6" H x 80"W)



IA15.6


IA15.6
Sign Face Size:
305mm H x 2033mm W
(12" H x 80"W)

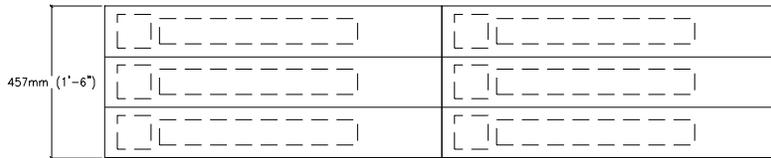

IA15.7

IA15.7
Sign Face Size:
457mm H x 2033mm W
(18" H x 80"W)

IA15.8
Sign Face Size:
305mm H x 2033mm W
(12" H x 80"W)

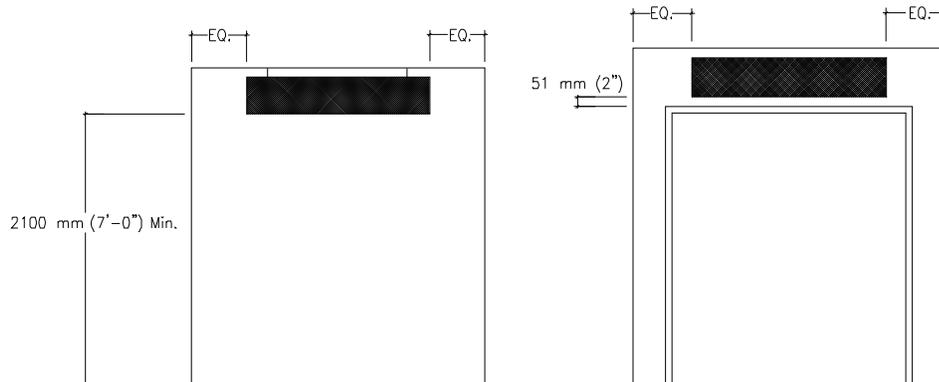

ARROW: Refer to
standards for arrow
positioning relative to
text.

Sign Size

- IA16.1 152 mm x 1016 mm (6" x 40")
- IA16.2 305 mm x 1016 mm (12" x 40")
- IA16.3 457 mm x 1016 mm (18" x 40")
- IA16.4 305 mm x 1016 mm (12" x 40")

Description

Ceiling & Soffit Identification Sign

Sign Use & Application

Use this sign for identifying a department overhead.

Message Configuration

(Refer to layout drawing for lettering sizes and dimensions)

Sign Components

Acrylic Plaque, Acrylic Back

Graphic Process

Surface applied vinyl.

Colors

For background and type colors, refer to VA Standard Color Chart.

Typography

Helvetica Medium Condensed
75 mm (3") cap height required for all text.

Mounting


Ceiling: Braided stainless steel wire or rod and sign must not be attached directly to "T Grid" or lift out ceiling tile.
Soffit: Double sided foam tape, silastic adhesive or screw.

Installation

From the ceiling or on soffits above doors, alcoves and counters.

Recommendations

This sign is for use throughout a building. Because of required letter height there is a limit to the length of messages and limited number of messages.

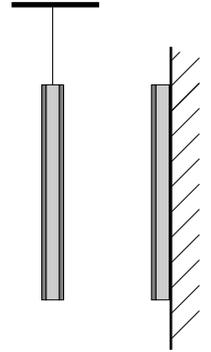

IA16.1




IA16.2




IA16.3




IA16.4

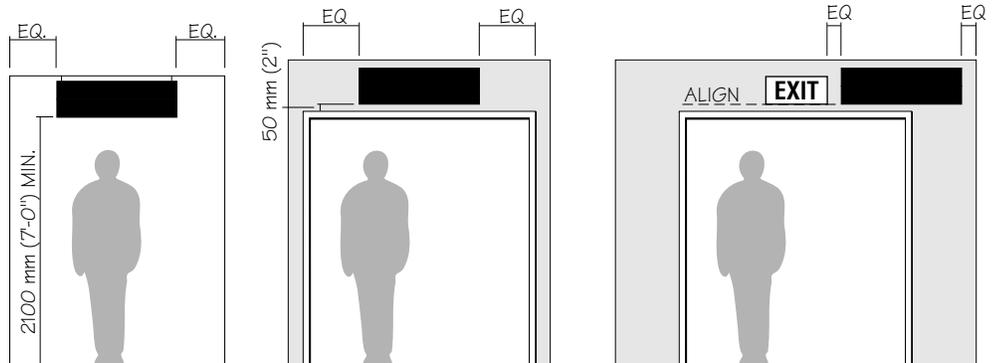


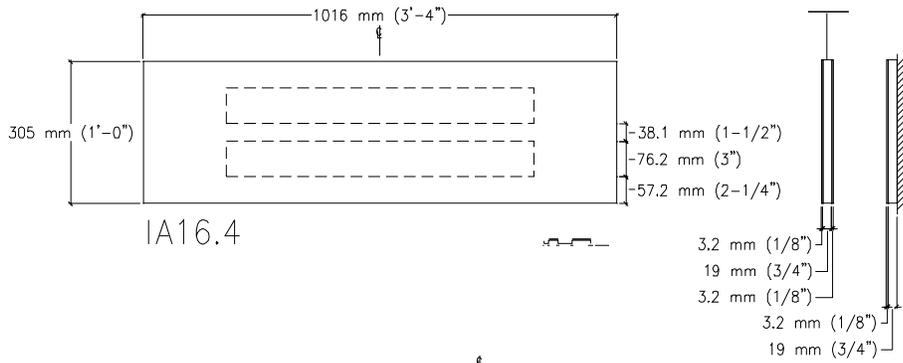


IA16.1-IA16.4
Ceiling mounted
directional sign.

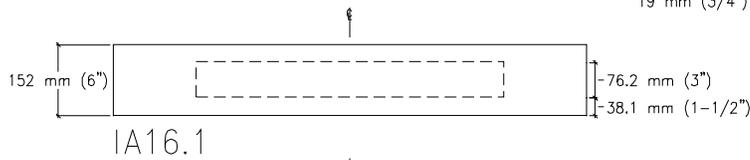

IA16.1
Sign Face Size:
152mm H x 1016mm W
(6" H x 40"W)

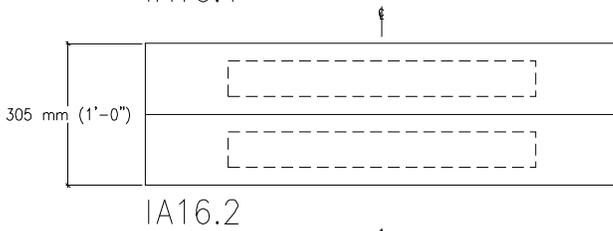


IA16.2
Sign Face Size:
305mm H x 1016mm W
(12" H x 40"W)

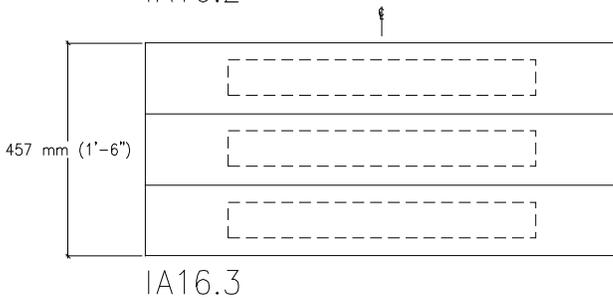

IA16.3
Sign Face Size:
457mm H x 1016mm W
(18" H x 40"W)

IA16.4
Sign Face Size:
305mm H x 1016mm W
(12" H x 40"W)

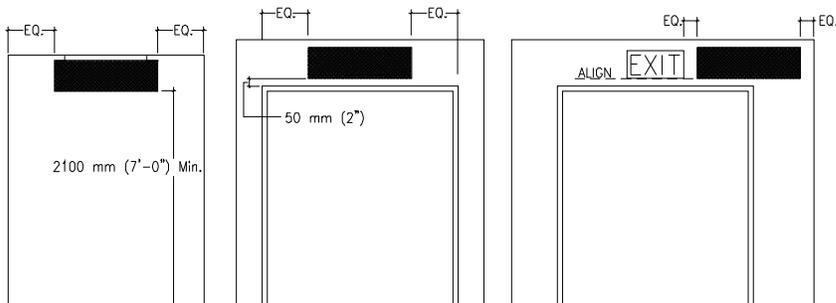

Sign Size

- IA16.5 152 mm x 2033 mm
(6" x 80")
- IA16.6 305 mm x 2033 mm
(12" x 80")
- IA16.7 457 mm x 2033 mm
(18" x 80")
- IA16.8 305 mm x 2033 mm
(12" x 80")

Description

Ceiling & Soffit Identification Sign

Sign Use & Application

Use this sign for identifying a department overhead.

Message Configuration

(Refer to layout drawing for lettering sizes and dimensions)

Sign Components

Acrylic Plaque, Acrylic Back

Graphic Process

Surface applied vinyl.

Colors

For background and type colors, refer to VA Standard Color Chart.

Typography

Helvetica Medium Condensed
75 mm (3") cap height required for all text.

Mounting


Ceiling: Braided stainless steel wire or rod and sign must not be attached directly to "T Grid" or lift out ceiling tile.
Soffit: Double sided foam tape, silastic adhesive or screw.

Installation

From the ceiling or on soffits above doors, alcoves and counters.

Recommendations

This sign is for use throughout a building. Because of required letter height there is a limit to the length of messages and limited number of messages.

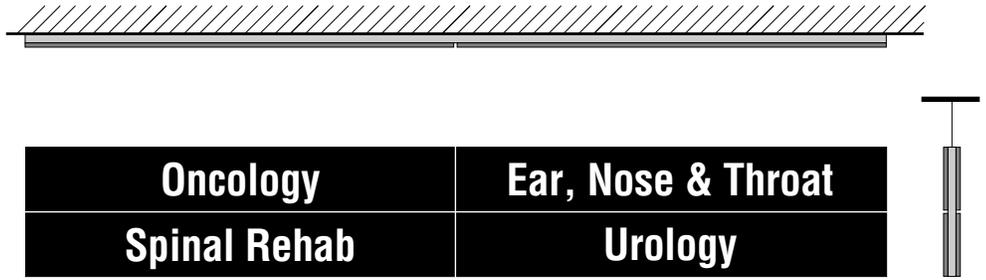

IA16.5

Oncology	Ear, Nose & Throat
----------	--------------------

IA16.6



Oncology	Ear, Nose & Throat
Spinal Rehab	Urology


IA16.7

Oncology	Ear, Nose & Throat
Spinal Rehab	Pediatrics
Canteen	Urology

IA16.8


Head & Neck Surgery	Outpatient Ophthalmology
---------------------	--------------------------

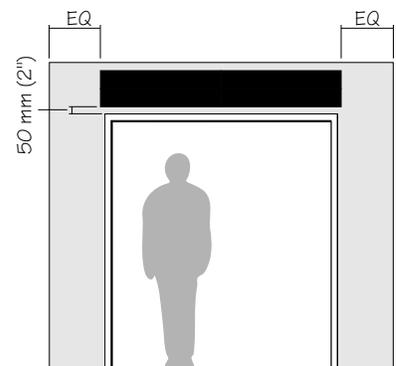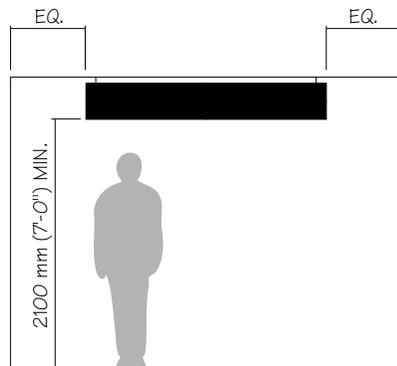

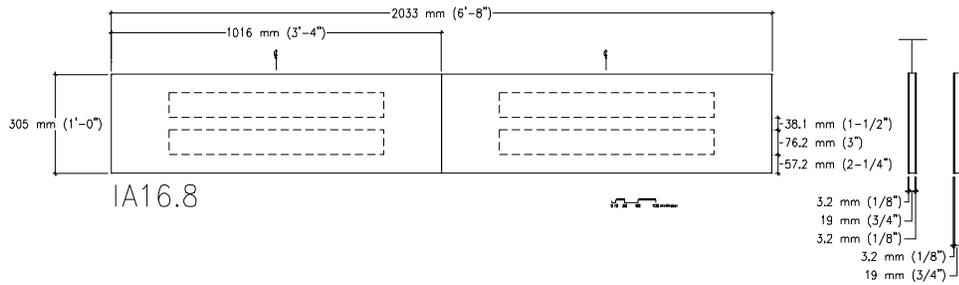


IA16.8

IA16.5-IA16.8
Ceiling mounted
directional sign.




IA16.5

IA16.5
Sign Face Size:
152mm H x 2033mm W
(6" H x 80"W)

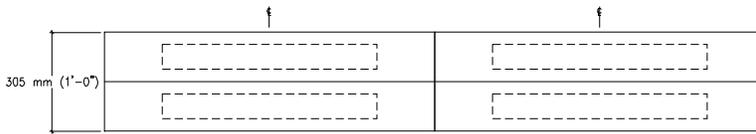

IA16.6


IA16.6
Sign Face Size:
305mm H x 2033mm W
(12" H x 80"W)

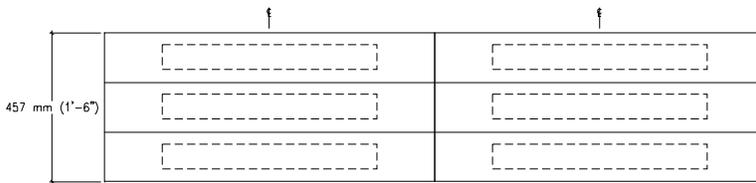

IA16.7

IA16.7
Sign Face Size:
457mm H x 2033mm W
(18" H x 80"W)

IA16.8
Sign Face Size:
305mm H x 2033mm W
(12" H x 80"W)

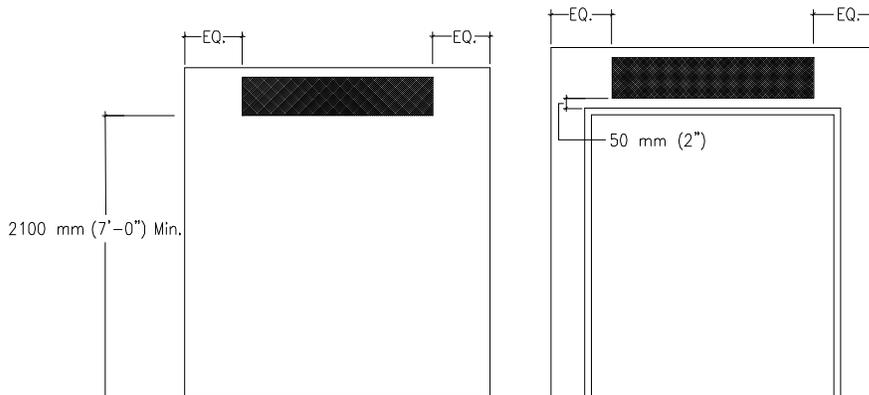

Sign Size

762 mm H x 610 mm W
(2'-6" H x 2'-0" W)

Description

Directory

Sign Use & Application

Small size main lobby directory. 48 directory strips.

Message Configuration

(Refer to layout drawing for lettering sizes and dimensions)

Header Layout A is for a basic directory header. Header Layout B is for a directory header to contain the name of the facility. Copy Strip A is for use with the main listings. Copy Strip B is for a secondary listing under a main listing or when the name is too long to fit on Strip A.

Sign Components

Directory Case, Door, Acrylic Directory Strips

Graphic Process

Surface applied vinyl.

Colors

For background and type colors, refer to VA Standard Color Chart. Case: P1, Dark Bronze Anodize

Typography

Helvetica Medium

Mounting

Screw.


Installation

On wall.

Recommendations

This directory is for use in the main lobby of small buildings which would typically have no more than 30 to 40 listings. All listings in a directory should be done in alphabetical order. List in the directory only services or departments which have contact with patients and public. Distribute any blank directory strips throughout the directory to provide spacing between groups of listings.

Directory	
Title	Title
Subtitle 1A74	Subtitle 2A42
Subtitle 1A76	Sub-Subtitle
Subtitle 1A77	Sub-Subtitle
Subtitle 1A78	Sub-Subtitle
Sub-Subtitle	Subtitle 2A44
Sub-Subtitle	Subtitle 2A45
	Subtitle 2A46
Title	Subtitle 2A48
Subtitle 1B48	Subtitle 2A52
Subtitle 1B49	
Subtitle 1B52	Title
	Subtitle 2B32
Title	Subtitle 2B34
Subtitle 1C32	
Subtitle 1C33	Title
Subtitle 1C36	Subtitle 3A54
Subtitle 1C38	Sub-Subtitle
	Sub-Subtitle
	Sub-Subtitle
	Subtitle 3A55
	Subtitle 3A56



Header (Layout A)



Header (Layout B)



Copy Strip A


Title	1A74
-------	------


Copy Strip B

Subtitle	1B48
----------	------

Copy Strip C






Sub-Subtitle	1C49
--------------	------

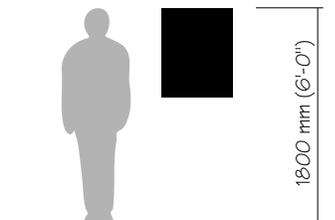

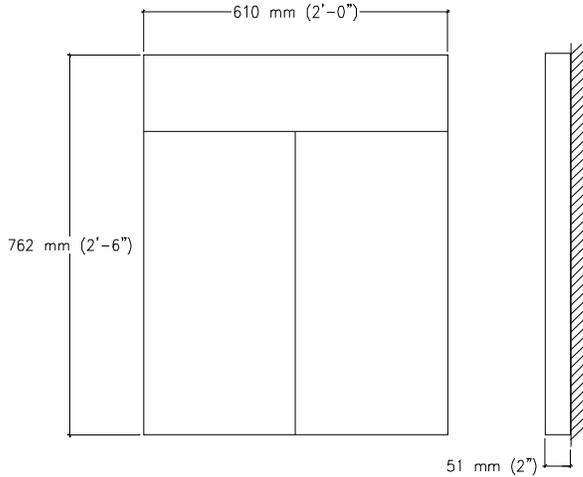

IA17.1
Directory

Sign Face Size:
762mmH x 610mmW
(2'6"H x 2'0"W)

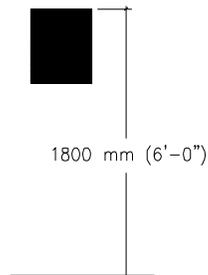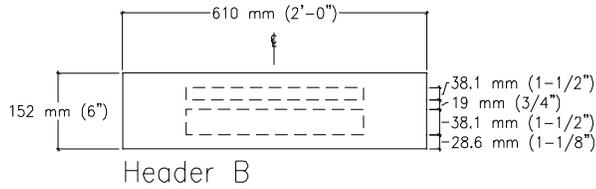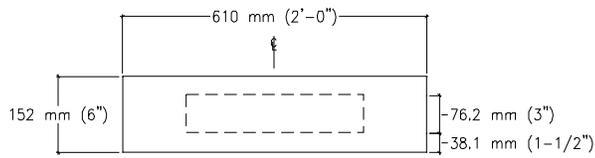

Sign Size

915 mm H x 915 mm W
(3'-0" H x 3'-0" W)

Description

Directory

Sign Use & Application

Main lobby directory. 90 directory strips.

Message Configuration

(Refer to layout drawing for lettering sizes and dimensions)

Header Layout A is for a basic directory header. Header Layout B is for a directory header to contain the name of the facility. Copy Strip A is for use with the main listings. Copy Strip B is for a secondary listing under a main listing or when the name is too long to fit on Strip A.

Sign Components

Directory Case, Door, Acrylic Directory Strips

Graphic Process

Surface applied vinyl.

Colors

For background and type colors, refer to VA Standard Color Chart. Case: P1, Dark Bronze Anodize

Typography

Helvetica Medium

Mounting

Screw.


Installation

On wall.

Recommendations

This directory is for use in the main lobby of small buildings which would typically have no more than 60 to 80 listings. All listings in a directory should be done in alphabetical order. List in the directory only services or departments which have contact with patients and public. Distribute any blank directory strips throughout the directory to provide spacing between groups of listings.

Directory					
Title		Title		Title	
Subtitle	1A74	Subtitle	2B37	Subtitle	2B37
Subtitle	1A75	Sub-Subtitle		Sub-Subtitle	
Subtitle	1A77	Sub-Subtitle		Sub-Subtitle	
Subtitle	1A78	Sub-Subtitle		Sub-Subtitle	
Sub-Subtitle		Subtitle	2B40	Subtitle	2B40
Sub-Subtitle		Subtitle	2B41	Subtitle	2B41
		Subtitle	2B42		
Title		Subtitle	2B44	Title	
Subtitle	1B48	Subtitle	2B45	Subtitle	2C50
Subtitle	1B49			Subtitle	2C55
Subtitle	1B51	Title			
		Subtitle	2C50	Title	
		Subtitle	2C55	Subtitle	2C60
Title		Subtitle		Sub-Subtitle	
Subtitle	1C34	Title		Sub-Subtitle	
Subtitle	1C37	Title		Sub-Subtitle	
Subtitle	1C38	Subtitle	2C60	Sub-Subtitle	
Subtitle	1C42	Sub-Subtitle		Subtitle	2C61
		Sub-Subtitle		Subtitle	2C62
		Sub-Subtitle			
		Subtitle	2C61		
		Subtitle	2C62		



Header (Layout A)



Header (Layout B)




Copy Strip A




Copy Strip B








Copy Strip C

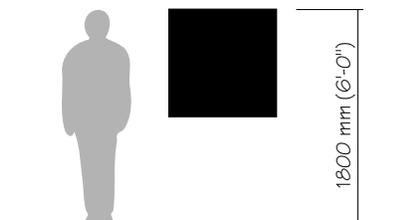

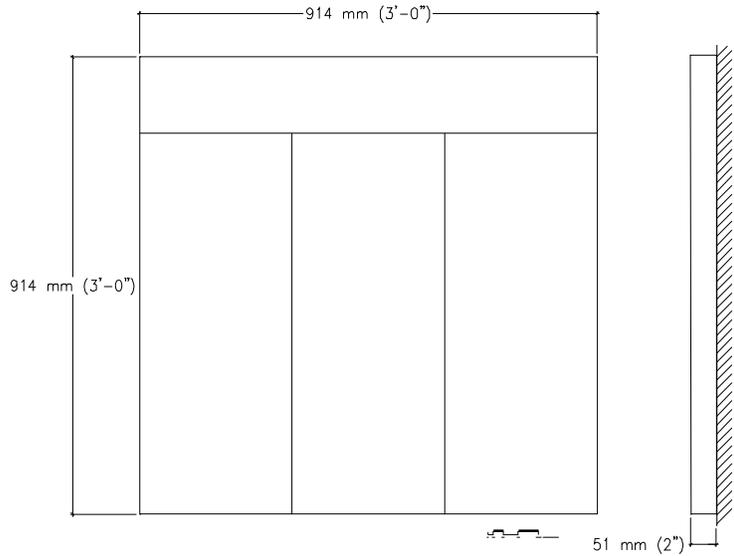

IA17.2
Directory

Sign Face Size:
762mmH x 914mmW
(2'-6"H x 3'-0"W)

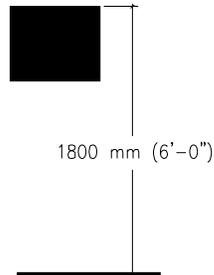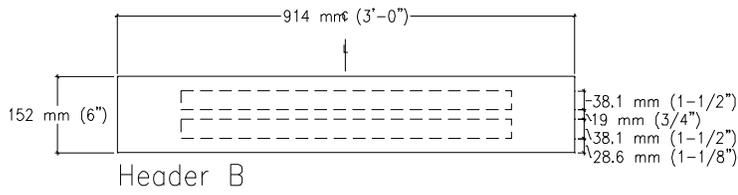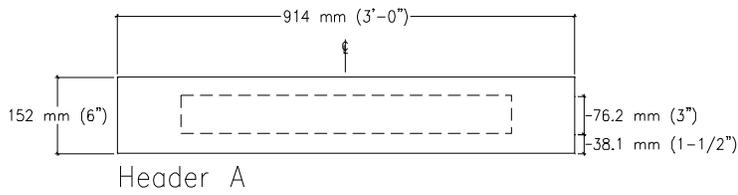

Sign Size

762 mm H x 1220 mm W
(2'-6" H x 4'-0" W)

Description

Directory

Sign Use & Application

Small size main lobby directory with a map of the building. 48 directory strips.

Message Configuration

(Refer to layout drawing for lettering sizes and dimensions)

Header Layout A is for a basic directory header. Header Layout B is for a directory header to contain the name of the facility. Copy Strip A is for use with the main listings. Copy Strip B is for a secondary listing under a main listing or when the name is too long to fit on Strip A.

Sign Components

Directory Case, Door, Acrylic
Directory Strips

Graphic Process

Surface applied vinyl.

Colors

For background and type colors, refer to VA Standard Color Chart. Case: P1, Dark Bronze Anodize

Typography

Helvetica Medium

Mounting

Screw.


Installation

On wall.

Recommendations

This directory is for use in the main lobby of small buildings which would typically have no more than 30 to 40 listings. All listings in a directory should be done in alphabetical order. List in the directory only services or departments which have contact with patients and public. Distribute any blank directory strips throughout the directory to provide spacing between groups of listings.

Maps should be simple and show the corridor system, major departments and locations of elevators. If a building has multiple floors, then all floor should be shown. Orientate floor plans to represent the building in the same direction as the map is being viewed.

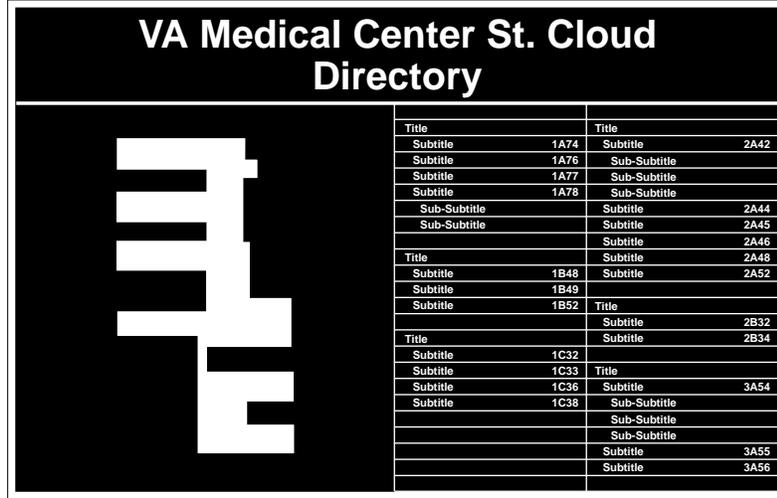


Header (Layout A)



Header (Layout B)



Map

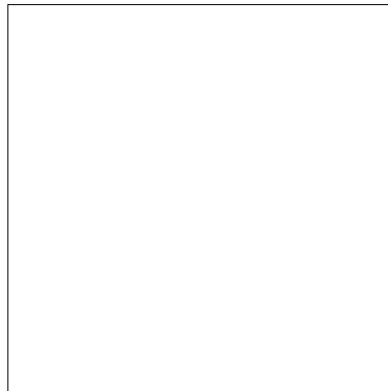


Copy Strip A




Copy Strip B



Copy Strip C









1800 mm (6'-0")

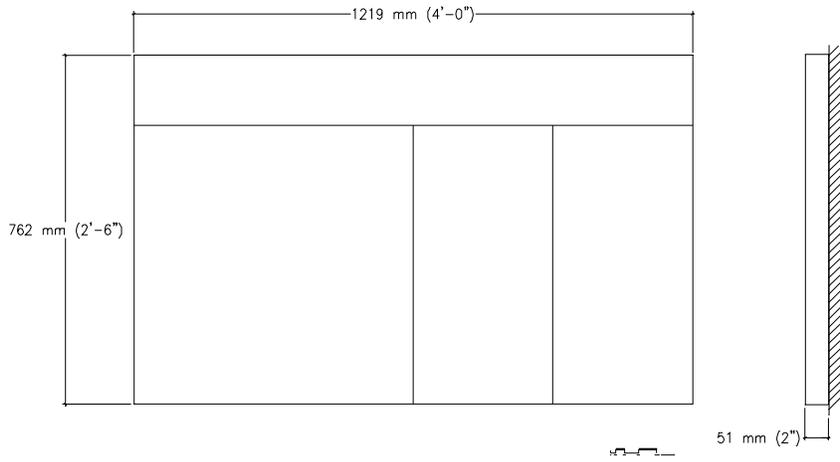

IA17.3
Directory

Sign Face Size:
762mmH x 1219mmW
(2'-6"H x 4'-0"W)

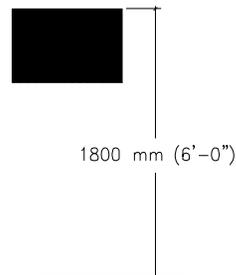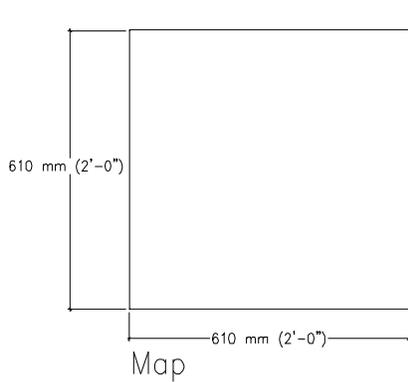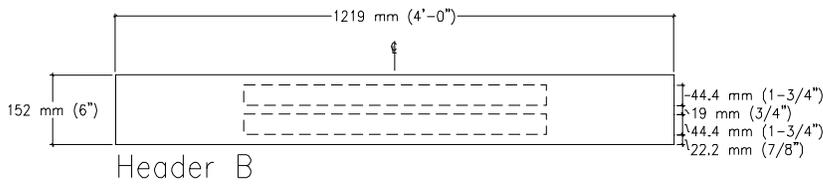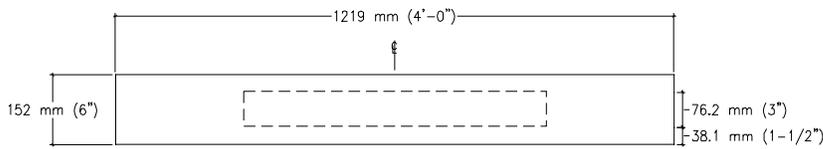

Sign Size

915 mm H x 1525 mm W
(3'-0" H x 5'-0" W)

Description

Directory

Sign Use & Application

Main lobby directory with a map of the building. 90 directory strips.

Message Configuration

(Refer to layout drawing for lettering sizes and dimensions)

Header Layout A is for a basic directory header. Header Layout B is for a directory header to contain the name of the facility. Copy Strip A is for use with the main listings. Copy Strip B is for a secondary listing under a main listing or when the name is too long to fit on Strip A.

Sign Components

Directory Case, Door, Acrylic
Directory Strips

Graphic Process

Surface applied vinyl.

Colors

For background and type colors, refer to VA Standard Color Chart. Case: P1, Dark Bronze Anodize

Typography

Helvetica Medium

Mounting

Screw.


Installation

On wall.

Recommendations

This directory is for use in the main lobby of small buildings which would typically have no more than 60 to 80 listings. All listings in a directory should be done in alphabetical order. List in the directory only services or departments which have contact with patients and public. Distribute any blank directory strips throughout the directory to provide spacing between groups of listings.

Maps should be simple and show the corridor system, major departments and locations of elevators. If a building has multiple floors, then all floor should be shown. Orientate floor plans to represent the building in the same direction as the map is being viewed.

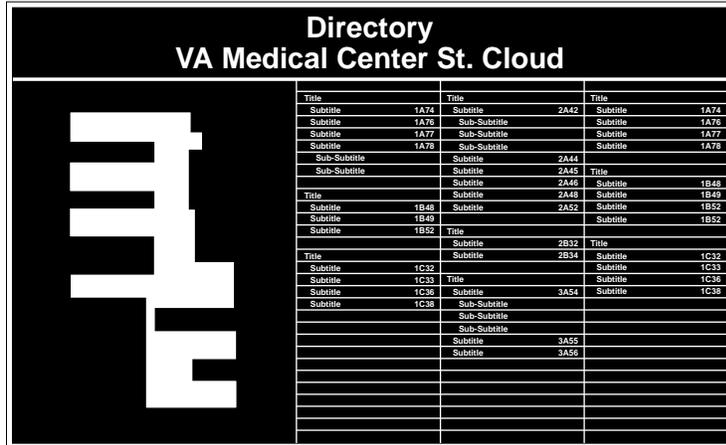


Header (Layout A)



Header (Layout B)



Map





Copy Strip A





Copy Strip B




Copy Strip C

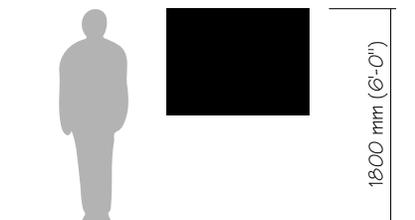



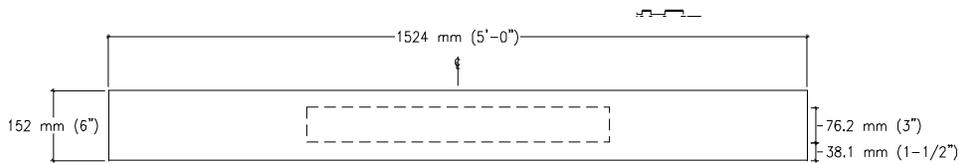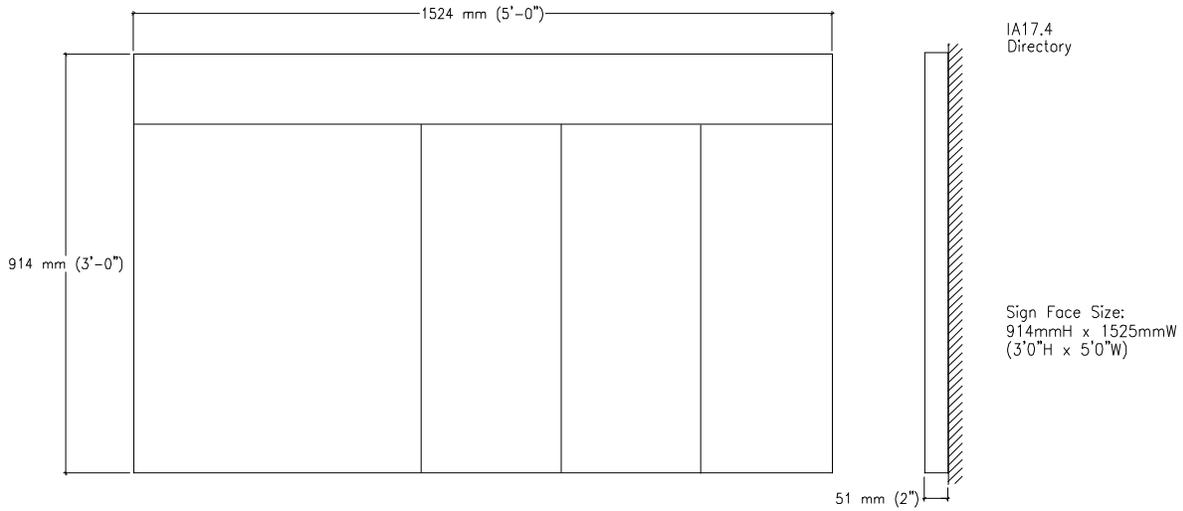

Header A

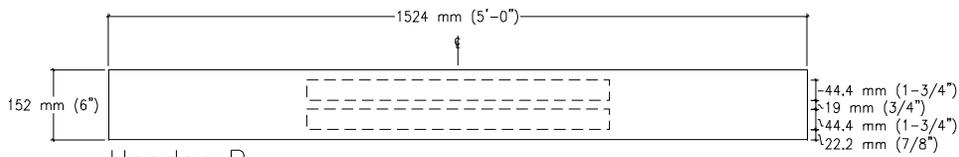

Header B

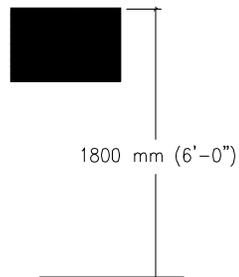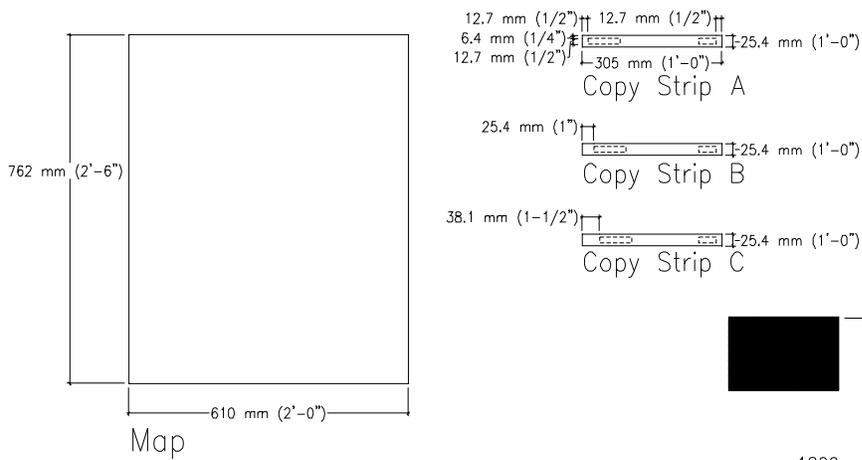

Sign Size

762 mm H x 305 mm W
(2-6" H x 12" W)

Description

Floor Directory

Sign Use & Application

Small size elevator lobby directory.
24 directory strips.

Message Configuration

(Refer to layout drawing for lettering sizes and dimensions)

Header Layout A is for a single digit floor. Header Layout B is for a double digit floor. Copy Strip A is for use with the main listings. Copy Strip B is for a secondary listing under a main listing or when the name is too long to fit on Strip A.

Sign Components

Directory Case, Door, Acrylic
Directory Strips

Graphic Process

Surface applied vinyl.

Colors

For background and type colors, refer to VA Standard Color Chart.
Case: P1, Dark Bronze Anodize

Typography

Helvetica Medium

Mounting



Screw.

Installation

On wall adjacent to elevator.

Recommendations

This directory is for use in the elevator lobbies of small buildings which would typically have no more than 20 listings. All listings in a directory should be done in alphabetical order. List in the directory only services or departments which have contact with patients and public. Distribute any blank directory strips throughout the directory to provide spacing between groups of listings.

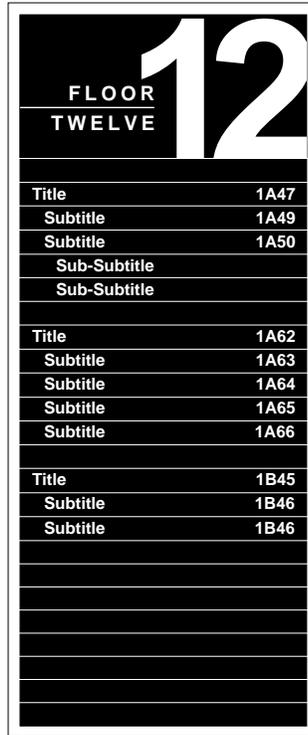

Header (Layout A)



Header (Layout B)




Directory Strip A




Directory Strip C







Directory Strip B

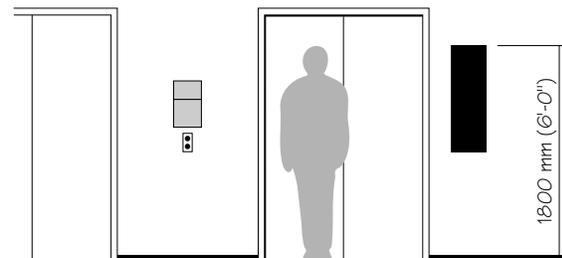

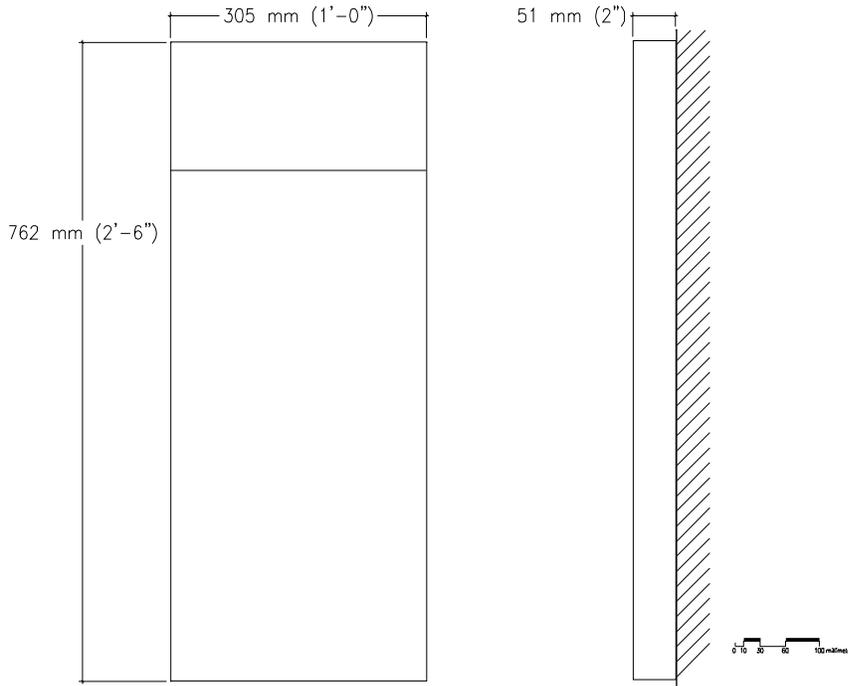

IA17.5
Small floor directory.

Sign Face Size:
762mm H x 305mm W
(30" H x 12" W)

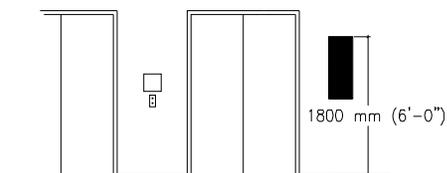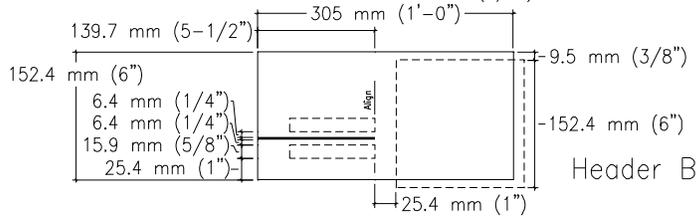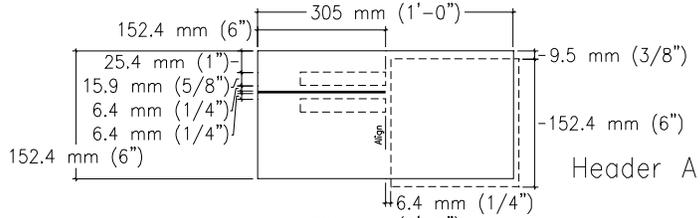

Sign Size

762 mm H x 610 mm W
(2'-6" H x 2'-0" W)

Description

Directory

Sign Use & Application

Elevator lobby directory. 48 directory strips.

Message Configuration

(Refer to layout drawing for lettering sizes and dimensions)

Header Layout A is for a single digit floor. Header Layout B is for a double digit floor. Copy Strip A is for use with the main listings. Copy Strip B is for a secondary listing under a main listing or when the name is too long to fit on Strip A.

Sign Components

Directory Case, Door, Acrylic Directory Strips

Graphic Process

Surface applied vinyl.

Colors

For background and type colors, refer to VA Standard Color Chart. Case: P1, Dark Bronze Anodize

Typography

Helvetica Medium

Mounting

Screw.


Installation

On wall adjacent to elevator.

Recommendations

This directory is for use in the elevator lobbies of small buildings which would typically have no more than 40 listings. All listings in a directory should be done in alphabetical order. List in the directory only services or departments which have contact with patients and public. Distribute any blank directory strips throughout the directory to provide spacing between groups of listings.


FLOOR		12	
TWELVE			
Title	1A47	Title	1A47
Subtitle	1A49	Subtitle	1A49
Subtitle	1A50	Subtitle	1A50
Sub-Subtitle		Sub-Subtitle	
Sub-Subtitle		Sub-Subtitle	
Title	1A62		
Subtitle	1A63	Title	2A62
Subtitle	1A64	Subtitle	2A63
Subtitle	1A65	Subtitle	2A64
Subtitle	1A66	Subtitle	2A65
Subtitle	1A63	Subtitle	2A66
Subtitle	1A64		
Subtitle	1A65	Title	2B45
		Subtitle	2B46
Title	1A62	Subtitle	2B46
Subtitle	1A63		
Subtitle	1A64		
Subtitle	1A65		
Subtitle	1A66		



Header (Layout A)



Header (Layout B)

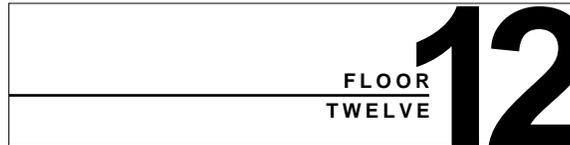

Directory Strip A


Title	1A74
-------	------


Directory Strip C

Sub-Subtitle	1C49
--------------	------

Directory Strip B

Subtitle	1B48
----------	------

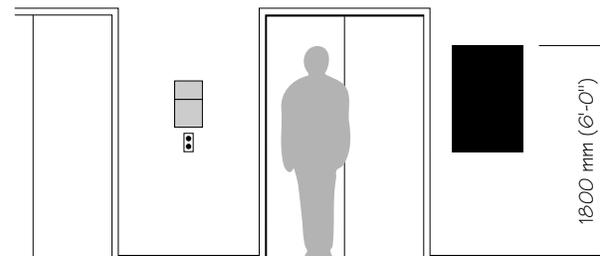

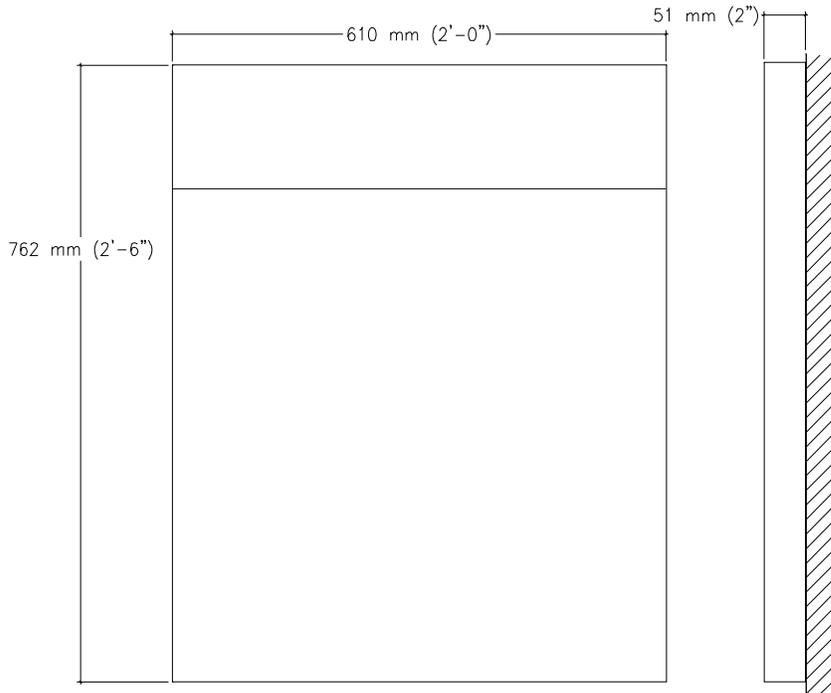

IA17.6
Floor directory.

Sign Face Size:
762mm H x 610mm W
(30" H x 24" W)

